



Shenzhen Xtooltech Co., Ltd

Buick Function List V12.60

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

* This feature is new.

√ This feature is supported.

This feature is not supported.

※ This feature is partially supported.

Year	Make	Model Series	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
2022	Buick	Enclave	Amplifier	√	√	√	√		
2022	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Buick	Enclave	HVAC Controls	√	√	√	√		
2022	Buick	Enclave	Radio Controls	√	√	√	√		0241
2022	Buick	Enclave	Radio	√	√	√	√	√	0226 0267 0269
2022	Buick	Enclave	Headlamp Control Module	√	√	√	√	√	0195
2022	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2022	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2022	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2022	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2022	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2022	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006
2022	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2022	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Buick	Enclave	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057

2022	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2022	Buick	Enclave	Power Steering Control Module	√	√	√	√	√	0089 0084
2022	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2022	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2022	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0755 0259 0048 0011
2022	Buick	Encore	HVAC Controls	√	√	√	√	√	
2022	Buick	Encore	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2022	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2022	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2022	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Buick	Encore	Serial Data Gateway Module	√	√	√			
2022	Buick	Encore	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2022	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2022	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0196 0084 0205 075A
2022	Buick	Encore	Transmission Control Module	√	√	√	√	√	0016 075C 0017 0036
2022	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003 075B
2022	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0209 0132 0115 0086 0212 0214 0217 0006 0144 0139 0757 0085 075D 075E 075F 0760 0756 0761 0213 0758 0259 0762 0764
2022	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2022	Buick	Encore	Power Steering Control Module	√	√	√	√	√	0089 0084 0207
2022	Buick	Encore	Amplifier	√	√	√	√		
2022	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2022	Buick	Encore	Side Obstacle Detection Control Module - Right	√	√	√		√	

2022	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Buick	Encore	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2022	Buick	Envision	Audio Amplifier	√	√	√	√		
2022	Buick	Envision	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Buick	Envision	Radio	√	√	√	√	√	0769
2022	Buick	Envision	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Buick	Envision	Headlamp Control Module	√	√	√	√		0195
2022	Buick	Envision	Rear Gate Module	√	√	√	√		0753
2022	Buick	Envision	Telematics Control Module	√	√	√	√		0270
2022	Buick	Envision	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Buick	Envision	Radio Controls	√	√	√	√		
2022	Buick	Envision	Transmission Control Module	√	√	√	√	√	0019 076A
2022	Buick	Envision	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2022	Buick	Envision	Power Steering Control Module	√	√	√	√		0766
2022	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144
2022	Buick	Envision	Video Processing Module	√	√	√			
2022	Buick	Envision	Wireless Accessory Charging Module	√	√	√	√		
2022	Buick	Envision	Gear Shift Control Module	√					
2022	Buick	Envision	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	
2022	Buick	Envision	Lighting Control Module	√	√	√	√	√	
2022	Buick	Envision	Serial Data Gateway Module	√	√	√			
2022	Buick	Envision	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Buick	Envision	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Buick	Envision	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Buick	Envision	Image Processing Module	√	√	√	√		
2022	Buick	Envision	Frontview Camera - Windshield	√	√	√	√		0196
2022	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Buick	Envision	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Buick	Envision	Rear Drive Control Module	√	√	√	√		
2021	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	

2021	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006
2021	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2021	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2021	Buick	Enclave	Rear Drive Control Module	√	√	√	√	√	0003
2021	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2021	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Buick	Enclave	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2021	Buick	Enclave	Active Safety Control Module	√	√	√	√	√	
2021	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√	√	0260
2021	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√	√	0196
2021	Buick	Enclave	Radio	√	√	√	√	√	0226 0267 0269
2021	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2021	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Buick	Enclave	Amplifier	√	√	√	√	√	
2021	Buick	Enclave	Radio Controls	√	√	√	√	√	0241
2021	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2021	Buick	Enclave	Power Steering Control Module	√	√	√	√	√	0089 0084
2021	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2021	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2021	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2021	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0755 0259 0048 0011
2021	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2021	Buick	Encore	Steering Column Lock Control Module	√	√	√	√	√	
2021	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Buick	Encore	Serial Data Gateway Module	√	√	√			
2021	Buick	Encore	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0196 0084 0205 075A
2021	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057

2021	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2021	Buick	Encore	Power Steering Control Module	√	√	√	√		0089 0084 0207
2021	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Buick	Encore	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Buick	Encore	Amplifier	√	√	√	√		
2021	Buick	Encore	Radio Controls	√	√	√	√		0241
2021	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003 075B
2021	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0209 0132 0115 0086 0212 0214 0217 0006 0144 0139 0757 0085 075D 075E 075F 0760 0756 0761 0213 0762 0258 0763 0764 0765 0156 0090 0067
2021	Buick	Encore	HVAC Controls	√	√	√	√		
2021	Buick	Encore	Transmission Control Module	√	√	√	√	√	0016 075C 0017 0036
2021	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2021	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2021	Buick	Encore	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Buick	Encore	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2021	Buick	Encore	Video Processing Control Module	√	√	√	√	√	
2021	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Buick	Envision	Frontview Camera - Windshield	√	√	√	√		0196
2021	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Buick	Envision	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Buick	Envision	Headlamp Control Module	√	√	√	√		0195
2021	Buick	Envision	Rear Gate Module	√	√	√	√		0753
2021	Buick	Envision	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	
2021	Buick	Envision	Serial Data Gateway Module	√	√	√			
2021	Buick	Envision	Lighting Control Module	√	√	√	√	√	
2021	Buick	Envision	Gear Shift Control Module	√					
2021	Buick	Envision	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Buick	Envision	Side Obstacle Detection Control Module - Right	√	√	√			

2021	Buick	Envision	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Buick	Envision	Radio	√	√	√	√	√	0769
2021	Buick	Envision	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Buick	Envision	Video Processing Module	√	√	√			
2021	Buick	Envision	Wireless Accessory Charging Module	√	√	√	√		
2021	Buick	Envision	Transmission Control Module	√	√	√	√	√	0019 076A
2021	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144
2021	Buick	Envision	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Buick	Envision	Rear Drive Control Module	√	√	√	√		
2021	Buick	Envision	Image Processing Module	√	√	√	√		
2021	Buick	Envision	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2021	Buick	Envision	Power Steering Control Module	√	√	√	√		0766
2021	Buick	Envision	Telematics Control Module	√	√	√	√		0270
2021	Buick	Envision	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Buick	Envision	Audio Amplifier	√	√	√	√		
2020	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2020	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2020	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233
2020	Buick	Enclave	Side Object Sensor Module - Left	√	√	√		√	
2020	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2020	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2020	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		0260

2020	Buick	Enclave	Short Range Radar Sensor - Left Front	√	√	√			
2020	Buick	Enclave	Short Range Radar Sensor - Right Front	√	√	√			
2020	Buick	Enclave	Short Range Radar Sensor - Rear Middle	√	√	√			
2020	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Buick	Enclave	Power Steering Control Module	√	√	√	√	√	0089 0084
2020	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2020	Buick	Enclave	Amplifier	√	√	√	√	√	
2020	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2020	Buick	Enclave	Radio	√	√	√	√	√	0226 0267 0269
2020	Buick	Enclave	Radio Controls	√	√	√	√	√	0241
2020	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2020	Buick	Enclave	Rear Drive Control Module	√	√	√	√	√	0003
2020	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2020	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2020	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2020	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0115 0212 0214 0757 0085 075D 075E 075F 0760 0756 0761 0762 0763
2020	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036 0016 075C
2020	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Encore	HVAC Controls	√	√	√	√	√	
2020	Buick	Encore	Radio Controls	√	√	√	√	√	0241
2020	Buick	Encore	Radio	√	√	√	√	√	0226 0150 0269 0267
2020	Buick	Encore	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2020	Buick	Encore	Power Steering Control Module	√	√	√	√	√	0207 0089 0084
2020	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158
2020	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003 075B
2020	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Encore	Head-Up Display Module	√	√	√	√	√	

2020	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Encore	Side Object Sensor Module - Left	√	√	√		√	
2020	Buick	Encore	Side Object Sensor Module - Right	√	√	√		√	
2020	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2020	Buick	Encore	Video Processing Control Module	√	√	√	√	√	
2020	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Encore	Amplifier	√	√	√	√		
2020	Buick	Encore	Serial Data Gateway Module	√	√	√			
2020	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Buick	Encore	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2020	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2020	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2020	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Buick	Envision	Serial Data Gateway Module	√	√	√			
2020	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2020	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2020	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2020	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2020	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2020	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2020	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Envision	Amplifier	√	√	√	√		
2020	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Buick	Envision	HVAC Controls	√	√	√	√	√	
2020	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2020	Buick	Envision	Radio Controls	√	√	√	√		0241
2020	Buick	Envision	Active Safety Control Module	√	√	√	√	√	

2020	Buick	Envision	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Buick	Envision	Side Object Sensor Module - Left	√	√	√		√	
2020	Buick	Envision	Side Object Sensor Module - Right	√	√	√		√	
2020	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0000 0000 0000 0000
2020	Buick	Envision	Rear Drive Control Module	√	√	√	√	√	0003
2020	Buick	Regal	Transmission Control Module	√	√	√	√	√	0017 0020 0084
2020	Buick	Regal	Headlamp Control Module	√	√	√	√	√	0195
2020	Buick	Regal	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0000 0000 0000 0000
2020	Buick	Regal	Side Object Sensor Module - Left	√	√	√		√	
2020	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Regal	Serial Data Gateway Module	√	√	√			
2020	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2020	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2020	Buick	Regal	Active Safety Control Module	√	√	√	√		
2020	Buick	Regal	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Buick	Regal	Frontview Camera - Windshield	√	√	√	√		0196
2020	Buick	Regal	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Buick	Regal	Amplifier	√	√	√	√		

2020	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Regal	HVAC Controls	√	√	√	√	√	
2020	Buick	Regal	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Buick	Regal	Radio Controls	√	√	√	√	√	0241
2020	Buick	Regal	Rear Drive Control Module	√	√	√	√	√	0003
2020	Buick	Regal	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006
2019	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2019	Buick	Cascada	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2019	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2019	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2019	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2019	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2019	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2019	Buick	Cascada	Radio	√	√	√	√	√	
2019	Buick	Cascada	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2019	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2019	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Cascada	Headlamp High Beam Control Module	√	√	√	√	√	0247
2019	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2019	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2019	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2019	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084

2019	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2019	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Enclave	Left Side Object Detection Control Module	√	√	√	√	√	
2019	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√	√	0196
2019	Buick	Enclave	Active Safety Control Module	√	√	√	√	√	
2019	Buick	Enclave	Long Range Radar Sensor Module	√	√	√	√	√	0260
2019	Buick	Enclave	Left Front Short Range Radar Sensor Module	√	√	√	√	√	
2019	Buick	Enclave	Right Front Short Range Radar Sensor Module	√	√	√	√	√	
2019	Buick	Enclave	Rear Short Range Radar Sensor Module	√	√	√	√	√	
2019	Buick	Enclave	Amplifier	√	√	√	√	√	
2019	Buick	Enclave	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2019	Buick	Enclave	Radio Controls	√	√	√	√	√	0241
2019	Buick	Enclave	Radio	√	√	√	√	√	0226 0150
2019	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2019	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√	√	√	
2019	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√	√	√	
2019	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 0260
2019	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Encore	Steering Column Lock Control Module	√	√	√	√	√	
2019	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2019	Buick	Encore	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Buick	Encore	Power Steering Control Module	√	√	√	√	√	0207
2019	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090

2019	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	
2019	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Encore	Left Side Object Detection Control Module	√	√	√	√	√	
2019	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Encore	Serial Data Gateway Module	√	√	√	√	√	
2019	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	Encore	Amplifier	√	√	√	√	√	
2019	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	Encore	Radio	√	√	√	√	√	0226 0150
2019	Buick	Encore	Radio Controls	√	√	√	√	√	0241
2019	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2019	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√	√	0003 075B
2019	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2019	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Envision	Left Side Object Detection Control Module	√	√	√	√	√	
2019	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Envision	Right Side Object Detection Control Module	√	√	√	√	√	
2019	Buick	Envision	Serial Data Gateway Module	√	√	√	√	√	
2019	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0000 0100 0000 0000
2019	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2019	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	Envision	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2019	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√	√	0260
2019	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2019	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2019	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2019	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	Envision	Steering Column Lock Control Module	√	√	√	√		
2019	Buick	Envision	Amplifier	√	√	√	√		
2019	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2019	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	Envision	HVAC Controls	√	√	√	√	√	
2019	Buick	Envision	Radio Controls	√	√	√	√		0241
2019	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2019	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0014 0078
2019	Buick	LaCrosse	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2019	Buick	LaCrosse	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0202 0218
2019	Buick	LaCrosse	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0436 0263
2019	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0005 0006
2019	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	LaCrosse	Brake Booster Control Module	√	√	√	√		
2019	Buick	LaCrosse	Active Safety Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Frontview Camera - Windshield	√	√	√	√		0196
2019	Buick	LaCrosse	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057

2019	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	LaCrosse	Amplifier	√	√	√	√	√	
2019	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2019	Buick	LaCrosse	Radio Controls	√	√	√	√	√	0241
2019	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2019	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2019	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Serial Data Gateway Module	√	√	√	√	√	
2019	Buick	Regal	Transmission Control Module	√	√	√	√	√	0020 0084 0017
2019	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258
2019	Buick	Regal	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Regal	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2019	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Regal	Serial Data Gateway Module	√	√	√	√	√	
2019	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233
2019	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Regal	Amplifier	√	√	√	√	√	
2019	Buick	Regal	HVAC Controls	√	√	√	√	√	
2019	Buick	Regal	Radio Controls	√	√	√	√	√	0241
2019	Buick	Regal	Radio	√	√	√	√	√	0226 0267 0269 0150

2019	Buick	Regal	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	Buick	Regal	Active Safety Control Module	√	√	√	√		
2019	Buick	Regal	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Buick	Regal	Frontview Camera - Windshield	√	√	√	√		0196
2019	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2019	Buick	Regal	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Buick	Regal	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2018	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2018	Buick	Cascada	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2018	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2018	Buick	Cascada	Radio	√	√	√	√	√	
2018	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2018	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2018	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2018	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006
2018	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2018	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	

2018	Buick	Enclave	Serial Data Gateway Module	√	√	√			
2018	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2018	Buick	Enclave	Frontview Camera Module	√	√	√	√		0196
2018	Buick	Enclave	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Buick	Enclave	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Buick	Enclave	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Buick	Enclave	Rear Short Range Radar Sensor Module	√	√	√			
2018	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2018	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2018	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	Enclave	Amplifier	√	√	√	√		
2018	Buick	Enclave	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2018	Buick	Enclave	Radio Controls	√	√	√	√		0241
2018	Buick	Enclave	Radio	√	√	√	√	√	0226 0150
2018	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2018	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2018	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2018	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2018	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 0260
2018	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2018	Buick	Encore	Radio	√	√	√	√	√	0226 0150
2018	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2018	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247

2018	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	Encore	Serial Data Gateway Module	√	√	√			
2018	Buick	Encore	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2018	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	
2018	Buick	Encore	Amplifier	√	√	√	√		
2018	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2018	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206
2018	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2018	Buick	Encore	HVAC Controls	√	√	√	√	√	
2018	Buick	Encore	Radio Controls	√	√	√	√		0241
2018	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2018	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0076
2018	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Envision	Steering Column Lock Control Module	√	√	√	√		
2018	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2018	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Envision	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Envision	Right Side Object Detection Control Module	√	√	√		√	
2018	Buick	Envision	Serial Data Gateway Module	√	√	√			
2018	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2018	Buick	Envision	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Buick	Envision	Video Processing Control Module	√	√	√	√	√	

2018	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	Envision	Amplifier	√	√	√	√		
2018	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Envision	HVAC Controls	√	√	√	√	√	
2018	Buick	Envision	Radio Controls	√	√	√	√		0241
2018	Buick	Envision	Navigation Control Module	√	√	√	√	√	
2018	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2018	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2018	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2018	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Brake Booster Control Module	√	√	√	√		
2018	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0247
2018	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√		√	
2018	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	LaCrosse	Serial Data Gateway Module	√	√	√			
2018	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057

2018	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2018	Buick	LaCrosse	Amplifier	√	√	√	√	√	
2018	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2018	Buick	LaCrosse	Radio Controls	√	√	√	√	√	0241
2018	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2018	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2018	Buick	LaCrosse	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2018	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	LaCrosse	Active Safety Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Long Range Radar Sensor Module	√	√	√	√	√	0260
2018	Buick	LaCrosse	Video Processing Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0196
2018	Buick	LaCrosse	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Transmission Range Control Module	√	√	√	√	√	0014 0078 0013
2018	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0225 0128 0255 0008
2018	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Regal	HVAC Controls	√	√	√	√	√	
2018	Buick	Regal	Radio Controls	√	√	√	√	√	0241
2018	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Regal	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	Regal	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Buick	Regal	Transmission Control Module	√	√	√	√	√	0020 0084 0017
2018	Buick	Regal	Active Safety Control Module	√	√	√	√	√	
2018	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0196
2018	Buick	Regal	Long Range Radar Sensor Module	√	√	√	√	√	0260
2018	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2018	Buick	Regal	Serial Data Gateway Module	√	√	√	√	√	
2018	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247 0271

2018	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	Regal	Amplifier	√	√	√	√		
2018	Buick	Regal	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Buick	Regal	Radio	√	√	√	√	√	0226 0150 0269 0267
2018	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	0759
2018	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Regal	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2018	Buick	Regal	Steering Column Lock Control Module	√	√	√	√		
2018	Buick	Regal	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Buick	Regal	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Verano	Active Safety Control Module	√	√	√	√	√	
2018	Buick	Verano	Frontview Camera Module	√	√	√	√		0205 0196
2018	Buick	Verano	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Verano	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Cascada	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2017	Buick	Cascada	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2017	Buick	Cascada	Radio	√	√	√	√	√	
2017	Buick	Cascada	Multimedia Player Interface Module	√	√	√	√		0247
2017	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2017	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217

2017	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2017	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006
2017	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2017	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2017	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Enclave	Headlamp Control Module	√	√	√			
2017	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2017	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2017	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2017	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2017	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2017	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2017	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057
2017	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2017	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2017	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Enclave	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2017	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2017	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2017	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2017	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2017	Buick	Enclave	Personal Audio Link Control Module	√	√	√			0231
2017	Buick	Enclave	Rear Audio Control Module	√	√	√	√		
2017	Buick	Enclave	Radio	√	√	√	√	√	
2017	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2017	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2017	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2017	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036

2017	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Encore	Amplifier	√	√	√	√	√	
2017	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	Encore	Radio	√	√	√	√	√	0226 0150
2017	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Encore	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206
2017	Buick	Encore	Left Side Object Detection Control Module	√	√	√	√	√	
2017	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2017	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2017	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2017	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066
2017	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Buick	Encore	Serial Data Gateway Module	√	√	√	√	√	
2017	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Buick	Encore	Power Steering Control Module	√	√	√	√	√	0207
2017	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2017	Buick	Encore	Steering Column Lock Control Module	√	√	√	√	√	
2017	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√	√	0003 075B
2017	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0085
2017	Buick	Envision	Steering Column Lock Control Module	√	√	√	√	√	
2017	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2017	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Envision	Amplifier	√	√	√	√	√	

2017	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2017	Buick	Envision	Radio Controls	√	√	√	√	√	0241
2017	Buick	Envision	HVAC Controls	√	√	√	√	√	
2017	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Buick	Envision	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Envision	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2017	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Envision	Serial Data Gateway Module	√	√	√			
2017	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2017	Buick	Envision	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2017	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2017	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2017	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0020 0084
2017	Buick	LaCrosse	Amplifier	√	√	√	√		
2017	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2017	Buick	LaCrosse	Radio Controls	√	√	√	√	√	0241
2017	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2017	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2017	Buick	LaCrosse	Infotainment Control Touchpad	√	√	√	√	√	
2017	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	LaCrosse	Active Safety Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Frontview Camera Module	√	√	√	√		0196
2017	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	

2017	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233
2017	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0014 0078
2017	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2017	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756
2017	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	LaCrosse	Serial Data Gateway Module	√	√	√	√	√	
2017	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2017	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2017	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Long Range Radar Sensor Module	√	√	√	√	√	0260
2017	Buick	LaCrosse	Transmission Range Control Module	√	√	√	√	√	0014 0078 0013
2017	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2017	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2017	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2017	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2017	Buick	Regal	Amplifier	√	√	√	√	√	
2017	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	Regal	HVAC Controls	√	√	√	√	√	
2017	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2017	Buick	Regal	Radio Controls	√	√	√	√	√	0241

2017	Buick	Regal	Media Disc Player	√	√	√	√	√	
2017	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2017	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2017	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2017	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2017	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2017	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√		0047
2017	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Verano	Radio	√	√	√	√	√	
2017	Buick	Verano	Multimedia Player Interface Module	√	√	√	√		0247
2017	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Verano	Passenger Presence Module	√	√	√	√		0057
2017	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217
2017	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2017	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0089 0081 0080
2017	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Verano	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0213
2017	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Verano	Active Safety Control Module	√	√	√	√	√	
2017	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A

2017	Buick	Verano	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2016	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2016	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006
2016	Buick	Cascada	Multimedia Player Interface Module	√	√	√	√		0247
2016	Buick	Cascada	Radio	√	√	√	√	√	
2016	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2016	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Cascada	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2016	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2016	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2016	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Enclave	Head-Up Display Module	√	√	√	√	√	
2016	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2016	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2016	Buick	Enclave	Headlamp Control Module	√	√	√			
2016	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2016	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2016	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√		
2016	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2016	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2016	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	Enclave	Right Side Object Detection Control Module	√	√	√		√	
2016	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2016	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2016	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261

2016	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2016	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2016	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2016	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2016	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2016	Buick	Enclave	Personal Audio Link Control Module	√	√	√	√	√	0231
2016	Buick	Enclave	Radio	√	√	√	√	√	
2016	Buick	Enclave	Rear Audio Control Module	√	√	√	√	√	
2016	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2016	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066
2016	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206
2016	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Encore	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2016	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Buick	Encore	Radio	√	√	√	√	√	
2016	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Buick	Encore	Power Steering Control Module	√	√	√	√	√	0207
2016	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2016	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Encore	Steering Column Lock Control Module	√	√	√	√	√	
2016	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√	√	0003 075B
2016	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036

2016	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258
2016	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	Envision	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Envision	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Buick	Envision	Right Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2016	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2016	Buick	Envision	Steering Column Lock Control Module	√	√	√	√	√	
2016	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Buick	Envision	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√	√	√	0111
2016	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2016	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√	√	0260
2016	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206
2016	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2016	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2016	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Buick	Envision	Amplifier	√	√	√	√	√	
2016	Buick	Envision	Radio Controls	√	√	√	√	√	0241
2016	Buick	Envision	HVAC Controls	√	√	√	√	√	
2016	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2016	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2016	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Battery Energy Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2016	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	LaCrosse	Head-Up Display Module	√	√	√	√	√	

2016	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0156 0200 0156
2016	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2016	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0263 0156
2016	Buick	LaCrosse	Amplifier	√	√	√	√	√	
2016	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2016	Buick	LaCrosse	Radio Controls	√	√	√	√	√	0241
2016	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2016	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2016	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	LaCrosse	Distance Sensing Cruise Control Module	√	√	√	√	√	0047
2016	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2016	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Buick	LaCrosse	Rear Audio Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Infotainment Control Touchpad	√	√	√	√	√	
2016	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2016	Buick	Regal	Battery Energy Control Module	√	√	√	√	√	
2016	Buick	Regal	Drive Motor Control Module	√	√	√	√	√	
2016	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2016	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	

2016	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206
2016	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	Regal	Amplifier	√	√	√	√	√	
2016	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Buick	Regal	HVAC Controls	√	√	√	√	√	
2016	Buick	Regal	Radio Controls	√	√	√	√	√	0241
2016	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2016	Buick	Regal	Infotainment Control Touchpad	√	√	√	√	√	
2016	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	Regal	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2016	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2016	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√	√	0047
2016	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2016	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2016	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Verano	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Buick	Verano	Right Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2016	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	Verano	Passenger Presence Module	√	√	√	√	√	0057

2016	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Buick	Verano	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258
2016	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Verano	Radio	√	√	√	√	√	
2016	Buick	Verano	Multimedia Player Interface Module	√	√	√	√	√	0247
2016	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2015	Buick	Enclave	Headlamp Control Module	√	√	√			
2015	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2015	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2015	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2015	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2015	Buick	Enclave	Left Side Object Detection Control Module	√	√	√			
2015	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Enclave	Right Side Object Detection Control Module	√	√	√			
2015	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2015	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2015	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2015	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057
2015	Buick	Enclave	Radio	√	√	√	√	√	
2015	Buick	Enclave	Rear Audio Control Module	√	√	√	√		
2015	Buick	Enclave	Personal Audio Link Control Module	√	√	√			0231
2015	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2015	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2015	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2015	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2015	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2015	Buick	Enclave	Head-Up Display Module	√	√	√	√	√	
2015	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2015	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247

2015	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2015	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Buick	Encore	Power Steering Control Module	√	√	√	√	√	0207
2015	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2015	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2015	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2015	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206
2015	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2015	Buick	Encore	Radio	√	√	√	√	√	
2015	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2015	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0057
2015	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	LaCrosse	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0263 0156
2015	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2015	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263

2015	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206
2015	Buick	LaCrosse	Head-Up Display Module	√	√	√	√	√	
2015	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0229
2015	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Buick	LaCrosse	Battery Energy Control Module	√			√		
2015	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2015	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2015	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2015	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Buick	LaCrosse	Amplifier	√	√	√	√		
2015	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2015	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	Regal	Battery Energy Control Module	√			√		
2015	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Buick	Regal	Chassis Control Module	√	√	√	√	√	0217
2015	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2015	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2015	Buick	Regal	Passenger Presence Module	√	√	√	√		0057
2015	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Buick	Regal	Amplifier	√	√	√	√		
2015	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Buick	Regal	HVAC Controls	√	√	√	√	√	
2015	Buick	Regal	Radio Controls	√	√	√	√		0241
2015	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2015	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2015	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212

2015	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2015	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2015	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0158 0200 0157
2015	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2015	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2015	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2015	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2015	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Buick	Verano	Passenger Presence Module	√	√	√	√		0057
2015	Buick	Verano	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258
2015	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217
2015	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2015	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	Verano	Radio	√	√	√	√	√	
2015	Buick	Verano	Multimedia Player Interface Module	√	√	√	√		0247
2014	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2014	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2014	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2014	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2014	Buick	Enclave	Headlamp Control Module	√	√	√			
2014	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011

2014	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2014	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2014	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Enclave	Right Side Object Detection Control Module	√	√	√		√	
2014	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2014	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Buick	Enclave	Radio	√	√	√	√	√	
2014	Buick	Enclave	Rear Audio Control Module	√	√	√	√		
2014	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057
2014	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0214
2014	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2014	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√		
2014	Buick	Enclave	Personal Audio Link Control Module	√	√	√			0231
2014	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2014	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2014	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2014	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2014	Buick	Encore	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2014	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2014	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247

2014	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2014	Buick	Encore	Radio	√	√	√	√	√	
2014	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Battery Energy Control Module	√			√		
2014	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2014	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2014	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2014	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2014	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0229
2014	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2014	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0263 0156
2014	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0057
2014	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2014	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2014	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206
2014	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	LaCrosse	Distance Sensing Cruise Control Module	√	√	√	√		0047
2014	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2014	Buick	LaCrosse	Amplifier	√	√	√	√		
2014	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2014	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	LaCrosse	Head-Up Display Module	√	√	√	√	√	
2014	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2014	Buick	Regal	Drive Motor Control Module	√	√	√	√		

2014	Buick	Regal	Battery Energy Control Module	√			√		
2014	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2014	Buick	Regal	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2014	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2014	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2014	Buick	Regal	Passenger Presence Module	√	√	√	√		0057
2014	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206
2014	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2014	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2014	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2014	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2014	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√		0047
2014	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Buick	Regal	Radio Controls	√	√	√	√		0241
2014	Buick	Regal	HVAC Controls	√	√	√	√	√	
2014	Buick	Regal	Amplifier	√	√	√	√		
2014	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2014	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Verano	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258
2014	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2014	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Buick	Verano	Passenger Presence Module	√	√	√	√		0057

2014	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2014	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2014	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2014	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2014	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Buick	Verano	Radio	√	√	√	√	√	
2014	Buick	Verano	Multimedia Player Interface Module	√	√	√	√		0247
2013	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017
2013	Buick	Encore	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2013	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0301
2013	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Buick	Encore	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0323 0305 0020 0306 0067 0217 0337
2013	Buick	Encore	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	Encore	Passenger Presence Module	√	√	√	√		0322
2013	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Buick	Encore	Multi-Axis Acceleration Sensor Module	√	√	√			
2013	Buick	Encore	Power Steering Control Module	√	√	√	√		
2013	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	Encore	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Buick	Encore	Radio	√	√	√	√	√	
2013	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2013	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0309
2013	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263

2013	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0020 0106
2013	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2013	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2013	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		
2013	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0322
2013	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	
2013	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Radio	√	√	√	√	√	
2013	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2013	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2013	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2013	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√		
2013	Buick	Regal	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0309
2013	Buick	Regal	Fuel Injector Control Module	√	√	√	√	√	
2013	Buick	Regal	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2013	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016
2013	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2013	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0316
2013	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Buick	Regal	Power Steering Control Module	√	√	√	√		
2013	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	Regal	Suension Control Module	√	√	√	√	√	
2013	Buick	Regal	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172

2013	Buick	Regal	Passenger Presence Module	√	√	√	√		0322
2013	Buick	Regal	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	Regal	Radio	√	√	√	√	√	
2013	Buick	Regal	Multimedia Player Interface Module	√	√	√	√		
2013	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	Regal	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	Verano	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	Verano	Transmission Control Module	√	√	√	√	√	0020 0106
2013	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Buick	Verano	Power Steering Control Module	√	√	√	√		
2013	Buick	Verano	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	Verano	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2013	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0301
2013	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2013	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2013	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0316
2013	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Buick	Verano	Passenger Presence Module	√	√	√	√		0322
2013	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2013	Buick	Verano	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	Verano	Radio	√	√	√	√	√	
2013	Buick	Verano	Multimedia Player Interface Module	√	√	√	√		
2013	Buick	Verano	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0066 0308 0217 0309
2013	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	0493
2013	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2013	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2013	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2013	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2013	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2013	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2013	Buick	Enclave - AWD	Park assist module	√	√	√	√		
2013	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2013	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2013	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497

2013	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2013	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2013	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2013	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2013	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2013	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2013	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2013	Buick	Enclave - AWD	Left side object detection module	√	√	√		√	
2013	Buick	Enclave - AWD	Right side object detection module	√	√	√		√	
2013	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2013	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	0493
2013	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2013	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2013	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2013	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2013	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2013	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2013	Buick	Enclave - FWD	Park assist module	√	√	√	√		
2013	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2013	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2013	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2013	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2013	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2013	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2013	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2013	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2013	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2013	Buick	Enclave - FWD	Left side object detection module	√	√	√		√	
2013	Buick	Enclave - FWD	Right side object detection module	√	√	√		√	
2013	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2012	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2012	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2012	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0016

2012	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2012	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2012	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0322
2012	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2012	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	
2012	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Radio	√	√	√	√	√	
2012	Buick	LaCrosse	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2012	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2012	Buick	LaCrosse	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Buick	LaCrosse	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2012	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Rear Seat Heating Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2012	Buick	LaCrosse	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2012	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√		
2012	Buick	LaCrosse	Battery Energy Control Module	√			√		
2012	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	Regal	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2012	Buick	Regal	Fuel Injector Control Module	√	√	√	√	√	
2012	Buick	Regal	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2012	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016
2012	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2012	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0316
2012	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080

2012	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Buick	Regal	Suension Control Module	√	√	√	√	√	
2012	Buick	Regal	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Buick	Regal	Passenger Presence Module	√	√	√	√		0322
2012	Buick	Regal	Instrument Cluster	√	√	√	√	√	0301
2012	Buick	Regal	Head-Up Dilay Module	√	√	√	√	√	
2012	Buick	Regal	Headlamp Control Module	√	√	√	√	√	
2012	Buick	Regal	Radio	√	√	√	√	√	
2012	Buick	Regal	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2012	Buick	Regal	Multimedia Player Interface Module	√	√	√	√		
2012	Buick	Regal	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Buick	Regal	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2012	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2012	Buick	Regal	Rear Seat Heating Control Module	√	√	√	√	√	
2012	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2012	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0301
2012	Buick	Regal	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2012	Buick	Regal	Steering Column Lock Control Module	√	√	√	√		
2012	Buick	Regal	Battery Energy Control Module	√			√		
2012	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	Regal	Right Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	Verano	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0263 0308 0217
2012	Buick	Verano	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017
2012	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0316
2012	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Buick	Verano	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Buick	Verano	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Buick	Verano	Passenger Presence Module	√	√	√	√		0322
2012	Buick	Verano	Instrument Cluster	√	√	√	√	√	
2012	Buick	Verano	Headlamp Control Module	√	√	√	√	√	
2012	Buick	Verano	Radio	√	√	√	√	√	
2012	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259

2012	Buick	Verano	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2012	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2012	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0301
2012	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	0493
2012	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2012	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2012	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2012	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2012	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2012	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2012	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2012	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2012	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2012	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2012	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2012	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2012	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2012	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2012	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2012	Buick	Enclave - AWD	Park assist module	√	√	√	√		
2012	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2012	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	0493
2012	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2012	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2012	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2012	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2012	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2012	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2012	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2012	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2012	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2012	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2012	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		

2012	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2012	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2012	Buick	Enclave - FWD	Personal audio link module	√	√	√	√	√	0528 0529
2012	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2012	Buick	Enclave - FWD	Park assist module	√	√	√	√	√	
2012	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2011	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2011	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2011	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0016
2011	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2011	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√	√	√	0111 0111
2011	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0081 0080 0080
2011	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0093 0090 0090
2011	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2011	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2011	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0322
2011	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2011	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	
2011	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Radio	√	√	√	√	√	
2011	Buick	LaCrosse	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2011	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√	√	
2011	Buick	LaCrosse	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Buick	LaCrosse	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2011	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Rear Seat Heating Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2011	Buick	LaCrosse	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2011	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Battery Energy Control Module	√	√	√	√	√	

2011	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	Regal	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2011	Buick	Regal	Fuel Injector Control Module	√	√	√	√	√	
2011	Buick	Regal	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2011	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016
2011	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2011	Buick	Regal	Drive Motor Control Module	√	√	√	√	√	
2011	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0316
2011	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Buick	Regal	Suension Control Module	√	√	√	√	√	
2011	Buick	Regal	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2011	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2011	Buick	Regal	Passenger Presence Module	√	√	√	√		0322
2011	Buick	Regal	Instrument Cluster	√	√	√	√	√	0301
2011	Buick	Regal	Head-Up Dilay Module	√	√	√	√	√	
2011	Buick	Regal	Headlamp Control Module	√	√	√	√	√	
2011	Buick	Regal	Radio	√	√	√	√	√	
2011	Buick	Regal	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2011	Buick	Regal	Multimedia Player Interface Module	√	√	√	√		
2011	Buick	Regal	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Buick	Regal	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2011	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2011	Buick	Regal	Rear Seat Heating Control Module	√	√	√	√	√	
2011	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2011	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0301
2011	Buick	Regal	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2011	Buick	Regal	Steering Column Lock Control Module	√	√	√	√		
2011	Buick	Regal	Battery Energy Control Module	√			√		
2011	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	Regal	Right Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	Lucerne	Transmission control module		√	√	√	√	
2011	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2011	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Buick	Lucerne	Radio	√	√	√	√	√	

2011	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2011	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2011	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2011	Buick	Lucerne	Park assist module	√	√	√	√		
2011	Buick	Lucerne	Right side object detection module	√	√	√	√		
2011	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2011	Buick	Lucerne	Passenger presence system	√	√	√	√		0517
2011	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2011	Buick	Lucerne	Digital radio receiver	√	√	√	√	√	
2011	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2011	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2011	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2011	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	0494 0495 0496
2011	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2011	Buick	Enclave - AWD	Transmission control module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2011	Buick	Enclave - AWD	Body Control Module						0499 0497
2011	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2011	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2011	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2011	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2011	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2011	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Park assist module	√	√	√	√		
2011	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2011	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2011	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2011	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2011	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2011	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2011	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	

2011	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2011	Buick	Enclave - FWD	Body Control Module						0499 0497
2011	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2011	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2011	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2011	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2011	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2011	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Park assist module	√	√	√	√		
2011	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2011	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2011	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2011	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2011	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2010	Buick	Allure	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2010	Buick	Allure	Fuel Injector Control Module	√	√	√	√	√	
2010	Buick	Allure	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Buick	Allure	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2010	Buick	Allure	Transmission Control Module	√	√	√	√	√	0016
2010	Buick	Allure	Rear Differential Clutch Control Module	√	√	√	√	√	
2010	Buick	Allure	Drive Motor Control Module	√	√	√	√		
2010	Buick	Allure	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Buick	Allure	Parking Brake Control Module	√	√	√	√	√	0316
2010	Buick	Allure	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Buick	Allure	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	Buick	Allure	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Buick	Allure	Suension Control Module	√	√	√	√	√	
2010	Buick	Allure	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2010	Buick	Allure	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2010	Buick	Allure	Passenger Presence Module	√	√	√	√		0322
2010	Buick	Allure	Instrument Cluster	√	√	√	√	√	0301
2010	Buick	Allure	Head-Up Dilay Module	√	√	√	√	√	
2010	Buick	Allure	Headlamp Control Module	√	√	√	√	√	
2010	Buick	Allure	Radio	√	√	√	√	√	

2010	Buick	Allure	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2010	Buick	Allure	Multimedia Player Interface Module	√	√	√	√		
2010	Buick	Allure	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Buick	Allure	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Buick	Allure	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Buick	Allure	Seat Memory Control Module	√	√	√	√	√	0310
2010	Buick	Allure	Front Seat Heating Control Module	√	√	√	√	√	
2010	Buick	Allure	Rear Seat Heating Control Module	√	√	√	√	√	
2010	Buick	Allure	Keyless Entry Control Module	√	√	√	√	√	
2010	Buick	Allure	Parking Assist Control Module	√	√	√	√	√	0301
2010	Buick	Allure	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2010	Buick	Allure	Steering Column Lock Control Module	√	√	√	√		
2010	Buick	Allure	Battery Energy Control Module	√			√		
2010	Buick	Allure	Left Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	Allure	Right Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2010	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2010	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0016
2010	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2010	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2010	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2010	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2010	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0322
2010	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2010	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	
2010	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Radio	√	√	√	√	√	
2010	Buick	LaCrosse	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2010	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2010	Buick	LaCrosse	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Buick	LaCrosse	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310

2010	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Rear Seat Heating Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2010	Buick	LaCrosse	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2010	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Battery Energy Control Module	√			√		
2010	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	Lucerne	Transmission control module		√	√	√	√	
2010	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2010	Buick	Lucerne	Digital radio receiver	√	√	√	√	√	
2010	Buick	Lucerne	Radio	√	√	√	√	√	
2010	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2010	Buick	Lucerne	Passenger presence system	√	√	√	√	√	0512
2010	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2010	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2010	Buick	Lucerne	Park assist module	√	√	√	√	√	
2010	Buick	Lucerne	Right side object detection module	√	√	√	√	√	
2010	Buick	Lucerne	Theft Deterrent Module	√	√	√	√	√	
2010	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2010	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2010	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2010	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2010	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2010	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2010	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2010	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2010	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2010	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2010	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2010	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2010	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2010	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497

2010	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Park assist module	√	√	√	√		
2010	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2010	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2010	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2010	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2010	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2010	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2010	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2010	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2010	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2010	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2010	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2010	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2010	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Park assist module	√	√	√	√		
2010	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2010	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2010	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2010	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2010	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2009	Buick	LaCrosse	Powertrain control module	√	√	√	√	√	0493
2009	Buick	LaCrosse	Transmission control module		√	√	√	√	
2009	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0493
2009	Buick	LaCrosse	Remote control door lock receiver	√	√	√	√	√	0159
2009	Buick	LaCrosse	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Buick	LaCrosse	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2009	Buick	LaCrosse	Vehicle comm. interface module	√	√	√	√	√	0565 0495

2009	Buick	LaCrosse	Digital radio receiver	√	√	√	√	√	0516
2009	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0499
2009	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0500
2009	Buick	LaCrosse	Instrument panel cluster	√	√	√	√	√	0159
2009	Buick	LaCrosse	Electronic Brake Control Module		√	√	√	√	0506
2009	Buick	LaCrosse (Allure in Canada)	Powertrain control module	√	√	√	√	√	0493
2009	Buick	LaCrosse (Allure in Canada)	Transmission control module		√	√	√	√	
2009	Buick	LaCrosse (Allure in Canada)	Engine Control Module	√	√	√	√	√	0493
2009	Buick	LaCrosse (Allure in Canada)	Remote control door lock receiver	√	√	√	√	√	0159
2009	Buick	LaCrosse (Allure in Canada)	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Buick	LaCrosse (Allure in Canada)	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2009	Buick	LaCrosse (Allure in Canada)	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Buick	LaCrosse (Allure in Canada)	Digital radio receiver	√	√	√	√	√	0516
2009	Buick	LaCrosse (Allure in Canada)	Body Control Module	√	√	√	√	√	0499
2009	Buick	LaCrosse (Allure in Canada)	HVAC Control Module	√	√	√	√	√	0500
2009	Buick	LaCrosse (Allure in Canada)	Instrument panel cluster	√	√	√	√	√	0159
2009	Buick	LaCrosse (Allure in Canada)	Electronic Brake Control Module		√	√	√	√	0506
2009	Buick	Lucerne	Transmission control module		√	√	√	√	
2009	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2009	Buick	Lucerne	Passenger presence system	√	√	√	√		0512
2009	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2009	Buick	Lucerne	Radio	√	√	√	√	√	
2009	Buick	Lucerne	Digital radio receiver	√	√	√	√	√	
2009	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2009	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2009	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2009	Buick	Lucerne	Park assist module	√	√	√	√	√	
2009	Buick	Lucerne	Right side object detection module	√	√	√	√		
2009	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2009	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2009	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2009	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2009	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2009	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2009	Buick	Others	Immobilizer						0508
2009	Buick	Others	Engine Control Module	√	√	√	√	√	
2009	Buick	Others	Transmission control module	√	√	√	√	√	

2009	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2009	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2009	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Buick	Enclave - AWD	Rollover sensor	√	√	√	√	√	0541
2009	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2009	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2009	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2009	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2009	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2009	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Park assist module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2009	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2009	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2009	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2009	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2009	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2009	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2009	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Buick	Enclave - FWD	Rollover sensor	√	√	√	√	√	0541
2009	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2009	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2009	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2009	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2009	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2009	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Park assist module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2009	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497

2009	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2009	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2009	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2008	Buick	LaCrosse	Powertrain control module	√	√	√	√	√	0493
2008	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	
2008	Buick	LaCrosse	Transmission control module	√	√	√	√	√	0493
2008	Buick	LaCrosse	Remote control door lock receiver	√	√	√	√	√	0159
2008	Buick	LaCrosse	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0499
2008	Buick	LaCrosse	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2008	Buick	LaCrosse	Digital radio receiver	√	√	√	√		0516
2008	Buick	LaCrosse	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0500
2008	Buick	LaCrosse	Instrument panel cluster	√	√	√	√	√	0159
2008	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Buick	LaCrosse (Allure in Canada)	Powertrain control module	√	√	√	√	√	0493
2008	Buick	LaCrosse (Allure in Canada)	Engine Control Module	√	√	√	√	√	
2008	Buick	LaCrosse (Allure in Canada)	Transmission control module	√	√	√	√	√	0493
2008	Buick	LaCrosse (Allure in Canada)	Remote control door lock receiver	√	√	√	√	√	0159
2008	Buick	LaCrosse (Allure in Canada)	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Buick	LaCrosse (Allure in Canada)	Body Control Module	√	√	√	√	√	0499
2008	Buick	LaCrosse (Allure in Canada)	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2008	Buick	LaCrosse (Allure in Canada)	Digital radio receiver	√	√	√	√		0516
2008	Buick	LaCrosse (Allure in Canada)	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Buick	LaCrosse (Allure in Canada)	HVAC Control Module	√	√	√	√	√	0500
2008	Buick	LaCrosse (Allure in Canada)	Instrument panel cluster	√	√	√	√	√	0159
2008	Buick	LaCrosse (Allure in Canada)	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Buick	Lucerne	Powertrain control module	√	√	√	√	√	0493
2008	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2008	Buick	Lucerne	Transmission control module	√	√	√	√	√	0493
2008	Buick	Lucerne	Passenger presence system	√	√	√	√		0512
2008	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2008	Buick	Lucerne	Radio	√	√	√	√	√	
2008	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2008	Buick	Lucerne	Digital radio receiver	√	√	√	√		
2008	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	

2008	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2008	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2008	Buick	Lucerne	Right side object detection module	√	√	√	√	√	
2008	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2008	Buick	Lucerne	Park assist module	√	√	√	√	√	
2008	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2008	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2008	Buick	Lucerne	Passenger door switch	√	√	√	√	√	0512
2008	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2008	Buick	Others	Immobilizer						0508
2008	Buick	Others	Engine Control Module	√	√	√	√	√	0507
2008	Buick	Others	Transmission control module	√	√	√	√	√	0493
2008	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	0493
2008	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2008	Buick	Enclave - AWD	Passenger presence system	√	√	√	√		0537
2008	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Buick	Enclave - AWD	Rollover sensor	√	√	√	√		0541
2008	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2008	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2008	Buick	Enclave - AWD	Park assist module	√	√	√	√	√	
2008	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√		
2008	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2008	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Buick	Enclave - AWD	Body Control Module						0499 0497
2008	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2008	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2008	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2008	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2008	Buick	Enclave - AWD	Instrument panel cluster					√	
2008	Buick	Enclave - AWD	Headlamp Control Module	√	√	√	√	√	
2008	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2008	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2008	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	0493
2008	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2008	Buick	Enclave - FWD	Passenger presence system	√	√	√	√		0537
2008	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Buick	Enclave - FWD	Rollover sensor	√	√	√	√		0541
2008	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497

2008	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2008	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2008	Buick	Enclave - FWD	Park assist module	√	√	√	√	√	
2008	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2008	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2008	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Buick	Enclave - FWD	Body Control Module						0499 0497
2008	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2008	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2008	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2008	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2008	Buick	Enclave - FWD	Instrument panel cluster					√	
2008	Buick	Enclave - FWD	Headlamp Control Module	√	√	√	√	√	
2008	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2008	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Buick	LaCrosse	Powertrain control module	√	√	√	√	√	
2007	Buick	LaCrosse	Transmission control module		√	√	√	√	
2007	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	
2007	Buick	LaCrosse	Remote control door lock receiver	√	√	√	√	√	0159
2007	Buick	LaCrosse	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	LaCrosse	Digital radio receiver	√	√	√	√		0516
2007	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0499
2007	Buick	LaCrosse	Instrument panel cluster	√	√	√	√	√	
2007	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0500
2007	Buick	LaCrosse	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2007	Buick	LaCrosse	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	LaCrosse	Electronic Brake Control Module				√		0506
2007	Buick	LaCrosse (Allure in Canada)	Powertrain control module	√	√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	Transmission control module		√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	Engine Control Module	√	√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	Remote control door lock receiver	√	√	√	√	√	0159
2007	Buick	LaCrosse (Allure in Canada)	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	LaCrosse (Allure in Canada)	Digital radio receiver	√	√	√	√		0516
2007	Buick	LaCrosse (Allure in Canada)	Body Control Module	√	√	√	√	√	0499
2007	Buick	LaCrosse (Allure in Canada)	Instrument panel cluster	√	√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	HVAC Control Module	√	√	√	√	√	0500
2007	Buick	LaCrosse (Allure in Canada)	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2007	Buick	LaCrosse (Allure in Canada)	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	LaCrosse (Allure in Canada)	Electronic Brake Control Module				√		0506

2007	Buick	Lucerne	Powertrain control module	√	√	√	√	√	0493
2007	Buick	Lucerne	Transmission control module		√	√	√	√	
2007	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2007	Buick	Lucerne	Passenger presence system	√	√	√	√		0512
2007	Buick	Lucerne	Digital radio receiver	√	√	√	√		
2007	Buick	Lucerne	Radio	√	√	√	√	√	
2007	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2007	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2007	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2007	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2007	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2007	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2007	Buick	Lucerne	Park assist module	√	√	√	√	√	0513 0159
2007	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2007	Buick	Rainier	Powertrain control module		√	√	√	√	
2007	Buick	Rainier	Transmission control module		√	√	√	√	
2007	Buick	Rainier	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√	√	
2007	Buick	Rainier	Disc player and video delay	√	√	√			
2007	Buick	Rainier	Radio	√	√	√	√		
2007	Buick	Rainier	Rear seat audio	√	√	√	√		
2007	Buick	Rainier	Digital radio receiver	√	√	√	√		0516
2007	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2007	Buick	Rainier	Generator battery control module	√	√	√	√	√	
2007	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2007	Buick	Rainier	Driver door module	√	√	√	√	√	
2007	Buick	Rainier	Driver seat module	√	√	√	√	√	
2007	Buick	Rainier	HVAC Control Module	√	√	√	√	√	
2007	Buick	Rainier	Passenger door module	√	√	√	√	√	
2007	Buick	Rainier	Liftgate module	√	√	√	√	√	0159
2007	Buick	Rainier	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Rainier	Passenger presence system	√	√	√	√	√	0512
2007	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2007	Buick	Rainier	Electronic Brake Control Module	√	√	√	√	√	
2007	Buick	Rainier	Transfer Case Control Module	√	√	√	√	√	0493
2007	Buick	Rendezvous - FWD	Powertrain control module	√	√	√	√	√	
2007	Buick	Rendezvous - FWD	Passenger presence system		√	√			0512

2007	Buick	Rendezvous - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	Rendezvous - FWD	Theft Deterrent Module	√	√	√	√		
2007	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2007	Buick	Rendezvous - FWD	Disc player and video dilay	√	√	√			
2007	Buick	Rendezvous - FWD	Radio	√	√	√	√	√	0573 0572 0574 0524
2007	Buick	Rendezvous - FWD	HVAC Control Module	√	√	√	√	√	
2007	Buick	Rendezvous - FWD	Instrument panel cluster	√	√	√	√	√	
2007	Buick	Rendezvous - FWD	Body Control Module	√	√	√	√	√	0628 0637 0614 0515
2007	Buick	Rendezvous - FWD	Head up dilay	√	√	√	√		
2007	Buick	Rendezvous - FWD	Memory seat module		√	√	√	√	
2007	Buick	Rendezvous - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Rendezvous - FWD	Electronic Brake Control Module		√	√	√	√	0506
2007	Buick	Terraza	Transmission control module		√	√	√	√	
2007	Buick	Terraza	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Terraza	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	Terraza	Mobile digital media		√	√			
2007	Buick	Terraza	Radio	√	√	√	√	√	0587 0524 0525
2007	Buick	Terraza	Disc player and video dilay	√	√	√			
2007	Buick	Terraza	Body Control Module	√	√	√	√	√	0499
2007	Buick	Terraza	Left power sliding door module	√	√	√	√	√	
2007	Buick	Terraza	Right power sliding door module	√	√	√	√	√	
2007	Buick	Terraza	Memory seat module	√	√	√	√	√	
2007	Buick	Terraza	HVAC Control Module	√	√	√	√	√	
2007	Buick	Terraza	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Terraza	Digital radio receiver	√	√	√	√		0516
2007	Buick	Terraza	Passenger presence system	√	√	√	√	√	0512
2007	Buick	Terraza	Navigation radio	√	√	√	√	√	0525
2007	Buick	Terraza	Electronic Brake Control Module		√	√	√	√	0506
2007	Buick	Terraza Ext.	Transmission control module		√	√	√	√	
2007	Buick	Terraza Ext.	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Terraza Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	Terraza Ext.	Mobile digital media		√	√			
2007	Buick	Terraza Ext.	Radio	√	√	√	√	√	0587 0524 0525
2007	Buick	Terraza Ext.	Disc player and video dilay	√	√	√			
2007	Buick	Terraza Ext.	Body Control Module	√	√	√	√	√	0499
2007	Buick	Terraza Ext.	Left power sliding door module	√	√	√	√	√	
2007	Buick	Terraza Ext.	Right power sliding door module	√	√	√	√	√	
2007	Buick	Terraza Ext.	Memory seat module	√	√	√	√	√	
2007	Buick	Terraza Ext.	HVAC Control Module	√	√	√	√	√	
2007	Buick	Terraza Ext.	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Terraza Ext.	Digital radio receiver	√	√	√	√		0516
2007	Buick	Terraza Ext.	Passenger presence system	√	√	√	√	√	0512

2007	Buick	Terraza Ext.	Navigation radio	√	√	√	√	√	0525
2007	Buick	Terraza Ext.	Electronic Brake Control Module		√	√	√	√	0506
2006	Buick	LaCrosse	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	LaCrosse	HVAC systems - automatic	√	√	√	√	√	0500
2006	Buick	LaCrosse	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	LaCrosse	Engine controls		√	√	√	√	
2006	Buick	LaCrosse	Engine cooling		√	√	√	√	
2006	Buick	LaCrosse	Engine electrical	√	√	√	√	√	0499
2006	Buick	LaCrosse	Shift lock control	√	√	√	√	√	0499
2006	Buick	LaCrosse	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	LaCrosse	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	LaCrosse	Cruise Control	√	√	√	√	√	
2006	Buick	LaCrosse	Entertainment	√	√	√	√	√	0516
2006	Buick	LaCrosse	Horns	√	√	√	√	√	0499
2006	Buick	LaCrosse	Instrument panel	√	√	√	√	√	
2006	Buick	LaCrosse	Keyless entry	√	√	√	√	√	0499
2006	Buick	LaCrosse	Lighting systems	√	√	√	√	√	0499
2006	Buick	LaCrosse	Seats	√	√	√	√	√	0499
2006	Buick	LaCrosse	Stationary windows	√	√	√	√	√	0499
2006	Buick	LaCrosse	Theft deterrent	√	√	√	√	√	0499
2006	Buick	LaCrosse	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	LaCrosse	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	LaCrosse	SIR	√	√	√	√	√	0639 0515
2006	Buick	LaCrosse (Allure in Canada)	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	HVAC systems - automatic	√	√	√	√	√	0500
2006	Buick	LaCrosse (Allure in Canada)	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	LaCrosse (Allure in Canada)	Engine controls		√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Engine cooling		√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Engine electrical	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Shift lock control	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	LaCrosse (Allure in Canada)	Cruise Control	√	√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Entertainment	√	√	√	√	√	0516
2006	Buick	LaCrosse (Allure in Canada)	Horns	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Instrument panel	√	√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Keyless entry	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Lighting systems	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Seats	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Stationary windows	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Theft deterrent	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Wipers/washer systems	√	√	√	√	√	0499

2006	Buick	LaCrosse (Allure in Canada)	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	LaCrosse (Allure in Canada)	SIR	√	√	√	√	√	0639 0515
2006	Buick	Lucerne	HVAC systems - automatic	√	√	√	√	√	
2006	Buick	Lucerne	HVAC systems - manual	√	√	√	√	√	0493
2006	Buick	Lucerne	Steering	√	√	√	√	√	
2006	Buick	Lucerne	Suension		√	√	√	√	
2006	Buick	Lucerne	Antilock Braking System	√	√	√	√	√	0493
2006	Buick	Lucerne	Hydraulic brakes	√	√	√			
2006	Buick	Lucerne	Park brake	√	√	√	√	√	0506
2006	Buick	Lucerne	Engine controls	√	√	√	√	√	0493
2006	Buick	Lucerne	Engine cooling	√	√	√	√	√	0493
2006	Buick	Lucerne	Engine electrical	√	√	√	√	√	0493
2006	Buick	Lucerne	Shift lock control	√	√	√	√		
2006	Buick	Lucerne	Automatic transaxle	√	√	√	√	√	
2006	Buick	Lucerne	Body rear end	√	√	√	√		
2006	Buick	Lucerne	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Buick	Lucerne	Cruise Control	√	√	√	√	√	0493
2006	Buick	Lucerne	Door	√	√	√	√	√	
2006	Buick	Lucerne	Entertainment	√	√	√	√	√	
2006	Buick	Lucerne	Horns	√	√	√	√		
2006	Buick	Lucerne	Instrument panel	√	√	√	√	√	0493
2006	Buick	Lucerne	Keyless entry	√	√	√	√	√	0493
2006	Buick	Lucerne	Lighting systems	√	√	√	√		
2006	Buick	Lucerne	Body Control Module	√	√	√	√		
2006	Buick	Lucerne	Seats	√	√	√	√	√	
2006	Buick	Lucerne	Stationary windows	√	√	√	√		
2006	Buick	Lucerne	Theft deterrent	√	√	√	√	√	0493
2006	Buick	Lucerne	Wipers/washer systems	√	√	√	√		
2006	Buick	Lucerne	Rear parking assist	√	√	√	√	√	0494 0591 0565 0495
2006	Buick	Lucerne	Seat belts	√	√	√	√	√	0497
2006	Buick	Lucerne	SIR	√	√	√	√	√	0497
2006	Buick	Others	Powertrain	√	√	√	√	√	0493
2006	Buick	Others	Electronic Brake Control Module	√	√	√	√	√	0506
2006	Buick	Rainier	Powertrain	√	√	√	√	√	0493
2006	Buick	Rainier	Disc player and video dilay	√	√	√			
2006	Buick	Rainier	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rainier	Radio	√	√	√	√		
2006	Buick	Rainier	Rear seat audio	√	√	√	√		
2006	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2006	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2006	Buick	Rainier	Driver door module	√	√	√	√	√	
2006	Buick	Rainier	Driver seat module	√	√	√	√	√	

2006	Buick	Rainier	Heating and air conditioning	√	√	√	√	√	
2006	Buick	Rainier	Lift gate module	√	√	√	√	√	
2006	Buick	Rainier	Passenger door module	√	√	√	√	√	
2006	Buick	Rainier	Passenger presence system		√	√			0512
2006	Buick	Rainier	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rainier	ABS/TCS/VSES	√	√	√	√	√	0493
2006	Buick	Rainier - 2WD	Powertrain	√	√	√	√	√	0493
2006	Buick	Rainier - 2WD	Disc player and video dilay	√	√	√			
2006	Buick	Rainier - 2WD	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rainier - 2WD	Radio	√	√	√	√		
2006	Buick	Rainier - 2WD	Rear seat audio	√	√	√	√		
2006	Buick	Rainier - 2WD	Body Control Module	√	√	√	√	√	0550
2006	Buick	Rainier - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Driver door module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Driver seat module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Lift gate module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Passenger door module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Passenger presence system		√	√			0512
2006	Buick	Rainier - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rainier - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Buick	Rainier - 2WD	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rainier - 2WD	ABS/TCS/VSES	√	√	√	√	√	0493
2006	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	
2006	Buick	Rendezvous - AWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - AWD	Disc player and video dilay	√	√	√			
2006	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rendezvous - AWD	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rendezvous - AWD	Vehicle theft deterrent	√	√	√	√		
2006	Buick	Rendezvous - AWD	Passenger presence system		√	√			0512
2006	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0637
2006	Buick	Rendezvous - AWD	Head up dilay		√	√	√		
2006	Buick	Rendezvous - AWD	Instrument panel cluster		√	√	√	√	
2006	Buick	Rendezvous - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rendezvous - AWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Buick	Rendezvous - AWD	Memory seat module	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - AWD	Chassis	√	√	√	√	√	0506
2006	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	
2006	Buick	Rendezvous - FWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - FWD	Disc player and video dilay	√	√	√			

2006	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rendezvous - FWD	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rendezvous - FWD	Vehicle theft deterrent	√	√	√	√		
2006	Buick	Rendezvous - FWD	Passenger presence system		√	√			0512
2006	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0637
2006	Buick	Rendezvous - FWD	Head up display		√	√	√		
2006	Buick	Rendezvous - FWD	Instrument panel cluster		√	√	√	√	
2006	Buick	Rendezvous - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rendezvous - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Buick	Rendezvous - FWD	Memory seat module	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - FWD	Chassis	√	√	√	√	√	0506
2006	Buick	Terraza	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	Terraza	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	Terraza	Engine controls	√	√	√	√	√	0493
2006	Buick	Terraza	Engine cooling	√	√	√	√	√	0493
2006	Buick	Terraza	Engine electrical	√	√	√	√	√	0499
2006	Buick	Terraza	Shift lock control	√	√	√	√	√	0499
2006	Buick	Terraza	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	Terraza	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	Terraza	Cruise Control	√	√	√	√	√	0493
2006	Buick	Terraza	Door	√	√	√	√	√	
2006	Buick	Terraza	Entertainment	√	√	√	√	√	0516
2006	Buick	Terraza	Horns	√	√	√	√	√	0499
2006	Buick	Terraza	Instrument panel	√	√	√	√	√	0499
2006	Buick	Terraza	Lighting systems	√	√	√	√	√	0499
2006	Buick	Terraza	Navigation System	√	√	√	√	√	0525
2006	Buick	Terraza	Seats	√	√	√	√	√	
2006	Buick	Terraza	Stationary windows	√	√	√	√	√	
2006	Buick	Terraza	Theft deterrent	√	√	√	√	√	0499
2006	Buick	Terraza	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	Terraza	Keyless entry	√	√	√	√	√	0499
2006	Buick	Terraza	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	Terraza	SIR	√	√	√	√	√	0639 0515
2006	Buick	Terraza - 4WD	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	Terraza - 4WD	Engine controls		√	√	√	√	
2006	Buick	Terraza - 4WD	Engine cooling		√	√	√	√	
2006	Buick	Terraza - 4WD	Engine electrical	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Shift lock control	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	Terraza - 4WD	Cruise Control	√	√	√	√	√	0493

2006	Buick	Terraza - 4WD	Door	√	√	√	√	√	
2006	Buick	Terraza - 4WD	Entertainment	√	√	√	√	√	0516
2006	Buick	Terraza - 4WD	Horns	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Instrument panel	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Keyless entry	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Lighting systems	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Navigation System	√	√	√	√	√	0525
2006	Buick	Terraza - 4WD	Seats	√	√	√	√	√	
2006	Buick	Terraza - 4WD	Stationary windows	√	√	√	√	√	
2006	Buick	Terraza - 4WD	Theft deterrent	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	Terraza - 4WD	SIR	√	√	√	√	√	0639 0515
2006	Buick	Terraza Ext.	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	Terraza Ext.	Engine controls	√	√	√	√	√	
2006	Buick	Terraza Ext.	Engine cooling	√	√	√	√	√	
2006	Buick	Terraza Ext.	Engine electrical	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Shift lock control	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	Terraza Ext.	Cruise Control	√	√	√	√	√	0493
2006	Buick	Terraza Ext.	Door	√	√	√	√	√	
2006	Buick	Terraza Ext.	Entertainment	√	√	√	√	√	0516
2006	Buick	Terraza Ext.	Horns	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Instrument panel	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Keyless entry	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Lighting systems	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Navigation System	√	√	√	√	√	0525
2006	Buick	Terraza Ext.	Seats	√	√	√	√	√	
2006	Buick	Terraza Ext.	Stationary windows	√	√	√	√	√	
2006	Buick	Terraza Ext.	Theft deterrent	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	Terraza Ext.	SIR	√	√	√	√	√	0639 0515
2005	Buick	Century	Powertrain	√	√	√	√	√	
2005	Buick	Century	Supplemental inflatable restraint	√	√	√	√	√	
2005	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0628
2005	Buick	Century	Radio		√	√	√	√	0573 0636 0572
2005	Buick	Century	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Buick	Century	Heating and air conditioning		√	√	√	√	
2005	Buick	Century	Chassis	√	√	√	√	√	0506

2005	Buick	LaCrosse	HVAC systems - manual		√	√	√	√	
2005	Buick	LaCrosse	HVAC systems - automatic	√	√	√	√	√	0500
2005	Buick	LaCrosse	Brakes	√	√	√	√	√	0506
2005	Buick	LaCrosse	Engine controls		√	√	√	√	
2005	Buick	LaCrosse	Engine cooling		√	√	√	√	
2005	Buick	LaCrosse	Engine electrical	√	√	√	√	√	0515
2005	Buick	LaCrosse	Shift lock control	√	√	√	√	√	0499
2005	Buick	LaCrosse	Automatic transaxle	√	√	√	√	√	0499
2005	Buick	LaCrosse	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	LaCrosse	Cruise Control		√	√	√	√	
2005	Buick	LaCrosse	Entertainment	√	√	√	√	√	0516
2005	Buick	LaCrosse	Horns	√	√	√	√	√	0499
2005	Buick	LaCrosse	Instrument panel	√	√	√	√	√	0663
2005	Buick	LaCrosse	Keyless entry	√	√	√	√	√	0499
2005	Buick	LaCrosse	Lighting systems	√	√	√	√	√	0499
2005	Buick	LaCrosse	Seats	√	√	√	√	√	0499
2005	Buick	LaCrosse	Stationary windows	√	√	√	√	√	0499
2005	Buick	LaCrosse	Theft deterrent	√	√	√	√	√	0499
2005	Buick	LaCrosse	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	LaCrosse	Seat belts	√	√	√	√		0515
2005	Buick	LaCrosse	SIR	√	√	√	√		0515
2005	Buick	LaCrosse (Allure in Canada)	HVAC systems - manual		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	HVAC systems - automatic	√	√	√	√	√	0500
2005	Buick	LaCrosse (Allure in Canada)	Brakes	√	√	√	√	√	0506
2005	Buick	LaCrosse (Allure in Canada)	Engine controls		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	Engine cooling		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	Engine electrical	√	√	√	√	√	0515
2005	Buick	LaCrosse (Allure in Canada)	Shift lock control	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Automatic transaxle	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	LaCrosse (Allure in Canada)	Cruise Control		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	Entertainment	√	√	√	√	√	0516
2005	Buick	LaCrosse (Allure in Canada)	Horns	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Instrument panel	√	√	√	√	√	0663
2005	Buick	LaCrosse (Allure in Canada)	Keyless entry	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Lighting systems	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Seats	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Stationary windows	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Theft deterrent	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Seat belts	√	√	√	√		0515
2005	Buick	LaCrosse (Allure in Canada)	SIR	√	√	√	√		0515

2005	Buick	LeSabre	Powertrain	√	√	√	√	√	
2005	Buick	LeSabre	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2005	Buick	LeSabre	Head up dilay	√	√	√	√	√	
2005	Buick	LeSabre	Rear integration module	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	LeSabre	Driver door module	√	√	√	√	√	
2005	Buick	LeSabre	CD changer	√	√	√	√	√	
2005	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2005	Buick	LeSabre	Digital radio receiver	√	√	√	√	√	0516
2005	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√	√	0605
2005	Buick	LeSabre	Remote function actuation	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√	√	
2005	Buick	LeSabre	Instrument panel cluster	√	√	√	√	√	0651 0650
2005	Buick	LeSabre	Climate control panel	√	√	√	√	√	
2005	Buick	LeSabre	Instrument panel module	√	√	√	√	√	0630 0667
2005	Buick	LeSabre	DRP/ABS/TIM	√	√	√	√	√	0506
2005	Buick	LeSabre	Powertrain	√	√	√	√	√	
2005	Buick	LeSabre	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2005	Buick	LeSabre	Head up dilay	√	√	√	√	√	
2005	Buick	LeSabre	Rear integration module	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	LeSabre	Driver door module	√	√	√	√	√	
2005	Buick	LeSabre	CD changer	√	√	√	√	√	
2005	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2005	Buick	LeSabre	Memory seat module	√	√	√	√	√	
2005	Buick	LeSabre	Digital radio receiver	√	√	√	√	√	0516
2005	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√	√	0605
2005	Buick	LeSabre	Remote function actuation	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√	√	
2005	Buick	LeSabre	Instrument panel cluster	√	√	√	√	√	0651 0650
2005	Buick	LeSabre	Climate control panel	√	√	√	√	√	
2005	Buick	LeSabre	Instrument panel module	√	√	√	√	√	0630 0667
2005	Buick	LeSabre	DRP/ABS/TIM	√	√	√	√	√	0506
2005	Buick	Park Avenue	Powertrain	√	√	√	√	√	
2005	Buick	Park Avenue	Body Control Module	√	√	√	√	√	0614 0668 0550
2005	Buick	Park Avenue	Memory seat module	√	√	√	√	√	0669
2005	Buick	Park Avenue	Driver door module	√	√	√	√	√	
2005	Buick	Park Avenue	Supplemental inflatable restraint	√	√	√	√	√	0515

2005	Buick	Park Avenue	Remote function actuation	√			√	√	
2005	Buick	Park Avenue	Vehicle theft deterrent		√	√	√		
2005	Buick	Park Avenue	Heating and air conditioning	√	√	√	√	√	0630
2005	Buick	Park Avenue	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2005	Buick	Rainier	Powertrain	√	√	√	√	√	0493
2005	Buick	Rainier	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rainier	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rainier	Radio	√	√	√	√		
2005	Buick	Rainier	Disc player and video dilay	√	√	√			
2005	Buick	Rainier	Passenger presence system		√	√			0512
2005	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2005	Buick	Rainier	Driver door module	√	√	√	√	√	
2005	Buick	Rainier	Driver seat module	√	√	√	√	√	
2005	Buick	Rainier	Heating and air conditioning	√	√	√	√	√	
2005	Buick	Rainier	Lift gate module	√	√	√	√	√	
2005	Buick	Rainier	Passenger door module	√	√	√	√	√	
2005	Buick	Rainier	Rear seat audio	√	√	√	√		
2005	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2005	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rainier	ABS	√	√	√	√	√	
2005	Buick	Rainier	4WAL 3 sensor	√	√	√	√	√	0493
2005	Buick	Rainier - 2WD	Powertrain	√	√	√	√	√	0493
2005	Buick	Rainier - 2WD	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rainier - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rainier - 2WD	Radio	√	√	√	√		
2005	Buick	Rainier - 2WD	Disc player and video dilay	√	√	√			
2005	Buick	Rainier - 2WD	Passenger presence system		√	√			0512
2005	Buick	Rainier - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Driver door module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Driver seat module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Lift gate module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Passenger door module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Rear seat audio	√	√	√	√		
2005	Buick	Rainier - 2WD	Body Control Module	√	√	√	√	√	0550
2005	Buick	Rainier - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	Buick	Rainier - 2WD	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rainier - 2WD	ABS	√	√	√	√	√	
2005	Buick	Rainier - 2WD	4WAL 3 sensor	√	√	√	√	√	0493
2005	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	

2005	Buick	Rendezvous - AWD	Disc player and video delay	√	√	√			
2005	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rendezvous - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rendezvous - AWD	Radio						0524
2005	Buick	Rendezvous - AWD	Heating and air conditioning		√	√	√	√	
2005	Buick	Rendezvous - AWD	Vehicle theft deterrent		√	√	√		
2005	Buick	Rendezvous - AWD	Passenger presence system		√	√			0512
2005	Buick	Rendezvous - AWD	Head up display		√	√	√		
2005	Buick	Rendezvous - AWD	Memory seat module		√	√	√	√	
2005	Buick	Rendezvous - AWD	Instrument panel cluster		√	√	√	√	
2005	Buick	Rendezvous - AWD	Body Control Module	√	√	√	√	√	0560 0515 0628 0614
2005	Buick	Rendezvous - AWD	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rendezvous - AWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Buick	Rendezvous - AWD	Chassis	√	√	√	√	√	0506
2005	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	
2005	Buick	Rendezvous - FWD	Disc player and video delay	√	√	√			
2005	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rendezvous - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rendezvous - FWD	Radio						0524
2005	Buick	Rendezvous - FWD	Heating and air conditioning		√	√	√	√	
2005	Buick	Rendezvous - FWD	Vehicle theft deterrent		√	√	√		
2005	Buick	Rendezvous - FWD	Passenger presence system		√	√			0512
2005	Buick	Rendezvous - FWD	Head up display		√	√	√		
2005	Buick	Rendezvous - FWD	Memory seat module		√	√	√	√	
2005	Buick	Rendezvous - FWD	Instrument panel cluster		√	√	√	√	
2005	Buick	Rendezvous - FWD	Body Control Module	√	√	√	√	√	0560 0515 0628 0614
2005	Buick	Rendezvous - FWD	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rendezvous - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Buick	Rendezvous - FWD	Chassis	√	√	√	√	√	0506
2005	Buick	Terraza	HVAC	√	√	√	√	√	0499
2005	Buick	Terraza	Brakes		√	√	√	√	0506
2005	Buick	Terraza	Engine controls		√	√	√	√	
2005	Buick	Terraza	Engine cooling		√	√	√	√	
2005	Buick	Terraza	Engine electrical	√	√	√	√	√	0499
2005	Buick	Terraza	Shift lock control	√	√	√	√	√	0499
2005	Buick	Terraza	Automatic transaxle		√	√	√	√	
2005	Buick	Terraza	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	Terraza	Cruise Control		√	√	√	√	
2005	Buick	Terraza	Door	√	√	√	√	√	
2005	Buick	Terraza	Entertainment	√	√	√	√	√	0516
2005	Buick	Terraza	Horns	√	√	√	√	√	0499
2005	Buick	Terraza	Instrument panel	√	√	√	√	√	0499

2005	Buick	Terraza	Keyless entry	√	√	√	√	√	0499
2005	Buick	Terraza	Lighting systems	√	√	√	√	√	0499
2005	Buick	Terraza	Navigation System	√	√	√	√	√	0525
2005	Buick	Terraza	Seats	√	√	√	√	√	
2005	Buick	Terraza	Stationary windows	√	√	√	√	√	
2005	Buick	Terraza	Theft deterrent	√	√	√	√	√	0499
2005	Buick	Terraza	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	Terraza	Seat belts	√	√	√	√	√	0515
2005	Buick	Terraza	SIR	√	√	√	√	√	0512
2005	Buick	Terraza - 4WD	HVAC	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Brakes		√	√	√	√	0506
2005	Buick	Terraza - 4WD	Engine controls		√	√	√	√	
2005	Buick	Terraza - 4WD	Engine cooling		√	√	√	√	
2005	Buick	Terraza - 4WD	Engine electrical	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Shift lock control	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Automatic transaxle		√	√	√	√	
2005	Buick	Terraza - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	Terraza - 4WD	Cruise Control		√	√	√	√	
2005	Buick	Terraza - 4WD	Door	√	√	√	√	√	
2005	Buick	Terraza - 4WD	Entertainment	√	√	√	√	√	0516
2005	Buick	Terraza - 4WD	Horns	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Instrument panel	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Keyless entry	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Lighting systems	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Navigation System	√	√	√	√	√	0525
2005	Buick	Terraza - 4WD	Seats	√	√	√	√	√	
2005	Buick	Terraza - 4WD	Stationary windows	√	√	√	√	√	
2005	Buick	Terraza - 4WD	Theft deterrent	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Seat belts	√	√	√	√	√	0515
2005	Buick	Terraza - 4WD	SIR	√	√	√	√	√	0512
2005	Buick	Terraza Ext.	HVAC	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Brakes		√	√	√	√	0506
2005	Buick	Terraza Ext.	Engine controls		√	√	√	√	
2005	Buick	Terraza Ext.	Engine cooling		√	√	√	√	
2005	Buick	Terraza Ext.	Engine electrical	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Shift lock control	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Automatic transaxle		√	√	√	√	
2005	Buick	Terraza Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	Terraza Ext.	Cruise Control		√	√	√	√	
2005	Buick	Terraza Ext.	Door	√	√	√	√	√	
2005	Buick	Terraza Ext.	Entertainment	√	√	√	√	√	0516

2005	Buick	Terraza Ext.	Horns	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Instrument panel	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Keyless entry	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Lighting systems	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Navigation System	√	√	√	√	√	0525
2005	Buick	Terraza Ext.	Seats	√	√	√	√	√	
2005	Buick	Terraza Ext.	Stationary windows	√	√	√	√	√	
2005	Buick	Terraza Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Seat belts	√	√	√	√	√	0515
2005	Buick	Terraza Ext.	SIR	√	√	√	√	√	0512
2004	Buick	Century	Powertrain	√	√	√	√	√	
2004	Buick	Century	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0628 0573 0636 0572
2004	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2004	Buick	Century	Chassis	√	√	√	√	√	0506
2004	Buick	LeSabre	Powertrain	√	√	√	√	√	
2004	Buick	LeSabre	Onstar	√	√	√	√	√	0647 0683
2004	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2004	Buick	LeSabre	CD changer	√	√	√	√		
2004	Buick	LeSabre	Climate control panel		√	√			
2004	Buick	LeSabre	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Buick	LeSabre	Driver door module	√	√	√	√	√	
2004	Buick	LeSabre	Head up dilay		√	√		√	
2004	Buick	LeSabre	Instrument panel module		√	√			0630 0667
2004	Buick	LeSabre	Rear integration module		√	√			
2004	Buick	LeSabre	Remote function actuation	√	√	√	√	√	
2004	Buick	LeSabre	Instrument panel cluster		√	√		√	
2004	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2004	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√	√	
2004	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2004	Buick	LeSabre	Powertrain	√	√	√	√	√	
2004	Buick	LeSabre	Onstar	√	√	√	√	√	0647 0683
2004	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2004	Buick	LeSabre	CD changer	√	√	√	√		
2004	Buick	LeSabre	Climate control panel		√	√			
2004	Buick	LeSabre	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604

2004	Buick	LeSabre	Driver door module	√	√	√	√	√	
2004	Buick	LeSabre	Head up dilay		√	√		√	
2004	Buick	LeSabre	Instrument panel module		√	√			0630 0667
2004	Buick	LeSabre	Memory seat module	√	√	√	√	√	
2004	Buick	LeSabre	Rear integration module		√	√			
2004	Buick	LeSabre	Remote function actuation	√	√	√	√	√	
2004	Buick	LeSabre	Instrument panel cluster		√	√		√	
2004	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2004	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√	√	
2004	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2004	Buick	Park Avenue	Powertrain	√	√	√	√	√	
2004	Buick	Park Avenue	Onstar	√	√	√	√		0647 0495 0683
2004	Buick	Park Avenue	Driver door module	√	√	√	√	√	
2004	Buick	Park Avenue	Memory seat module	√	√	√	√	√	0669
2004	Buick	Park Avenue	Heating and air conditioning	√	√	√	√	√	0630
2004	Buick	Park Avenue	Remote function actuation	√			√	√	
2004	Buick	Park Avenue	Body Control Module	√	√	√	√	√	0614 0668 0550
2004	Buick	Park Avenue	Cellular telephone	√	√	√	√		0684
2004	Buick	Park Avenue	Instrument panel cluster	√	√	√	√	√	0550 0550
2004	Buick	Park Avenue	Vehicle theft deterrent		√	√	√		
2004	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2004	Buick	Regal	Powertrain	√	√	√	√	√	
2004	Buick	Regal	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0628 0573 0636 0572
2004	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2004	Buick	Regal	Chassis	√	√	√	√	√	0506
2004	Buick	Rainier	Powertrain	√	√	√	√	√	
2004	Buick	Rainier	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rainier	Digital radio receiver	√	√	√	√		0516
2004	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2004	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2004	Buick	Rainier	Driver door module	√	√	√	√	√	
2004	Buick	Rainier	Passenger door module	√	√	√	√	√	
2004	Buick	Rainier	Driver seat module	√	√	√	√	√	
2004	Buick	Rainier	Heating and air conditioning	√	√	√	√	√	
2004	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√		0531
2004	Buick	Rainier	Amplifier (bose)	√	√	√	√	√	
2004	Buick	Rainier	Radio	√	√	√	√		0524
2004	Buick	Rainier	Rear seat audio	√	√	√	√		

2004	Buick	Rainier	Lift gate module	√	√	√	√	√	
2004	Buick	Rainier	Rear seat entertainment	√	√	√	√	√	0550
2004	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2004	Buick	Rainier	ABS	√	√	√	√	√	
2004	Buick	Rainier	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Buick	Rainier - 2WD	Powertrain	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rainier - 2WD	Digital radio receiver	√	√	√	√		0516
2004	Buick	Rainier - 2WD	Body Control Module	√	√	√	√	√	0550
2004	Buick	Rainier - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Driver door module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Passenger door module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Driver seat module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Buick	Rainier - 2WD	Amplifier (bose)	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Radio	√	√	√	√		0524
2004	Buick	Rainier - 2WD	Rear seat audio	√	√	√	√		
2004	Buick	Rainier - 2WD	Lift gate module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Rear seat entertainment	√	√	√	√	√	0550
2004	Buick	Rainier - 2WD	Navigation radio	√	√	√	√	√	0525
2004	Buick	Rainier - 2WD	ABS	√	√	√	√	√	
2004	Buick	Rainier - 2WD	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	
2004	Buick	Rendezvous - AWD	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√		0516
2004	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2004	Buick	Rendezvous - AWD	Navigation radio	√	√	√	√		0525
2004	Buick	Rendezvous - AWD	Supplemental inflatable restraint		√	√	√		
2004	Buick	Rendezvous - AWD	Vehicle theft deterrent		√	√	√		
2004	Buick	Rendezvous - AWD	Rear seat entertainment	√	√	√			
2004	Buick	Rendezvous - AWD	Head up dilay		√	√			
2004	Buick	Rendezvous - AWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2004	Buick	Rendezvous - AWD	Chassis	√	√	√	√	√	0506
2004	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	
2004	Buick	Rendezvous - FWD	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2004	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2004	Buick	Rendezvous - FWD	Navigation radio	√	√	√	√		0525
2004	Buick	Rendezvous - FWD	Supplemental inflatable restraint		√	√	√		

2004	Buick	Rendezvous - FWD	Vehicle theft deterrent		√	√	√		
2004	Buick	Rendezvous - FWD	Rear seat entertainment	√	√	√			
2004	Buick	Rendezvous - FWD	Head up display		√	√			
2004	Buick	Rendezvous - FWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2004	Buick	Rendezvous - FWD	Chassis	√	√	√	√	√	0506
2003	Buick	Century	Powertrain	√	√	√	√	√	0493
2003	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690 0628
2003	Buick	Century	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2003	Buick	Century	Chassis	√	√	√	√	√	0506
2003	Buick	LeSabre	Powertrain	√	√	√	√	√	0493
2003	Buick	LeSabre	Dash integration module				√	√	0651 0650 0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2003	Buick	LeSabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2003	Buick	LeSabre	Climate control panel		√	√	√	√	
2003	Buick	LeSabre	Instrument panel module		√	√	√	√	0630 0667
2003	Buick	LeSabre	Onstar	√	√	√	√	√	0647 0683
2003	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2003	Buick	LeSabre	Remote function actuation		√	√		√	
2003	Buick	LeSabre	Supplemental inflatable restraint		√	√			
2003	Buick	LeSabre	Vehicle theft deterrent		√	√	√	√	0651 0650 0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2003	Buick	LeSabre	Memory seat module	√	√	√	√	√	0647 0683
2003	Buick	LeSabre	Rear integration module		√	√	√	√	
2003	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2003	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2003	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630
2003	Buick	Park Avenue	Onstar	√	√	√	√		0647 0683
2003	Buick	Park Avenue	Personalization		√	√	√	√	0550 0550
2003	Buick	Park Avenue	Vehicle theft deterrent		√	√			
2003	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2003	Buick	Regal	Powertrain	√	√	√	√	√	0493
2003	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690 0628
2003	Buick	Regal	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2003	Buick	Regal	Chassis	√	√	√	√	√	0506
2003	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	0493
2003	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572

2003	Buick	Rendezvous - AWD	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√	√	0516
2003	Buick	Rendezvous - AWD	Vehicle theft deterrent		√	√			
2003	Buick	Rendezvous - AWD	Supplemental inflatable restraint		√	√	√		
2003	Buick	Rendezvous - AWD	Rear seat entertainment	√	√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - AWD	Chassis		√	√	√	√	0506
2003	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	0493
2003	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - FWD	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√	√	0516
2003	Buick	Rendezvous - FWD	Vehicle theft deterrent		√	√			
2003	Buick	Rendezvous - FWD	Supplemental inflatable restraint		√	√	√		
2003	Buick	Rendezvous - FWD	Rear seat entertainment	√	√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - FWD	Chassis		√	√	√	√	0506
2002	Buick	Century	Powertrain	√	√	√	√	√	0493
2002	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690 0628
2002	Buick	Century	Onstar	√	√	√	√	√	0647 0683
2002	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2002	Buick	Century	Chassis	√	√	√	√	√	0506
2002	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
2002	Buick	Lesabre	Dash integration module				√	√	0651 0650
2002	Buick	Lesabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2002	Buick	Lesabre	Instrument panel module		√	√	√	√	0630 0667
2002	Buick	Lesabre	Radio				√		0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552
2002	Buick	Lesabre	Onstar	√	√	√	√		0647 0683
2002	Buick	Lesabre	Remote function actuation		√	√		√	
2002	Buick	Lesabre	Supplemental inflatable restraint		√	√			
2002	Buick	Lesabre	Vehicle theft deterrent		√	√	√	√	0651 0650
2002	Buick	Lesabre	Memory seat module	√	√	√	√	√	0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552
2002	Buick	Lesabre	Rear integration module		√	√	√	√	
2002	Buick	Lesabre	DRP/ABS/TIM		√	√	√	√	0506
2002	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2002	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630
2002	Buick	Park Avenue	Onstar	√	√	√	√		0647 0683

2002	Buick	Park Avenue	Personalization		√	√	√	√	0550 0550
2002	Buick	Park Avenue	Vehicle theft deterrent		√	√			
2002	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2002	Buick	Regal	Powertrain	√	√	√	√	√	0493
2002	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690 0628
2002	Buick	Regal	Onstar	√	√	√	√	√	0647 0683
2002	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2002	Buick	Regal	Chassis	√	√	√	√	√	0506
2002	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	0493
2002	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - AWD	Onstar	√	√	√	√		0647 0683
2002	Buick	Rendezvous - AWD	Supplemental inflatable restraint		√	√			
2002	Buick	Rendezvous - AWD	Vehicle theft deterrent	√	√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - AWD	Chassis		√	√	√	√	0506
2002	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	0493
2002	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - FWD	Onstar	√	√	√	√		0647 0683
2002	Buick	Rendezvous - FWD	Supplemental inflatable restraint		√	√			
2002	Buick	Rendezvous - FWD	Vehicle theft deterrent	√	√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - FWD	Chassis		√	√	√	√	0506
2001	Buick	Century	Powertrain	√	√	√	√	√	0493
2001	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
2001	Buick	Century	Onstar	√	√	√	√		0683
2001	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2001	Buick	Century	Chassis	√	√	√	√	√	0506
2001	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
2001	Buick	Lesabre	Dash integration module				√	√	0650 0574 0576
2001	Buick	Lesabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2001	Buick	Lesabre	Instrument panel module		√	√	√	√	0630 0667
2001	Buick	Lesabre	Radio						0525
2001	Buick	Lesabre	Onstar	√	√	√	√		0683
2001	Buick	Lesabre	Vehicle theft deterrent		√	√			
2001	Buick	Lesabre	Supplemental inflatable restraint		√	√			
2001	Buick	Lesabre	Remote function actuation		√	√	√	√	0650 0574 0576
2001	Buick	Lesabre	Climate control panel	√	√	√	√	√	0525
2001	Buick	Lesabre	Rear integration module		√	√	√	√	
2001	Buick	Lesabre	DRP/ABS/TIM		√	√	√	√	0506

2001	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2001	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630
2001	Buick	Park Avenue	Onstar	√	√	√	√		0683
2001	Buick	Park Avenue	Vehicle theft deterrent		√	√			
2001	Buick	Park Avenue	Personalization		√	√	√	√	0550 0550
2001	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2001	Buick	Regal	Powertrain	√	√	√	√	√	0493
2001	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
2001	Buick	Regal	Onstar	√	√	√	√		0683
2001	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2001	Buick	Regal	Chassis	√	√	√	√	√	0506
2000	Buick	Century	Powertrain	√	√	√	√	√	0493
2000	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
2000	Buick	Century	Onstar	√	√	√	√		0683
2000	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2000	Buick	Century	Chassis	√	√	√		√	0506
2000	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
2000	Buick	Lesabre	Dash integration module		√	√	√	√	0650 0574 0576
2000	Buick	Lesabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0604 0691
2000	Buick	Lesabre	Instrument panel module		√	√	√	√	0630 0667
2000	Buick	Lesabre	Radio						0525
2000	Buick	Lesabre	Onstar	√	√	√	√	√	0683
2000	Buick	Lesabre	Climate control panel	√	√	√	√	√	0525
2000	Buick	Lesabre	Rear integration module		√	√	√	√	
2000	Buick	Lesabre	DRP/ABS/TIM		√	√	√	√	0506
2000	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2000	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630 0531 0692
2000	Buick	Park Avenue	Onstar	√	√	√	√		0683
2000	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2000	Buick	Regal	Powertrain	√	√	√	√	√	0493
2000	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
2000	Buick	Regal	Onstar	√	√	√	√		0683
2000	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2000	Buick	Regal	Chassis	√	√	√		√	0506
1999	Buick	Century	Powertrain	√	√	√	√	√	0493
1999	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690 0628
1999	Buick	Century	Onstar		√	√	√		0683
1999	Buick	Century	Onstar (VS-3B)		√	√	√		
1999	Buick	Century	Supplemental inflatable restraint		√	√	√		0515

1999	Buick	Century	Chassis	√	√	√	√	√	0506
1999	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
1999	Buick	Lesabre	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1999	Buick	Lesabre	Onstar		√	√	√		0683
1999	Buick	Lesabre	Onstar (VS-3B)		√	√	√		
1999	Buick	Lesabre	Remote function actuation		√	√	√	√	0711 0716 0717 0718 0719 0720 0721 0722
1999	Buick	Lesabre	ABS		√	√		√	0641 0506
1999	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
1999	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1999	Buick	Park Avenue	Onstar		√	√	√		0683
1999	Buick	Park Avenue	Onstar (VS-3B)		√	√	√		
1999	Buick	Park Avenue	ABS		√	√		√	0641 0506
1999	Buick	Regal	Powertrain	√	√	√	√	√	0493
1999	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690 0628
1999	Buick	Regal	Onstar		√	√	√		0683
1999	Buick	Regal	Onstar (VS-3B)		√	√	√		
1999	Buick	Regal	Supplemental inflatable restraint		√	√	√	√	0515
1999	Buick	Regal	Chassis	√	√	√		√	0506
1999	Buick	Riviera	Powertrain	√	√	√	√	√	0493
1999	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1999	Buick	Riviera	Onstar		√	√	√		0683
1999	Buick	Riviera	Onstar (VS-3B)		√	√	√		
1998	Buick	Century	Powertrain	√	√	√	√	√	0493
1998	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
1998	Buick	Century	Onstar		√	√	√		0683
1998	Buick	Century	Chassis		√	√		√	
1998	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
1998	Buick	Lesabre	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1998	Buick	Lesabre	Onstar		√	√	√		0683
1998	Buick	Lesabre	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1998	Buick	Lesabre	Entertainment & comfort bus		√	√	√	√	0683
1998	Buick	Lesabre	ABS		√	√		√	0641 0506
1998	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
1998	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1998	Buick	Park Avenue	Onstar		√	√	√		0683

1998	Buick	Park Avenue	ABS		√	√		√	0641 0506
1998	Buick	Regal	Powertrain	√	√	√	√	√	0493
1998	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
1998	Buick	Regal	Onstar		√	√	√		0683
1998	Buick	Regal	Chassis		√	√		√	
1998	Buick	Riviera	Powertrain	√	√	√	√	√	0493
1998	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1998	Buick	Riviera	Onstar		√	√	√		0683
1998	Buick	Skylark	Powertrain	√	√	√	√	√	0493
1998	Buick	Skylark	Chassis		√	√	√	√	
1997	Buick	Century	Powertrain	√	√	√	√	√	0493
1997	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
1997	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
1997	Buick	Lesabre	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1997	Buick	Lesabre	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1997	Buick	Lesabre	ABS		√	√		√	0641 0506
1997	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
1997	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1997	Buick	Park Avenue	ABS		√	√		√	0641 0506
1997	Buick	Regal	Powertrain	√	√	√	√	√	0493
1997	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
1997	Buick	Riviera	Powertrain	√	√	√	√	√	0493
1997	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1997	Buick	Skylark	Powertrain	√	√	√	√	√	0493
1996	Buick	Century	Powertrain	√	√	√	√	√	
1996	Buick	Lesabre	Powertrain	√	√	√	√	√	
1996	Buick	Lesabre	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Buick	Park Avenue	Powertrain	√	√	√	√	√	
1996	Buick	Park Avenue	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Buick	Regal	Powertrain	√	√	√	√	√	
1996	Buick	Riviera	Powertrain	√	√	√	√	√	
1996	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Buick	Roadmaster	Powertrain	√	√	√	√	√	
1996	Buick	Skylark	Powertrain	√	√	√	√	√	