



# Shenzhen Xtooltech Co., Ltd

## Pontiac Function List V12.60

### Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

\* This feature is new.

√ This feature is supported.

This feature is not supported.

※ This feature is partially supported.

Year	Make	Model Series	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
2010	Pontiac	G3	Transmission control module	√	√	√	√	√	
2010	Pontiac	G3	Engine Control Module	√	√	√	√	√	0493
2010	Pontiac	G3	Supplemental inflatable restraint	√	√	√	√	√	
2010	Pontiac	G3	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Pontiac	G3	Immobilizer	√	√	√	√	√	0508
2010	Pontiac	G3	Instrument panel cluster	√	√	√	√	√	
2010	Pontiac	G3	Radio	√	√	√			
2010	Pontiac	G3	Theft Deterrent Module	√	√	√	√		
2010	Pontiac	G3	Passenger presence system	√	√	√	√	√	0537
2010	Pontiac	G3	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Pontiac	G3	Tire pressure monitor	√	√	√	√		0510 0511
2010	Pontiac	G5	Engine Control Module	√	√	√	√	√	
2010	Pontiac	G5	Transmission control module	√	√	√	√	√	0493
2010	Pontiac	G5	Body Control Module	√	√	√	√	√	0515
2010	Pontiac	G5	Digital radio receiver	√	√	√	√	√	
2010	Pontiac	G5	Personal audio link module	√	√	√			0528
2010	Pontiac	G5	Radio	√	√	√	√	√	
2010	Pontiac	G5	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Pontiac	G5	Theft Deterrent Module	√	√	√	√		
2010	Pontiac	G5	Passenger presence system		√	√			
2010	Pontiac	G5	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Pontiac	G5	Driver information center	√	√	√	√	√	
2010	Pontiac	G5	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Pontiac	G5	Instrument panel cluster	√	√	√	√	√	
2010	Pontiac	G5	Electronic Brake Control Module	√	√	√	√	√	
2010	Pontiac	G5	Power steering control module	√	√	√	√	√	
2010	Pontiac	G6	Engine Control Module	√	√	√	√	√	0493
2010	Pontiac	G6	Transmission control module	√	√	√	√	√	0493

2010	Pontiac	G6	Digital radio receiver	√	√	√	√	√	
2010	Pontiac	G6	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Pontiac	G6	Personal audio link module	√	√	√			0528
2010	Pontiac	G6	Radio	√	√	√	√	√	0525
2010	Pontiac	G6	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Pontiac	G6	Passenger presence system		√	√			
2010	Pontiac	G6	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Pontiac	G6	Body Control Module	√	√	√	√	√	0500 0515
2010	Pontiac	G6	Folding top module	√	√	√	√	√	
2010	Pontiac	G6	Theft Deterrent Module	√	√	√	√		
2010	Pontiac	G6	Instrument panel cluster	√	√	√	√	√	
2010	Pontiac	G6	HVAC Control Module	√	√	√	√	√	
2010	Pontiac	G6	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Pontiac	G6	Power steering control module	√	√	√	√	√	
2010	Pontiac	Solstice	Engine Control Module	√	√	√	√	√	
2010	Pontiac	Solstice	Transmission control module	√	√	√	√	√	0493
2010	Pontiac	Solstice	Digital radio receiver	√	√	√	√	√	
2010	Pontiac	Solstice	Personal audio link module	√	√	√			0528
2010	Pontiac	Solstice	Radio	√	√	√	√	√	0525
2010	Pontiac	Solstice	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Pontiac	Solstice	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Pontiac	Solstice	Body Control Module	√	√	√	√	√	0515
2010	Pontiac	Solstice	Theft Deterrent Module	√	√	√	√		
2010	Pontiac	Solstice	Passenger presence system		√	√			
2010	Pontiac	Solstice	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Pontiac	Solstice	Instrument panel cluster	√	√	√	√	√	
2010	Pontiac	Solstice	Electronic Brake Control Module	√	√	√	√	√	
2010	Pontiac	Vibe - AWD	Powertrain control module	√	√	√	√	√	
2010	Pontiac	Vibe - AWD	Engine Control Module	√	√	√	√	√	
2010	Pontiac	Vibe - AWD	Serial data gateway (if equipped)				√		
2010	Pontiac	Vibe - AWD	Body Control Module		√	√	√	√	
2010	Pontiac	Vibe - AWD	Theft Deterrent Module				√	√	
2010	Pontiac	Vibe - AWD	Immobilizer		√	√	√	√	0568
2010	Pontiac	Vibe - AWD	Digital radio receiver	√	√	√	√		
2010	Pontiac	Vibe - AWD	Radio	√	√	√	√	√	
2010	Pontiac	Vibe - AWD	Veh. interface module	√	√	√	√	√	
2010	Pontiac	Vibe - AWD	Instrument panel cluster		√	√	√	√	0569
2010	Pontiac	Vibe - AWD	HVAC Control Module		√	√	√	√	
2010	Pontiac	Vibe - AWD	Supplemental inflatable restraint		√	√	√		
2010	Pontiac	Vibe - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495

2010	Pontiac	Vibe - AWD	Tire pressure monitor	√			√		0570
2010	Pontiac	Vibe - AWD	Electronic Brake Control Module		√	√	√	√	0506
2010	Pontiac	Vibe - AWD	Power steering control module		√	√	√		0536
2010	Pontiac	Vibe - FWD	Powertrain control module	√	√	√	√	√	
2010	Pontiac	Vibe - FWD	Engine Control Module	√	√	√	√	√	
2010	Pontiac	Vibe - FWD	Serial data gateway (if equipped)				√		
2010	Pontiac	Vibe - FWD	Body Control Module		√	√	√	√	
2010	Pontiac	Vibe - FWD	Theft Deterrent Module				√	√	
2010	Pontiac	Vibe - FWD	Immobilizer		√	√	√		0568
2010	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		
2010	Pontiac	Vibe - FWD	Radio	√	√	√	√	√	
2010	Pontiac	Vibe - FWD	Veh. interface module	√	√	√	√	√	
2010	Pontiac	Vibe - FWD	Instrument panel cluster		√	√	√	√	0569
2010	Pontiac	Vibe - FWD	HVAC Control Module		√	√	√	√	
2010	Pontiac	Vibe - FWD	Supplemental inflatable restraint		√	√	√		
2010	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Pontiac	Vibe - FWD	Tire pressure monitor	√			√		0570
2010	Pontiac	Vibe - FWD	Electronic Brake Control Module		√	√	√	√	0506
2010	Pontiac	Vibe - FWD	Power steering control module		√	√	√		0536
2010	Pontiac	Others	Supplemental inflatable restraint	√	√	√	√		
2010	Pontiac	Others	Immobilizer						0508
2010	Pontiac	Others	Engine Control Module	√	√	√	√	√	0507
2009	Pontiac	G3	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	G3	Transmission control module	√	√	√	√	√	0493
2009	Pontiac	G3	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	G3	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	G3	Radio	√	√	√			
2009	Pontiac	G3	Theft Deterrent Module	√	√	√	√		
2009	Pontiac	G3	Passenger presence system	√	√	√	√		0537
2009	Pontiac	G3	Supplemental inflatable restraint	√	√	√	√	√	0494 0495
2009	Pontiac	G3	Immobilizer	√	√	√	√	√	0508
2009	Pontiac	G3	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	G3	Tire pressure monitor	√	√	√	√		0510 0511
2009	Pontiac	G5	Transmission control module		√	√	√	√	
2009	Pontiac	G5	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	G5	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Pontiac	G5	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Pontiac	G5	Theft Deterrent Module	√	√	√	√		
2009	Pontiac	G5	Digital radio receiver	√	√	√	√	√	
2009	Pontiac	G5	Vehicle comm. interface module	√	√	√	√	√	0494 0495

2009	Pontiac	G5	Body Control Module	√	√	√	√	√	0515
2009	Pontiac	G5	Radio	√	√	√	√	√	
2009	Pontiac	G5	Personal audio link module	√	√	√	√	√	0528
2009	Pontiac	G5	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	G5	Passenger presence system	√	√	√	√	√	
2009	Pontiac	G5	Driver information center	√	√	√	√	√	
2009	Pontiac	G5	Electronic Brake Control Module	√	√	√	√	√	
2009	Pontiac	G5	Power steering control module	√	√	√	√	√	
2009	Pontiac	G6	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	G6	Transmission control module	√	√	√	√	√	0493
2009	Pontiac	G6	Passenger presence system	√	√	√	√	√	
2009	Pontiac	G6	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Pontiac	G6	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Pontiac	G6	Theft Deterrent Module	√	√	√	√	√	
2009	Pontiac	G6	Digital radio receiver	√	√	√	√	√	
2009	Pontiac	G6	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Pontiac	G6	Folding top module	√	√	√	√	√	
2009	Pontiac	G6	Body Control Module	√	√	√	√	√	0500 0515
2009	Pontiac	G6	HVAC Control Module	√	√	√	√	√	
2009	Pontiac	G6	Radio	√	√	√	√	√	0525
2009	Pontiac	G6	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	G6	Personal audio link module	√	√	√	√	√	0528
2009	Pontiac	G6	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	G6	Power steering control module	√	√	√	√	√	
2009	Pontiac	G8	Engine Control Module	√	√	√	√	√	
2009	Pontiac	G8	Transmission control module	√	√	√	√	√	0493
2009	Pontiac	G8	Digital radio receiver	√	√	√	√	√	
2009	Pontiac	G8	Body Control Module	√	√	√	√	√	0499 0497
2009	Pontiac	G8	Passenger presence system	√	√	√	√	√	0512
2009	Pontiac	G8	HVAC Control Module	√	√	√	√	√	
2009	Pontiac	G8	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	G8	Personal audio link module	√	√	√	√	√	0528
2009	Pontiac	G8	Radio	√	√	√	√	√	
2009	Pontiac	G8	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	G8	Driver Information Display	√	√	√	√	√	0583
2009	Pontiac	G8	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Pontiac	G8	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Pontiac	G8	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	Matiz	Transmission control module	√	√	√	√	√	
2009	Pontiac	Matiz	Engine Control Module	√	√	√	√	√	0507

2009	Pontiac	Matiz	Supplemental inflatable restraint	√	√	√	√		
2009	Pontiac	Matiz	Immobilizer						0508
2009	Pontiac	Matiz	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	Solstice	Transmission control module	√	√	√	√	√	
2009	Pontiac	Solstice	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	Solstice	Passenger presence system		√	√			
2009	Pontiac	Solstice	Remote control door lock receiver	√	√	√	√	√	0513 0521 0159
2009	Pontiac	Solstice	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Pontiac	Solstice	Theft Deterrent Module	√	√	√	√		
2009	Pontiac	Solstice	Radio	√	√	√	√	√	0525
2009	Pontiac	Solstice	Personal audio link module	√	√	√			0528
2009	Pontiac	Solstice	Digital radio receiver	√	√	√	√	√	
2009	Pontiac	Solstice	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	Solstice	Body Control Module	√	√	√	√	√	0515
2009	Pontiac	Solstice	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	Solstice	Electronic Brake Control Module	√	√	√	√	√	
2009	Pontiac	Vibe - AWD	Powertrain control module	√	√	√	√	√	
2009	Pontiac	Vibe - AWD	Engine Control Module	√	√	√	√	√	
2009	Pontiac	Vibe - AWD	Supplemental inflatable restraint		√	√	√		
2009	Pontiac	Vibe - AWD	Immobilizer		√	√	√		0568
2009	Pontiac	Vibe - AWD	Theft Deterrent Module				√	√	
2009	Pontiac	Vibe - AWD	Body Control Module		√	√	√	√	
2009	Pontiac	Vibe - AWD	Serial data gateway (if equipped)				√		
2009	Pontiac	Vibe - AWD	HVAC Control Module		√	√	√	√	
2009	Pontiac	Vibe - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	Vibe - AWD	Digital radio receiver	√	√	√	√		
2009	Pontiac	Vibe - AWD	Radio	√	√	√	√	√	
2009	Pontiac	Vibe - AWD	Instrument panel cluster		√	√	√	√	0569
2009	Pontiac	Vibe - AWD	Veh. interface module	√	√	√	√	√	0569
2009	Pontiac	Vibe - AWD	Electronic Brake Control Module		√	√	√	√	0506
2009	Pontiac	Vibe - AWD	Tire pressure monitor	√			√	√	0570
2009	Pontiac	Vibe - AWD	Power steering control module		√	√	√	√	0536
2009	Pontiac	Vibe - FWD	Powertrain control module	√	√	√	√	√	
2009	Pontiac	Vibe - FWD	Engine Control Module	√	√	√	√	√	
2009	Pontiac	Vibe - FWD	Supplemental inflatable restraint		√	√	√	√	
2009	Pontiac	Vibe - FWD	Immobilizer		√	√	√		0568
2009	Pontiac	Vibe - FWD	Theft Deterrent Module				√	√	
2009	Pontiac	Vibe - FWD	Body Control Module		√	√	√	√	
2009	Pontiac	Vibe - FWD	Serial data gateway (if equipped)				√		
2009	Pontiac	Vibe - FWD	HVAC Control Module		√	√	√	√	

2009	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		
2009	Pontiac	Vibe - FWD	Radio	√	√	√	√	√	
2009	Pontiac	Vibe - FWD	Instrument panel cluster		√	√	√	√	0569
2009	Pontiac	Vibe - FWD	Veh. interface module	√	√	√	√	√	0569
2009	Pontiac	Vibe - FWD	Electronic Brake Control Module		√	√	√	√	0506
2009	Pontiac	Vibe - FWD	Tire pressure monitor	√			√		0570
2009	Pontiac	Vibe - FWD	Power steering control module		√	√	√		0536
2009	Pontiac	Wave	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	Wave	Transmission control module	√	√	√	√	√	0493
2009	Pontiac	Wave	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	Wave	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	Wave	Radio	√	√	√	√		
2009	Pontiac	Wave	Theft Deterrent Module	√	√	√	√		
2009	Pontiac	Wave	Passenger presence system	√	√	√	√		0537
2009	Pontiac	Wave	Supplemental inflatable restraint	√	√	√	√	√	0494 0495
2009	Pontiac	Wave	Immobilizer	√	√	√	√	√	0508
2009	Pontiac	Wave	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	Wave	Tire pressure monitor	√	√	√	√		0510 0511
2009	Pontiac	Montana SV6	Transmission control module		√	√	√	√	
2009	Pontiac	Montana SV6	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	Montana SV6	Passenger presence system		√	√	√		0512
2009	Pontiac	Montana SV6	Remote control door lock receiver	√	√	√	√	√	0159
2009	Pontiac	Montana SV6	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Pontiac	Montana SV6	Radio	√	√	√	√		0586 0587 0525
2009	Pontiac	Montana SV6	Digital radio receiver	√	√	√	√	√	0516
2009	Pontiac	Montana SV6	Disc player and video dilay	√	√	√			
2009	Pontiac	Montana SV6	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Pontiac	Montana SV6	Body Control Module	√	√	√	√	√	0499
2009	Pontiac	Montana SV6	HVAC Control Module	√	√	√	√	√	
2009	Pontiac	Montana SV6	Left power sliding door module	√	√	√	√	√	
2009	Pontiac	Montana SV6	Right power sliding door module	√	√	√	√	√	
2009	Pontiac	Montana SV6	Instrument panel cluster	√	√	√	√	√	0512
2009	Pontiac	Montana SV6	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	Montana SV6 Ext.	Transmission control module		√	√	√	√	
2009	Pontiac	Montana SV6 Ext.	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	Montana SV6 Ext.	Passenger presence system		√	√	√		0512
2009	Pontiac	Montana SV6 Ext.	Remote control door lock receiver	√	√	√	√	√	0159
2009	Pontiac	Montana SV6 Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Pontiac	Montana SV6 Ext.	Radio	√	√	√	√		0586 0587 0525

2009	Pontiac	Montana SV6 Ext.	Digital radio receiver	√	√	√	√	√	0516
2009	Pontiac	Montana SV6 Ext.	Disc player and video dilay	√	√	√			
2009	Pontiac	Montana SV6 Ext.	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Pontiac	Montana SV6 Ext.	Body Control Module	√	√	√	√	√	0499
2009	Pontiac	Montana SV6 Ext.	HVAC Control Module	√	√	√	√	√	
2009	Pontiac	Montana SV6 Ext.	Left power sliding door module	√	√	√	√	√	
2009	Pontiac	Montana SV6 Ext.	Right power sliding door module	√	√	√	√	√	
2009	Pontiac	Montana SV6 Ext.	Instrument panel cluster	√	√	√	√	√	0512
2009	Pontiac	Montana SV6 Ext.	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	Torrent	Transmission control module		√	√	√	√	
2009	Pontiac	Torrent	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	Torrent	Rear drive system	√	√	√	√	√	0530
2009	Pontiac	Torrent	Radio	√	√	√	√	√	
2009	Pontiac	Torrent	Digital radio receiver	√	√	√	√	√	
2009	Pontiac	Torrent	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0585
2009	Pontiac	Torrent	Rollover sensor	√	√	√	√	√	0541
2009	Pontiac	Torrent	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Pontiac	Torrent	Body Control Module	√	√	√	√	√	0499 0497
2009	Pontiac	Torrent	Passenger presence system	√	√	√	√	√	0537
2009	Pontiac	Torrent	Heated seat module	√	√	√	√	√	
2009	Pontiac	Torrent	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	Torrent	HVAC Control Module	√	√	√	√	√	0500
2009	Pontiac	Torrent	Theft Deterrent Module	√	√	√	√	√	
2009	Pontiac	Torrent	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Pontiac	Torrent	Power steering control module		√	√	√	√	
2009	Pontiac	Torrent	Electronic Brake Control Module	√	√	√	√	√	
2008	Pontiac	G3	Engine Control Module	√	√	√	√	√	0507
2008	Pontiac	G3	Transmission control module	√	√	√	√	√	0507
2008	Pontiac	G3	Immobilizer						0508
2008	Pontiac	G3	Supplemental inflatable restraint	√	√	√	√	√	0508
2008	Pontiac	G3	Passenger presence system	√	√	√	√	√	0537
2008	Pontiac	G3	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	G3	Tire pressure monitor	√	√	√	√	√	0510 0511
2008	Pontiac	G5	Transmission control module		√	√	√	√	
2008	Pontiac	G5	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	G5	Passenger presence system		√	√	√	√	
2008	Pontiac	G5	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	G5	Theft Deterrent Module	√	√	√	√	√	
2008	Pontiac	G5	Body Control Module	√	√	√	√	√	0515
2008	Pontiac	G5	Digital radio receiver	√	√	√	√	√	

2008	Pontiac	G5	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2008	Pontiac	G5	Personal audio link module	√	√	√			0528
2008	Pontiac	G5	Radio	√	√	√	√	√	
2008	Pontiac	G5	Instrument panel cluster	√	√	√	√	√	
2008	Pontiac	G5	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Pontiac	G5	Power steering control module		√	√	√	√	
2008	Pontiac	G5	Electronic Brake Control Module	√	√	√	√	√	
2008	Pontiac	G6	Transmission control module		√	√	√	√	
2008	Pontiac	G6	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	G6	Body Control Module	√	√	√	√	√	0500 0515
2008	Pontiac	G6	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	G6	Theft Deterrent Module	√	√	√	√		
2008	Pontiac	G6	Passenger presence system		√	√			
2008	Pontiac	G6	Radio	√	√	√	√	√	0581 0582 0525
2008	Pontiac	G6	Digital radio receiver	√	√	√	√		
2008	Pontiac	G6	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2008	Pontiac	G6	HVAC Control Module	√	√	√	√	√	
2008	Pontiac	G6	Instrument panel cluster	√	√	√	√	√	
2008	Pontiac	G6	Folding top module	√	√	√	√	√	
2008	Pontiac	G6	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Pontiac	G6	Power steering control module	√	√	√	√	√	
2008	Pontiac	G6	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	G8	Engine Control Module	√	√	√	√	√	
2008	Pontiac	G8	Transmission control module	√	√	√	√	√	0493
2008	Pontiac	G8	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2008	Pontiac	G8	Body Control Module	√	√	√	√	√	0499 0497
2008	Pontiac	G8	Instrument panel cluster	√	√	√	√	√	
2008	Pontiac	G8	Passenger presence system	√	√	√	√	√	0512
2008	Pontiac	G8	Radio	√	√	√	√	√	
2008	Pontiac	G8	HVAC Control Module	√	√	√	√	√	
2008	Pontiac	G8	Driver Information Display	√	√	√	√	√	0583
2008	Pontiac	G8	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Pontiac	G8	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Pontiac	G8	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	Grand Prix	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	Grand Prix	Transmission control module		√	√	√	√	
2008	Pontiac	Grand Prix	Powertrain control module	√	√	√	√	√	0493



2008	Pontiac	Grand Prix	Remote control door lock receiver	√	√	√	√	√	0159
2008	Pontiac	Grand Prix	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	Grand Prix	Navigation radio	√	√	√	√	√	0525 0572 0524
2008	Pontiac	Grand Prix	Body Control Module	√	√	√	√	√	0499
2008	Pontiac	Grand Prix	Head up display		√	√			
2008	Pontiac	Grand Prix	Digital radio receiver	√	√	√	√		0516
2008	Pontiac	Grand Prix	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Pontiac	Grand Prix	HVAC Control Module	√	√	√	√	√	0500
2008	Pontiac	Grand Prix	Instrument panel cluster	√	√	√	√	√	
2008	Pontiac	Grand Prix	Driver information center	√	√	√	√	√	0159
2008	Pontiac	Grand Prix	Electronic Brake Control Module		√	√	√	√	0506
2008	Pontiac	Solstice	Transmission control module	√	√	√	√	√	
2008	Pontiac	Solstice	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	Solstice	Passenger presence system		√	√	√		
2008	Pontiac	Solstice	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	Solstice	Theft Deterrent Module	√	√	√	√		
2008	Pontiac	Solstice	Remote control door lock receiver	√	√	√	√	√	0513 0521 0159
2008	Pontiac	Solstice	Body Control Module	√	√	√	√	√	0515
2008	Pontiac	Solstice	Digital radio receiver	√	√	√	√		
2008	Pontiac	Solstice	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2008	Pontiac	Solstice	Personal audio link module	√	√	√			0528
2008	Pontiac	Solstice	Radio	√	√	√	√	√	0525
2008	Pontiac	Solstice	Instrument panel cluster	√	√	√	√	√	
2008	Pontiac	Solstice	Electronic Brake Control Module	√	√	√	√	√	
2008	Pontiac	Vibe - FWD	Powertrain control module	√	√	√	√	√	
2008	Pontiac	Vibe - FWD	Engine Control Module	√	√	√	√	√	
2008	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		0516
2008	Pontiac	Vibe - FWD	Immobilizer		√	√	√	√	0568
2008	Pontiac	Vibe - FWD	Supplemental inflatable restraint		√	√	√		
2008	Pontiac	Vibe - FWD	Radio		√	√	√	√	0572
2008	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2008	Pontiac	Vibe - FWD	Tire pressure monitor	√			√		0570
2008	Pontiac	Vibe - FWD	Electronic Brake Control Module	√	√	√	√	√	0597
2008	Pontiac	Wave	Engine Control Module		√	√	√	√	0493
2008	Pontiac	Wave	Transmission control module	√	√	√	√	√	0493
2008	Pontiac	Wave	Immobilizer						0508
2008	Pontiac	Wave	Supplemental inflatable restraint	√	√	√	√	√	0508
2008	Pontiac	Wave	Electronic Brake Control Module	√	√	√	√	√	0506

2008	Pontiac	Wave	Tire pressure monitor	√	√	√	√		0510 0511
2008	Pontiac	Montana SV6	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	Montana SV6	Transmission control module	√	√	√	√	√	0493
2008	Pontiac	Montana SV6	Remote control door lock receiver	√	√	√	√	√	0159
2008	Pontiac	Montana SV6	Passenger presence system		√	√			0512
2008	Pontiac	Montana SV6	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	Montana SV6	Body Control Module	√	√	√	√	√	0499
2008	Pontiac	Montana SV6	Digital radio receiver	√	√	√	√		0516
2008	Pontiac	Montana SV6	Disc player and video dilay	√	√	√			
2008	Pontiac	Montana SV6	Radio	√	√	√	√		0586 0587 0525
2008	Pontiac	Montana SV6	HVAC Control Module	√	√	√	√	√	
2008	Pontiac	Montana SV6	Left power sliding door module	√	√	√	√	√	
2008	Pontiac	Montana SV6	Right power sliding door module	√	√	√	√	√	
2008	Pontiac	Montana SV6	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Pontiac	Montana SV6	Navigation radio	√	√	√	√	√	0525
2008	Pontiac	Montana SV6	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	Montana SV6 Ext.	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	Montana SV6 Ext.	Transmission control module	√	√	√	√	√	0493
2008	Pontiac	Montana SV6 Ext.	Remote control door lock receiver	√	√	√	√	√	0159
2008	Pontiac	Montana SV6 Ext.	Passenger presence system		√	√			0512
2008	Pontiac	Montana SV6 Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	Montana SV6 Ext.	Body Control Module	√	√	√	√	√	0499
2008	Pontiac	Montana SV6 Ext.	Digital radio receiver	√	√	√	√		0516
2008	Pontiac	Montana SV6 Ext.	Disc player and video dilay	√	√	√			
2008	Pontiac	Montana SV6 Ext.	Radio	√	√	√	√		0586 0587 0525
2008	Pontiac	Montana SV6 Ext.	HVAC Control Module	√	√	√	√	√	
2008	Pontiac	Montana SV6 Ext.	Left power sliding door module	√	√	√	√	√	
2008	Pontiac	Montana SV6 Ext.	Right power sliding door module	√	√	√	√	√	
2008	Pontiac	Montana SV6 Ext.	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Pontiac	Montana SV6 Ext.	Navigation radio	√	√	√	√	√	0525
2008	Pontiac	Montana SV6 Ext.	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	Torrent	Transmission control module		√	√	√	√	
2008	Pontiac	Torrent	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	Torrent	Rear drive system	√	√	√	√	√	0530
2008	Pontiac	Torrent	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2008	Pontiac	Torrent	Digital radio receiver	√	√	√	√		
2008	Pontiac	Torrent	Rollover sensor	√	√	√	√		0541
2008	Pontiac	Torrent	Body Control Module	√	√	√	√	√	0499 0497
2008	Pontiac	Torrent	Instrument panel cluster	√	√	√	√	√	

2008	Pontiac	Torrent	Passenger presence system	√	√	√	√		0537
2008	Pontiac	Torrent	Heated seat module	√	√	√	√		
2008	Pontiac	Torrent	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Pontiac	Torrent	Radio	√	√	√	√	√	
2008	Pontiac	Torrent	HVAC Control Module	√	√	√	√	√	0500
2008	Pontiac	Torrent	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Pontiac	Torrent	Theft Deterrent Module	√	√	√	√		
2008	Pontiac	Torrent	Power steering control module		√	√	√		
2008	Pontiac	Torrent	Electronic Brake Control Module	√	√	√	√	√	
2007	Pontiac	G3	Engine Control Module		√	√	√		
2007	Pontiac	G3	Transmission control module	√	√	√	√	√	0493
2007	Pontiac	G3	Supplemental inflatable restraint	√	√	√	√	√	
2007	Pontiac	G3	Immobilizer	√	√	√	√	√	0508
2007	Pontiac	G3	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Pontiac	G5	Transmission control module		√	√	√	√	
2007	Pontiac	G5	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	G5	Theft Deterrent Module	√	√	√	√		
2007	Pontiac	G5	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	G5	Passenger presence system		√	√	√		
2007	Pontiac	G5	Digital radio receiver	√	√	√	√		
2007	Pontiac	G5	Radio	√	√	√	√	√	
2007	Pontiac	G5	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2007	Pontiac	G5	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	G5	Body Control Module	√	√	√	√	√	0515
2007	Pontiac	G5	Personal audio link module	√	√	√	√		0528
2007	Pontiac	G5	Remote control door lock receiver	√	√	√	√	√	
2007	Pontiac	G5	Electronic Brake Control Module	√	√	√	√	√	
2007	Pontiac	G5	Power steering control module		√	√	√		
2007	Pontiac	G6	Transmission control module		√	√	√	√	
2007	Pontiac	G6	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	G6	Passenger presence system		√	√	√		
2007	Pontiac	G6	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	G6	Theft Deterrent Module	√	√	√	√		
2007	Pontiac	G6	Digital radio receiver	√	√	√	√		
2007	Pontiac	G6	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	G6	Body Control Module	√	√	√	√	√	0500 0515
2007	Pontiac	G6	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2007	Pontiac	G6	Radio	√	√	√	√	√	0581 0582 0525

2007	Pontiac	G6	Folding top module	√	√	√	√	√	
2007	Pontiac	G6	Remote control door lock receiver	√	√	√	√	√	
2007	Pontiac	G6	HVAC Control Module	√	√	√	√	√	0515
2007	Pontiac	G6	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Pontiac	G6	Power steering control module	√	√	√	√	√	0596
2007	Pontiac	Grand Prix	Transmission control module		√	√	√	√	
2007	Pontiac	Grand Prix	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Grand Prix	Powertrain control module	√	√	√	√	√	
2007	Pontiac	Grand Prix	Digital radio receiver	√	√	√	√	√	0516
2007	Pontiac	Grand Prix	Remote control door lock receiver	√	√	√	√	√	0159
2007	Pontiac	Grand Prix	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	Grand Prix	Body Control Module	√	√	√	√	√	0499
2007	Pontiac	Grand Prix	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	Grand Prix	HVAC Control Module	√	√	√	√	√	0500
2007	Pontiac	Grand Prix	Driver information center		√	√	√	√	
2007	Pontiac	Grand Prix	Navigation radio	√	√	√	√	√	0525 0572 0524
2007	Pontiac	Grand Prix	Head up display		√	√	√	√	
2007	Pontiac	Grand Prix	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2007	Pontiac	Grand Prix	Electronic Brake Control Module		√	√	√	√	0506
2007	Pontiac	Matiz	Transmission control module	√	√	√	√	√	
2007	Pontiac	Matiz	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Matiz	Passenger presence system		√	√	√	√	
2007	Pontiac	Matiz	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	Matiz	Theft Deterrent Module	√	√	√	√	√	
2007	Pontiac	Matiz	Digital radio receiver	√	√	√	√	√	
2007	Pontiac	Matiz	Remote control door lock receiver	√	√	√	√	√	0521
2007	Pontiac	Matiz	Radio	√	√	√	√	√	0525
2007	Pontiac	Matiz	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	Matiz	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2007	Pontiac	Matiz	Body Control Module	√	√	√	√	√	0515
2007	Pontiac	Matiz	Personal audio link module	√	√	√	√	√	0528
2007	Pontiac	Matiz	Electronic Brake Control Module	√	√	√	√	√	
2007	Pontiac	Solstice	Transmission control module	√	√	√	√	√	
2007	Pontiac	Solstice	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Solstice	Passenger presence system		√	√	√	√	
2007	Pontiac	Solstice	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	Solstice	Theft Deterrent Module	√	√	√	√	√	
2007	Pontiac	Solstice	Digital radio receiver	√	√	√	√	√	

2007	Pontiac	Solstice	Remote control door lock receiver	√	√	√	√	√	0521
2007	Pontiac	Solstice	Radio	√	√	√	√	√	0525
2007	Pontiac	Solstice	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	Solstice	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2007	Pontiac	Solstice	Body Control Module	√	√	√	√	√	0515
2007	Pontiac	Solstice	Personal audio link module	√	√	√	√	√	0528
2007	Pontiac	Solstice	Electronic Brake Control Module	√	√	√	√	√	
2007	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√	√	0516
2007	Pontiac	Vibe - FWD	Supplemental inflatable restraint		√	√	√	√	
2007	Pontiac	Vibe - FWD	Radio		√	√	√	√	0572
2007	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2007	Pontiac	Vibe - FWD	Electronic Brake Control Module		√	√	√	√	0597
2007	Pontiac	Wave	Engine Control Module		√	√	√	√	
2007	Pontiac	Wave	Transmission control module	√	√	√	√	√	0493
2007	Pontiac	Wave	Supplemental inflatable restraint	√	√	√	√	√	
2007	Pontiac	Wave	Immobilizer	√	√	√	√	√	0508
2007	Pontiac	Wave	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Pontiac	Montana SV6	Transmission control module		√	√	√	√	
2007	Pontiac	Montana SV6	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Montana SV6	Passenger presence system		√	√	√	√	0512
2007	Pontiac	Montana SV6	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	Montana SV6	Mobile digital media		√	√	√	√	
2007	Pontiac	Montana SV6	Radio	√	√	√	√	√	0587 0524 0525
2007	Pontiac	Montana SV6	Disc player and video dilay	√	√	√	√	√	
2007	Pontiac	Montana SV6	Body Control Module	√	√	√	√	√	0499
2007	Pontiac	Montana SV6	Left power sliding door module	√	√	√	√	√	
2007	Pontiac	Montana SV6	Right power sliding door module	√	√	√	√	√	
2007	Pontiac	Montana SV6	HVAC Control Module	√	√	√	√	√	
2007	Pontiac	Montana SV6	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2007	Pontiac	Montana SV6	Digital radio receiver	√	√	√	√	√	0516
2007	Pontiac	Montana SV6	Navigation radio	√	√	√	√	√	0525
2007	Pontiac	Montana SV6	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Pontiac	Montana SV6 Ext.	Transmission control module		√	√	√	√	
2007	Pontiac	Montana SV6 Ext.	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Montana SV6 Ext.	Passenger presence system		√	√	√	√	0512
2007	Pontiac	Montana SV6 Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	Montana SV6 Ext.	Mobile digital media		√	√	√	√	

2007	Pontiac	Montana SV6 Ext.	Radio	√	√	√	√	√	0587 0524 0525
2007	Pontiac	Montana SV6 Ext.	Disc player and video delay	√	√	√			
2007	Pontiac	Montana SV6 Ext.	Body Control Module	√	√	√	√	√	0499
2007	Pontiac	Montana SV6 Ext.	Left power sliding door module	√	√	√	√	√	
2007	Pontiac	Montana SV6 Ext.	Right power sliding door module	√	√	√	√	√	
2007	Pontiac	Montana SV6 Ext.	HVAC Control Module	√	√	√	√	√	
2007	Pontiac	Montana SV6 Ext.	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2007	Pontiac	Montana SV6 Ext.	Digital radio receiver	√	√	√	√	√	0516
2007	Pontiac	Montana SV6 Ext.	Navigation radio	√	√	√	√	√	0525
2007	Pontiac	Montana SV6 Ext.	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Pontiac	Torrent	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Torrent	Rear drive system	√	√	√	√	√	0530
2007	Pontiac	Torrent	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495 0585
2007	Pontiac	Torrent	Radio	√	√	√	√	√	
2007	Pontiac	Torrent	Digital radio receiver	√	√	√	√	√	
2007	Pontiac	Torrent	Theft Deterrent Module	√	√	√	√	√	
2007	Pontiac	Torrent	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Pontiac	Torrent	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Pontiac	Torrent	Heated seat module	√	√	√	√	√	
2007	Pontiac	Torrent	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	Torrent	Passenger presence system	√	√	√	√	√	0537
2007	Pontiac	Torrent	Rollover sensor	√	√	√	√	√	0541
2007	Pontiac	Torrent	Body Control Module	√	√	√	√	√	0499 0497
2007	Pontiac	Torrent	HVAC Control Module	√	√	√	√	√	0500
2007	Pontiac	Torrent	Power steering control module		√	√	√	√	
2007	Pontiac	Torrent	Electronic Brake Control Module	√	√	√	√	√	
2006	Pontiac	G6	HVAC systems - automatic	√	√	√	√	√	
2006	Pontiac	G6	HVAC systems - manual	√	√	√	√	√	0493
2006	Pontiac	G6	Power steering system		√	√	√	√	0596
2006	Pontiac	G6	Antilock Braking System	√	√	√	√	√	0506
2006	Pontiac	G6	Park brake	√	√	√	√	√	0515
2006	Pontiac	G6	Engine controls	√	√	√	√	√	0493
2006	Pontiac	G6	Engine cooling	√	√	√	√	√	0493
2006	Pontiac	G6	Engine electrical	√	√	√	√	√	0515
2006	Pontiac	G6	Shift lock control	√	√	√	√	√	0515
2006	Pontiac	G6	Automatic transaxle	√	√	√	√	√	0515
2006	Pontiac	G6	Body rear end	√	√	√	√	√	0515

2006	Pontiac	G6	Cellular communication	√	√	√	√	√	0494 0591 0565 0495 0585
2006	Pontiac	G6	Cruise Control	√	√	√	√	√	0515
2006	Pontiac	G6	Door	√	√	√	√	√	0515
2006	Pontiac	G6	Entertainment	√	√	√	√	√	0581 0582 0525
2006	Pontiac	G6	Horns	√	√	√	√	√	0515
2006	Pontiac	G6	Instrument panel	√	√	√	√	√	0493
2006	Pontiac	G6	Lighting systems	√	√	√	√	√	0515
2006	Pontiac	G6	Roof	√	√	√	√	√	
2006	Pontiac	G6	Stationary windows	√	√	√	√	√	0515
2006	Pontiac	G6	Theft deterrent	√	√	√	√	√	0515
2006	Pontiac	G6	Wipers/washer systems	√	√	√	√	√	0515
2006	Pontiac	G6	Adjustable pedals	√	√	√	√	√	0515
2006	Pontiac	G6	Keyless entry	√	√	√	√	√	0493
2006	Pontiac	G6	Seat belts	√	√	√	√	√	0515
2006	Pontiac	G6	SIR	√	√	√	√	√	0515
2006	Pontiac	GTO	Powertrain	√	√	√	√	√	0493
2006	Pontiac	GTO	Supplemental inflatable restraint	√	√	√	√	√	
2006	Pontiac	GTO	ABS/TCS	√	√	√	√	√	0562
2006	Pontiac	Grand Prix	HVAC systems - manual	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	HVAC systems - automatic	√	√	√	√	√	0500
2006	Pontiac	Grand Prix	Antilock Braking System	√	√	√	√	√	0493
2006	Pontiac	Grand Prix	Engine controls	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Engine cooling	√	√	√	√	√	0493
2006	Pontiac	Grand Prix	Engine electrical	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Shift lock control	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Automatic transaxle	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Pontiac	Grand Prix	Cruise Control	√	√	√	√	√	0493
2006	Pontiac	Grand Prix	Entertainment	√	√	√	√	√	0516
2006	Pontiac	Grand Prix	Horns	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Instrument panel	√	√	√	√	√	0493
2006	Pontiac	Grand Prix	Keyless entry	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Lighting systems	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Stationary windows	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Theft deterrent	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Wipers/washer systems	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Seat belts	√	√	√	√	√	0639 0515
2006	Pontiac	Grand Prix	SIR	√	√	√	√	√	0639 0515
2006	Pontiac	Solstice	HVAC systems - manual	√	√	√	√	√	0515

2006	Pontiac	Solstice	Antilock Braking System	√	√	√	√	√	0515
2006	Pontiac	Solstice	Park brake	√	√	√	√	√	0515
2006	Pontiac	Solstice	Engine controls	√	√	√	√	√	0493
2006	Pontiac	Solstice	Engine cooling	√	√	√	√	√	0493
2006	Pontiac	Solstice	Engine electrical	√	√	√	√	√	0515
2006	Pontiac	Solstice	Shift lock control	√	√	√	√	√	0515
2006	Pontiac	Solstice	Automatic transmission	√	√	√	√	√	
2006	Pontiac	Solstice	Body rear end	√	√	√	√	√	0515
2006	Pontiac	Solstice	Cellular communication	√	√	√	√	√	0494 0591 0565 0495 0585
2006	Pontiac	Solstice	Cruise Control	√	√	√	√	√	0515
2006	Pontiac	Solstice	Door	√	√	√	√	√	0515
2006	Pontiac	Solstice	Entertainment	√	√	√	√	√	0525
2006	Pontiac	Solstice	Horns	√	√	√	√	√	0515
2006	Pontiac	Solstice	Instrument panel	√	√	√	√	√	0515
2006	Pontiac	Solstice	Keyless entry	√	√	√	√	√	0515
2006	Pontiac	Solstice	Lighting systems	√	√	√	√	√	0515
2006	Pontiac	Solstice	Body Control Module	√	√	√	√	√	0515
2006	Pontiac	Solstice	Stationary windows	√	√	√	√	√	0515
2006	Pontiac	Solstice	Theft deterrent	√	√	√	√	√	0515
2006	Pontiac	Solstice	Wipers/washer systems	√	√	√	√	√	0515
2006	Pontiac	Solstice	Seat belts	√	√	√	√	√	0515
2006	Pontiac	Solstice	SIR	√	√	√	√	√	0515
2006	Pontiac	Pursuit	HVAC systems - manual	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Power steering system		√	√	√	√	
2006	Pontiac	Pursuit	Antilock Braking System	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Park brake	√	√	√			
2006	Pontiac	Pursuit	Engine controls	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Engine cooling	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Engine electrical	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Shift lock control	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Automatic transaxle	√	√	√	√	√	
2006	Pontiac	Pursuit	Cellular communication	√	√	√	√	√	0647 0585
2006	Pontiac	Pursuit	Cruise Control	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Entertainment	√	√	√	√	√	
2006	Pontiac	Pursuit	Horns	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Instrument panel	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Keyless entry	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Lighting systems	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Stationary windows	√	√	√	√	√	0515



2006	Pontiac	Pursuit	Theft deterrent	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Seat belts	√	√	√	√	√	0515
2006	Pontiac	Pursuit	SIR	√	√	√	√	√	0515
2006	Pontiac	Vibe - AWD	Digital radio receiver	√	√	√	√	√	0516
2006	Pontiac	Vibe - AWD	Radio		√	√	√	√	0572
2006	Pontiac	Vibe - AWD	Supplemental inflatable restraint		√	√	√	√	
2006	Pontiac	Vibe - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Pontiac	Vibe - AWD	Chassis		√	√	√	√	0597
2006	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√	√	0516
2006	Pontiac	Vibe - FWD	Radio		√	√	√	√	0572
2006	Pontiac	Vibe - FWD	Supplemental inflatable restraint		√	√	√	√	
2006	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Pontiac	Vibe - FWD	Chassis		√	√	√	√	0597
2006	Pontiac	Wave	Powertrain	√	√	√	√	√	0493
2006	Pontiac	Wave	Supplemental inflatable restraint	√	√	√	√	√	
2006	Pontiac	Wave	Chassis	√	√	√	√	√	0506
2006	Pontiac	Others	Antilock Braking System	√	√	√	√	√	0506
2006	Pontiac	Others	Powertrain	√	√	√	√	√	0507
2006	Pontiac	Others	Supplemental inflatable restraint		√	√	√	√	
2006	Pontiac	Montana SV6	HVAC systems - manual	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Antilock Braking System	√	√	√	√	√	0506
2006	Pontiac	Montana SV6	Engine controls		√	√	√	√	
2006	Pontiac	Montana SV6	Engine cooling		√	√	√	√	
2006	Pontiac	Montana SV6	Engine electrical	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Shift lock control	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Automatic transaxle	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Pontiac	Montana SV6	Cruise Control	√	√	√	√	√	0493
2006	Pontiac	Montana SV6	Door	√	√	√	√	√	
2006	Pontiac	Montana SV6	Entertainment	√	√	√	√	√	0516
2006	Pontiac	Montana SV6	Horns	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Instrument panel	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Keyless entry	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Lighting systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Navigation System	√	√	√	√	√	0525
2006	Pontiac	Montana SV6	Stationary windows	√	√	√	√	√	
2006	Pontiac	Montana SV6	Theft deterrent	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Wipers/washer systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Seat belts	√	√	√	√	√	0639 0515
2006	Pontiac	Montana SV6	SIR	√	√	√	√	√	0639 0515

2006	Pontiac	Montana SV6 - AWD	HVAC systems - manual	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Antilock Braking System	√	√	√	√	√	0506
2006	Pontiac	Montana SV6 - AWD	Engine controls		√	√	√	√	
2006	Pontiac	Montana SV6 - AWD	Engine cooling		√	√	√	√	
2006	Pontiac	Montana SV6 - AWD	Engine electrical	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Shift lock control	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Automatic transaxle	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Pontiac	Montana SV6 - AWD	Cruise Control	√	√	√	√	√	0493
2006	Pontiac	Montana SV6 - AWD	Door	√	√	√	√	√	
2006	Pontiac	Montana SV6 - AWD	Entertainment	√	√	√	√	√	0516
2006	Pontiac	Montana SV6 - AWD	Horns	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Instrument panel	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Keyless entry	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Lighting systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Navigation System	√	√	√	√	√	0525
2006	Pontiac	Montana SV6 - AWD	Stationary windows	√	√	√	√	√	
2006	Pontiac	Montana SV6 - AWD	Theft deterrent	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Wipers/washer systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Seat belts	√	√	√	√	√	0639 0515
2006	Pontiac	Montana SV6 - AWD	SIR	√	√	√	√	√	0639 0515
2006	Pontiac	Montana SV6 Ext.	HVAC systems - manual	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Antilock Braking System	√	√	√	√	√	0506
2006	Pontiac	Montana SV6 Ext.	Engine controls		√	√	√	√	
2006	Pontiac	Montana SV6 Ext.	Engine cooling		√	√	√	√	
2006	Pontiac	Montana SV6 Ext.	Engine electrical	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Shift lock control	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Automatic transaxle	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Pontiac	Montana SV6 Ext.	Cruise Control	√	√	√	√	√	0493
2006	Pontiac	Montana SV6 Ext.	Door	√	√	√	√	√	
2006	Pontiac	Montana SV6 Ext.	Entertainment	√	√	√	√	√	0516
2006	Pontiac	Montana SV6 Ext.	Horns	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Instrument panel	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Keyless entry	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Lighting systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Navigation System	√	√	√	√	√	0525
2006	Pontiac	Montana SV6 Ext.	Stationary windows	√	√	√	√	√	
2006	Pontiac	Montana SV6 Ext.	Theft deterrent	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Wipers/washer systems	√	√	√	√	√	0499

2006	Pontiac	Montana SV6 Ext.	Seat belts	√	√	√	√	√	0639 0515
2006	Pontiac	Montana SV6 Ext.	SIR	√	√	√	√	√	0639 0515
2006	Pontiac	Torrent	Powertrain	√	√	√	√	√	0493
2006	Pontiac	Torrent	Digital radio receiver	√	√	√	√	√	0516
2006	Pontiac	Torrent	Instrument panel cluster	√				√	
2006	Pontiac	Torrent	Radio	√	√	√	√	√	0573 0578 0579 0572 0552 0525
2006	Pontiac	Torrent	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2006	Pontiac	Torrent	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	Pontiac	Torrent	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2006	Pontiac	Torrent	Electric power steering		√	√	√	√	
2006	Pontiac	Torrent	Antilock Braking System	√	√	√	√	√	0506
2005	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2005	Pontiac	Bonneville	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2005	Pontiac	Bonneville	Head up dilay	√	√	√	√	√	
2005	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	
2005	Pontiac	Bonneville	Driver door module	√	√	√	√	√	
2005	Pontiac	Bonneville	CD changer	√	√	√	√	√	
2005	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2005	Pontiac	Bonneville	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Bonneville	Digital radio receiver	√	√	√	√	√	0516
2005	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√	√	0605
2005	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2005	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√	√	0677
2005	Pontiac	Bonneville	Instrument panel cluster	√	√	√	√	√	
2005	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	
2005	Pontiac	Bonneville	Instrument panel module	√	√	√	√	√	0630 0667
2005	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2005	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2005	Pontiac	Bonneville	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2005	Pontiac	Bonneville	Head up dilay	√	√	√	√	√	
2005	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	
2005	Pontiac	Bonneville	Driver door module	√	√	√	√	√	
2005	Pontiac	Bonneville	CD changer	√	√	√	√	√	

2005	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2005	Pontiac	Bonneville	Memory seat module	√	√	√	√	√	
2005	Pontiac	Bonneville	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Bonneville	Digital radio receiver	√	√	√	√	√	0516
2005	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√	√	0605
2005	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2005	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√	√	0677
2005	Pontiac	Bonneville	Instrument panel cluster	√	√	√	√	√	
2005	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	
2005	Pontiac	Bonneville	Instrument panel module	√	√	√	√	√	0630 0667
2005	Pontiac	Bonneville	DRP/ABS/TIM	√	√	√	√	√	0506
2005	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2005	Pontiac	Bonneville	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2005	Pontiac	Bonneville	Head up display	√	√	√	√	√	
2005	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	0678
2005	Pontiac	Bonneville	Driver door module	√	√	√	√	√	
2005	Pontiac	Bonneville	CD changer	√	√	√	√	√	
2005	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2005	Pontiac	Bonneville	Memory seat module	√	√	√	√	√	
2005	Pontiac	Bonneville	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Bonneville	Digital radio receiver	√	√	√	√	√	0516
2005	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√	√	0605
2005	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2005	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√	√	0677
2005	Pontiac	Bonneville	Instrument panel cluster	√	√	√	√	√	
2005	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	
2005	Pontiac	Bonneville	Instrument panel module	√	√	√	√	√	0630 0667
2005	Pontiac	Bonneville	DRP/ABS/TIM	√	√	√	√	√	0506
2005	Pontiac	Bonneville	Magna steer	√	√	√	√	√	
2005	Pontiac	G6	HVAC systems - manual	√	√	√	√	√	
2005	Pontiac	G6	Power steering system	√	√	√	√	√	0596
2005	Pontiac	G6	Antilock Braking System	√	√	√	√	√	0506
2005	Pontiac	G6	Hydraulic brakes	√	√	√	√	√	
2005	Pontiac	G6	Engine controls	√	√	√	√	√	0493
2005	Pontiac	G6	Engine cooling	√	√	√	√	√	

2005	Pontiac	G6	Engine electrical	√	√	√	√	√	0515
2005	Pontiac	G6	Shift lock control		√	√	√		
2005	Pontiac	G6	Automatic transaxle		√	√	√	√	
2005	Pontiac	G6	Body rear end		√	√	√	√	
2005	Pontiac	G6	Cellular communication	√	√	√	√	√	0647
2005	Pontiac	G6	Cruise Control		√	√	√		
2005	Pontiac	G6	Door		√	√	√	√	
2005	Pontiac	G6	Entertainment	√	√	√	√	√	0516
2005	Pontiac	G6	Instrument panel	√	√	√	√	√	
2005	Pontiac	G6	Keyless entry		√	√	√		
2005	Pontiac	G6	Lighting systems		√	√	√	√	
2005	Pontiac	G6	Stationary windows		√	√	√	√	
2005	Pontiac	G6	Theft deterrent	√	√	√	√	√	
2005	Pontiac	G6	Wipers/washer systems		√	√	√	√	
2005	Pontiac	G6	Adjustable pedals		√	√	√	√	
2005	Pontiac	G6	Seat belts	√	√	√	√	√	0515
2005	Pontiac	G6	SIR	√	√	√	√	√	0515
2005	Pontiac	GTO	Powertrain	√	√	√	√	√	0493
2005	Pontiac	GTO	Supplemental inflatable restraint		√	√			
2005	Pontiac	GTO	ABS/TCS	√	√	√	√	√	0562
2005	Pontiac	Grand Am	Powertrain	√	√	√	√	√	
2005	Pontiac	Grand Am	Radio		√	√	√	√	0675
2005	Pontiac	Grand Am	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Grand Am	Supplemental inflatable restraint	√	√	√	√		
2005	Pontiac	Grand Am	Body Control Module	√	√	√	√	√	0633
2005	Pontiac	Grand Am	Remote function actuation	√	√	√	√	√	
2005	Pontiac	Grand Am	Chassis	√	√	√	√	√	0506
2005	Pontiac	Grand Prix	HVAC systems - manual	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	HVAC systems - automatic	√	√	√	√	√	0500
2005	Pontiac	Grand Prix	Brakes	√	√	√	√	√	0506
2005	Pontiac	Grand Prix	Engine controls	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Engine cooling	√	√	√	√	√	0493
2005	Pontiac	Grand Prix	Engine electrical	√	√	√	√	√	0515
2005	Pontiac	Grand Prix	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Automatic transaxle	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Grand Prix	Cruise Control	√	√	√	√	√	0493
2005	Pontiac	Grand Prix	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Grand Prix	Horns	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Instrument panel	√	√	√	√	√	0493

2005	Pontiac	Grand Prix	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Navigation System	√	√	√	√		0525
2005	Pontiac	Grand Prix	Seats	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Stationary windows	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Seat belts	√	√	√	√		0515
2005	Pontiac	Grand Prix	SIR	√	√	√	√		0515
2005	Pontiac	Matiz	Powertrain	√	√	√	√	√	
2005	Pontiac	Matiz	Chassis	√	√	√	√	√	
2005	Pontiac	Pursuit	HVAC systems - manual	√	√	√	√	√	0493
2005	Pontiac	Pursuit	Power steering system		√	√	√		
2005	Pontiac	Pursuit	Antilock Braking System	√	√	√	√	√	0506
2005	Pontiac	Pursuit	Park brake	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Engine controls	√	√	√	√	√	0493
2005	Pontiac	Pursuit	Engine cooling	√	√	√	√	√	0493
2005	Pontiac	Pursuit	Engine electrical	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Shift lock control	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Automatic transaxle	√	√	√	√	√	
2005	Pontiac	Pursuit	Body rear end	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Cellular communication	√	√	√	√	√	0647 0585
2005	Pontiac	Pursuit	Cruise Control	√	√	√	√	√	0493
2005	Pontiac	Pursuit	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Pursuit	Horns	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Instrument panel	√	√	√	√	√	0493
2005	Pontiac	Pursuit	Keyless entry	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Lighting systems	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Body Control Module	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Stationary windows	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Wipers/washer systems	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Theft deterrent	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Pursuit	SIR	√	√	√	√	√	0515
2005	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
2005	Pontiac	Sunfire	Onstar	√	√	√	√	√	0647 0585
2005	Pontiac	Sunfire	Radio		√	√	√	√	0675
2005	Pontiac	Sunfire	Supplemental inflatable restraint	√	√	√	√		0515
2005	Pontiac	Sunfire	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Sunfire	Body Control Module	√	√	√	√	√	0633

2005	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2005	Pontiac	Vibe - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Vibe - AWD	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Vibe - AWD	Cruise Control		√	√	√	√	0572
2005	Pontiac	Vibe - AWD	Chassis		√	√	√	√	0597
2005	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Vibe - FWD	Cruise Control		√	√	√	√	0572
2005	Pontiac	Vibe - FWD	Chassis		√	√	√	√	0597
2005	Pontiac	Wave	Powertrain	√	√	√	√	√	0493
2005	Pontiac	Wave	Chassis	√	√	√	√	√	0506
2005	Pontiac	Aztek - AWD	Powertrain	√	√	√	√	√	
2005	Pontiac	Aztek - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Aztek - AWD	Disc player and video dilay	√	√	√			
2005	Pontiac	Aztek - AWD	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Aztek - AWD	Radio					√	
2005	Pontiac	Aztek - AWD	Vehicle theft deterrent		√	√	√		
2005	Pontiac	Aztek - AWD	Passenger presence system		√	√	√		0512
2005	Pontiac	Aztek - AWD	Head up dilay		√	√	√		
2005	Pontiac	Aztek - AWD	Instrument panel cluster		√	√	√	√	
2005	Pontiac	Aztek - AWD	Body Control Module	√	√	√	√	√	0560 0515 0628 0614
2005	Pontiac	Aztek - AWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Pontiac	Aztek - AWD	Chassis	√	√	√	√	√	0506
2005	Pontiac	Aztek - FWD	Powertrain	√	√	√	√	√	
2005	Pontiac	Aztek - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Aztek - FWD	Disc player and video dilay	√	√	√			
2005	Pontiac	Aztek - FWD	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Aztek - FWD	Radio					√	
2005	Pontiac	Aztek - FWD	Vehicle theft deterrent		√	√	√		
2005	Pontiac	Aztek - FWD	Passenger presence system		√	√	√		0512
2005	Pontiac	Aztek - FWD	Head up dilay		√	√	√		
2005	Pontiac	Aztek - FWD	Instrument panel cluster		√	√	√	√	
2005	Pontiac	Aztek - FWD	Body Control Module	√	√	√	√	√	0560 0515 0628 0614
2005	Pontiac	Aztek - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Pontiac	Aztek - FWD	Chassis	√	√	√	√	√	0506
2005	Pontiac	Montana	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana	Brakes		√	√	√	√	0506
2005	Pontiac	Montana	Engine controls		√	√	√	√	
2005	Pontiac	Montana	Engine cooling		√	√	√	√	
2005	Pontiac	Montana	Engine electrical	√	√	√	√	√	0499

2005	Pontiac	Montana	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana	Cruise Control		√	√	√	√	
2005	Pontiac	Montana	Door	√	√	√	√	√	
2005	Pontiac	Montana	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana - 4WD	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Brakes		√	√	√	√	0506
2005	Pontiac	Montana - 4WD	Engine controls		√	√	√	√	
2005	Pontiac	Montana - 4WD	Engine cooling		√	√	√	√	
2005	Pontiac	Montana - 4WD	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana - 4WD	Cruise Control		√	√	√	√	
2005	Pontiac	Montana - 4WD	Door	√	√	√	√	√	
2005	Pontiac	Montana - 4WD	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana - 4WD	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana - 4WD	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana - 4WD	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana - 4WD	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6	Engine controls		√	√	√	√	



2005	Pontiac	Montana SV6	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6	Powertrain	√	√	√	√	√	

2005	Pontiac	Montana SV6	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Montana SV6	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Pontiac	Montana SV6	Vehicle theft deterrent		√	√	√		
2005	Pontiac	Montana SV6	Driver information center		√	√			
2005	Pontiac	Montana SV6	Instrument panel cluster		√	√	√	√	0682 0628
2005	Pontiac	Montana SV6	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552 0572 0524
2005	Pontiac	Montana SV6	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Pontiac	Montana SV6	Chassis	√	√	√	√	√	0506
2005	Pontiac	Montana SV6	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 - AWD	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 - AWD	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 - AWD	Cruise Control		√	√	√	√	

2005	Pontiac	Montana SV6 - AWD	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 - AWD	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 - AWD	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 - AWD	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 - AWD	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 - AWD	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 - AWD	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 - AWD	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 - AWD	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 - AWD	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 - AWD	Powertrain	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Digital radio receiver	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 - AWD	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Pontiac	Montana SV6 - AWD	Vehicle theft deterrent		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Driver information center		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Instrument panel cluster		√	√	√	√	0682 0628

2005	Pontiac	Montana SV6 - AWD	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552 0572 0524
2005	Pontiac	Montana SV6 - AWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 - AWD	Chassis	√	√	√	√	√	0506
2005	Pontiac	Montana SV6 - AWD	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 - AWD	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 - AWD	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 - AWD	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 - AWD	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 - AWD	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 Ext.	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 Ext.	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 Ext.	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 Ext.	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Keyless entry	√	√	√	√	√	0499

2005	Pontiac	Montana SV6 Ext.	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 Ext.	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 Ext.	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 Ext.	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 Ext.	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 Ext.	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 Ext.	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 Ext.	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 Ext.	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 Ext.	Powertrain	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Digital radio receiver	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 Ext.	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Pontiac	Montana SV6 Ext.	Vehicle theft deterrent		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Driver information center		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Instrument panel cluster		√	√	√	√	0682 0628
2005	Pontiac	Montana SV6 Ext.	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552 0572 0524
2005	Pontiac	Montana SV6 Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 Ext.	Chassis	√	√	√	√	√	0506
2005	Pontiac	Montana SV6 Ext.	HVAC	√	√	√	√	√	0499

2005	Pontiac	Montana SV6 Ext.	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 Ext.	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 Ext.	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 Ext.	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 Ext.	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 Ext.	SIR	√	√	√	√	√	0512
2004	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2004	Pontiac	Bonneville	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Bonneville	Digital radio receiver	√	√	√	√	√	0516
2004	Pontiac	Bonneville	CD changer	√	√	√	√	√	
2004	Pontiac	Bonneville	Climate control panel		√	√			
2004	Pontiac	Bonneville	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Pontiac	Bonneville	Head up dilay		√	√		√	
2004	Pontiac	Bonneville	Instrument panel cluster	√			√		
2004	Pontiac	Bonneville	Instrument panel module		√	√			0630 0667
2004	Pontiac	Bonneville	Rear integration module		√	√			
2004	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2004	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2004	Pontiac	Bonneville	Driver door module	√	√	√	√	√	
2004	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√	√	0677
2004	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2004	Pontiac	Bonneville	Powertrain	√	√	√	√	√	

2004	Pontiac	Bonneville	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Bonneville	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Bonneville	CD changer	√	√	√	√		
2004	Pontiac	Bonneville	Climate control panel		√	√			
2004	Pontiac	Bonneville	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Pontiac	Bonneville	Head up dilay		√	√		√	
2004	Pontiac	Bonneville	Instrument panel module		√	√			0630 0667
2004	Pontiac	Bonneville	Rear integration module		√	√			
2004	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2004	Pontiac	Bonneville	Instrument panel cluster	√	√	√	√	√	
2004	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2004	Pontiac	Bonneville	Driver door module	√	√	√	√	√	
2004	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√	√	0677
2004	Pontiac	Bonneville	Memory seat module	√	√	√	√	√	
2004	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Pontiac	Bonneville	DRP/ABS/TIM	√	√	√	√	√	0506
2004	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2004	Pontiac	Bonneville	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Bonneville	Digital radio receiver	√	√	√	√	√	0516
2004	Pontiac	Bonneville	CD changer	√	√	√	√	√	
2004	Pontiac	Bonneville	Climate control panel		√	√			
2004	Pontiac	Bonneville	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Pontiac	Bonneville	Head up dilay		√	√		√	
2004	Pontiac	Bonneville	Instrument panel module		√	√			0630 0667
2004	Pontiac	Bonneville	Rear integration module		√	√			
2004	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2004	Pontiac	Bonneville	Instrument panel cluster		√	√		√	
2004	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2004	Pontiac	Bonneville	Driver door module	√	√	√	√	√	0678
2004	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√	√	0677
2004	Pontiac	Bonneville	Memory seat module	√	√	√	√	√	0628
2004	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2004	Pontiac	Bonneville	Magna steer		√	√	√	√	

2004	Pontiac	GTO	Powertrain	√	√	√	√	√	
2004	Pontiac	GTO	Supplemental inflatable restraint		√	√	√		
2004	Pontiac	Grand Am	Powertrain	√	√	√	√	√	
2004	Pontiac	Grand Am	Body Control Module	√	√	√	√	√	0633 0675
2004	Pontiac	Grand Am	Instrument panel cluster	√			√		
2004	Pontiac	Grand Am	Radio				√		
2004	Pontiac	Grand Am	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Grand Am	Remote function actuation		√	√	√	√	
2004	Pontiac	Grand Am	Chassis	√	√	√	√	√	0506
2004	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	
2004	Pontiac	Grand Prix	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Grand Prix	Body Control Module		√	√	√	√	0690 0572 0524
2004	Pontiac	Grand Prix	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Grand Prix	Supplemental inflatable restraint	√	√	√	√		0515
2004	Pontiac	Grand Prix	Driver information center	√	√	√	√	√	0515 0637 0628 0499
2004	Pontiac	Grand Prix	Heating and air conditioning					√	0630
2004	Pontiac	Grand Prix	Chassis		√	√	√	√	0506
2004	Pontiac	Matiz	Powertrain	√	√	√	√	√	
2004	Pontiac	Matiz	Chassis	√	√	√	√	√	
2004	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
2004	Pontiac	Sunfire	Body Control Module	√	√	√	√		
2004	Pontiac	Sunfire	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Sunfire	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Sunfire	Radio		√	√	√	√	0515
2004	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2004	Pontiac	Vibe - AWD	Cruise Control		√	√	√	√	0572
2004	Pontiac	Vibe - AWD	Digital radio receiver	√	√	√	√	√	0516 0516
2004	Pontiac	Vibe - AWD	Chassis		√	√	√	√	
2004	Pontiac	Vibe - FWD	Cruise Control		√	√	√	√	0572
2004	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√	√	0516 0516
2004	Pontiac	Vibe - FWD	Chassis		√	√	√	√	
2004	Pontiac	Aztek - AWD	Powertrain	√	√	√	√	√	
2004	Pontiac	Aztek - AWD	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Aztek - AWD	Digital radio receiver	√	√	√	√	√	0516
2004	Pontiac	Aztek - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2004	Pontiac	Aztek - AWD	Supplemental inflatable restraint		√	√	√		
2004	Pontiac	Aztek - AWD	Vehicle theft deterrent		√	√	√		
2004	Pontiac	Aztek - AWD	Rear seat entertainment	√	√	√			
2004	Pontiac	Aztek - AWD	Head up dilay		√	√			



2004	Pontiac	Aztek - AWD	Radio		√	√	√	√	0573 0574 0636 0572
2004	Pontiac	Aztek - AWD	Chassis	√	√	√	√	√	0506
2004	Pontiac	Aztek - FWD	Powertrain	√	√	√	√	√	
2004	Pontiac	Aztek - FWD	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Aztek - FWD	Digital radio receiver	√	√	√	√	√	0516
2004	Pontiac	Aztek - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2004	Pontiac	Aztek - FWD	Supplemental inflatable restraint		√	√	√	√	
2004	Pontiac	Aztek - FWD	Vehicle theft deterrent		√	√	√	√	
2004	Pontiac	Aztek - FWD	Rear seat entertainment	√	√	√	√	√	
2004	Pontiac	Aztek - FWD	Head up display		√	√	√	√	
2004	Pontiac	Aztek - FWD	Radio		√	√	√	√	0573 0574 0636 0572
2004	Pontiac	Aztek - FWD	Chassis	√	√	√	√	√	0506
2004	Pontiac	Montana	Powertrain	√	√	√	√	√	
2004	Pontiac	Montana	Onstar	√	√	√	√	√	0647 0683 0683
2004	Pontiac	Montana	Supplemental inflatable restraint		√	√	√	√	
2004	Pontiac	Montana	Driver information center		√	√	√	√	0682 0628 0573 0574 0572
2004	Pontiac	Montana	Digital radio receiver	√	√	√	√	√	0516
2004	Pontiac	Montana	Radio	√	√	√	√	√	0524
2004	Pontiac	Montana	Chassis	√	√	√	√	√	0506
2004	Pontiac	Montana - 4WD	Powertrain	√	√	√	√	√	
2004	Pontiac	Montana - 4WD	Onstar	√	√	√	√	√	0647 0683 0683
2004	Pontiac	Montana - 4WD	Supplemental inflatable restraint		√	√	√	√	
2004	Pontiac	Montana - 4WD	Driver information center		√	√	√	√	0682 0628 0573 0574 0572
2004	Pontiac	Montana - 4WD	Digital radio receiver	√	√	√	√	√	0516
2004	Pontiac	Montana - 4WD	Radio	√	√	√	√	√	0524
2004	Pontiac	Montana - 4WD	Chassis	√	√	√	√	√	0506
2004	Pontiac	Montana Ext.	Powertrain	√	√	√	√	√	
2004	Pontiac	Montana Ext.	Onstar	√	√	√	√	√	0647 0683 0683
2004	Pontiac	Montana Ext.	Supplemental inflatable restraint		√	√	√	√	
2004	Pontiac	Montana Ext.	Driver information center		√	√	√	√	0682 0628 0573 0574 0572
2004	Pontiac	Montana Ext.	Digital radio receiver	√	√	√	√	√	0516
2004	Pontiac	Montana Ext.	Radio	√	√	√	√	√	0524
2004	Pontiac	Montana Ext.	Chassis	√	√	√	√	√	0506
2003	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Bonneville	Instrument panel cluster				√	√	

2003	Pontiac	Bonneville	Dash integration module				√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2003	Pontiac	Bonneville	CD changer			√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0604
2003	Pontiac	Bonneville	Instrument panel module			√	√	√	0630 0667
2003	Pontiac	Bonneville	Digital radio receiver	√		√	√	√	0516
2003	Pontiac	Bonneville	Onstar	√		√	√	√	0647 0683
2003	Pontiac	Bonneville	Supplemental inflatable restraint			√	√		
2003	Pontiac	Bonneville	Vehicle theft deterrent			√	√	√	0677
2003	Pontiac	Bonneville	Climate control panel	√		√	√	√	0516
2003	Pontiac	Bonneville	Remote function actuation			√	√	√	0677
2003	Pontiac	Bonneville	Rear integration module	√		√	√	√	0678
2003	Pontiac	Bonneville	DRP/ABS/TIM			√	√	√	0506
2003	Pontiac	Grand Am	Powertrain	√		√	√	√	0493
2003	Pontiac	Grand Am	Body Control Module	√		√	√	√	0633
2003	Pontiac	Grand Am	Radio	√		√	√	√	0675
2003	Pontiac	Grand Am	Instrument panel cluster	√			√		
2003	Pontiac	Grand Am	Onstar	√		√	√	√	0647 0683
2003	Pontiac	Grand Am	Digital radio receiver	√		√	√	√	0516
2003	Pontiac	Grand Am	Remote function actuation			√	√	√	
2003	Pontiac	Grand Am	Chassis	√		√	√	√	0506
2003	Pontiac	Grand Prix	Powertrain	√		√	√	√	0493
2003	Pontiac	Grand Prix	Vehicle theft deterrent				√		
2003	Pontiac	Grand Prix	Onstar	√		√	√		0647 0683
2003	Pontiac	Grand Prix	Supplemental inflatable restraint			√	√		
2003	Pontiac	Grand Am	Powertrain	√		√	√	√	0493
2003	Pontiac	Grand Am	Body Control Module	√		√	√	√	0633
2003	Pontiac	Grand Am	Radio	√		√	√	√	0675
2003	Pontiac	Grand Am	Instrument panel cluster	√			√		
2003	Pontiac	Grand Am	Onstar	√		√	√	√	0647 0683
2003	Pontiac	Grand Am	Digital radio receiver	√		√	√	√	0516
2003	Pontiac	Grand Am	Remote function actuation			√	√	√	
2003	Pontiac	Grand Am	Chassis	√		√	√	√	0506
2003	Pontiac	Sunfire	Powertrain	√		√	√	√	
2003	Pontiac	Sunfire	Radio				√		
2003	Pontiac	Sunfire	Body Control Module	√		√	√	√	0633 0675
2003	Pontiac	Sunfire	Onstar	√		√	√	√	0647 0683
2003	Pontiac	Sunfire	Digital radio receiver	√		√	√	√	0516

2003	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2003	Pontiac	Vibe - AWD	Cruise Control		√	√			
2003	Pontiac	Vibe - AWD	Chassis		√	√	√	√	
2003	Pontiac	Vibe - FWD	Cruise Control		√	√			
2003	Pontiac	Vibe - FWD	Chassis		√	√	√	√	
2003	Pontiac	Others	Powertrain	√	√	√	√	√	
2003	Pontiac	Others	Chassis	√	√	√	√	√	
2003	Pontiac	Aztek - AWD	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Aztek - AWD	Body Control Module		√	√	√	√	0637
2003	Pontiac	Aztek - AWD	Onstar	√	√	√	√	√	0647 0683
2003	Pontiac	Aztek - AWD	Digital radio receiver	√	√	√	√	√	0516
2003	Pontiac	Aztek - AWD	Vehicle theft deterrent		√	√			
2003	Pontiac	Aztek - AWD	Supplemental inflatable restraint		√	√	√		
2003	Pontiac	Aztek - AWD	Rear seat entertainment	√	√	√	√	√	0637
2003	Pontiac	Aztek - AWD	Chassis		√	√	√	√	0506
2003	Pontiac	Aztek - FWD	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Aztek - FWD	Body Control Module		√	√	√	√	0637
2003	Pontiac	Aztek - FWD	Onstar	√	√	√	√	√	0647 0683
2003	Pontiac	Aztek - FWD	Digital radio receiver	√	√	√	√	√	0516
2003	Pontiac	Aztek - FWD	Vehicle theft deterrent		√	√			
2003	Pontiac	Aztek - FWD	Supplemental inflatable restraint		√	√	√		
2003	Pontiac	Aztek - FWD	Rear seat entertainment	√	√	√	√	√	0637
2003	Pontiac	Aztek - FWD	Chassis		√	√	√	√	0506
2003	Pontiac	Montana	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Montana	Onstar	√	√	√	√	√	0647 0683
2003	Pontiac	Montana	Driver information center		√	√	√	√	0682 0628 0573 0574 0572
2003	Pontiac	Montana	Radio				√		
2003	Pontiac	Montana	Supplemental inflatable restraint	√	√	√	√	√	0524
2003	Pontiac	Montana	Chassis	√	√	√	√	√	0506
2002	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Bonneville	Instrument panel cluster				√		
2002	Pontiac	Bonneville	Dash integration module				√	√	0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552
2002	Pontiac	Bonneville	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0604
2002	Pontiac	Bonneville	Instrument panel module		√	√	√	√	0630 0667
2002	Pontiac	Bonneville	Onstar	√	√	√	√		0647 0683

2002	Pontiac	Bonneville	Supplemental inflatable restraint		√	√			
2002	Pontiac	Bonneville	Vehicle theft deterrent		√	√	√	√	0677
2002	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	0647 0683
2002	Pontiac	Bonneville	Remote function actuation		√	√	√	√	0677
2002	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	0678
2002	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2002	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
2002	Pontiac	FireBird	Instrument panel cluster		√	√	√	√	0682
2002	Pontiac	FireBird	Supplemental inflatable restraint		√	√	√	√	0682
2002	Pontiac	FireBird	Chassis		√	√	√	√	0506
2002	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Grand Am	Body Control Module	√	√	√		√	0633
2002	Pontiac	Grand Am	Radio	√	√	√	√	√	0675
2002	Pontiac	Grand Am	Instrument panel cluster				√		
2002	Pontiac	Grand Am	Onstar	√	√	√	√	√	0647 0683
2002	Pontiac	Grand Am	Remote function actuation		√	√	√	√	
2002	Pontiac	Grand Am	Chassis	√	√	√	√	√	0506
2002	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Grand Prix	Onstar	√	√	√	√		0647 0683
2002	Pontiac	Grand Prix	Supplemental inflatable restraint		√	√	√		
2002	Pontiac	Grand Prix	Vehicle theft deterrent		√	√	√		
2002	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
2002	Pontiac	Sunfire	Radio				√		
2002	Pontiac	Sunfire	Body Control Module	√	√	√	√	√	0633 0675
2002	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2002	Pontiac	Aztek - AWD	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Aztek - AWD	Body Control Module		√	√	√	√	0637
2002	Pontiac	Aztek - AWD	Onstar	√	√	√	√		0647 0683
2002	Pontiac	Aztek - AWD	Supplemental inflatable restraint		√	√			
2002	Pontiac	Aztek - AWD	Vehicle theft deterrent	√	√	√	√	√	0637
2002	Pontiac	Aztek - AWD	Chassis		√	√	√	√	0506
2002	Pontiac	Aztek - FWD	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Aztek - FWD	Body Control Module		√	√	√	√	0637
2002	Pontiac	Aztek - FWD	Onstar	√	√	√	√		0647 0683
2002	Pontiac	Aztek - FWD	Supplemental inflatable restraint		√	√			
2002	Pontiac	Aztek - FWD	Vehicle theft deterrent	√	√	√	√	√	0637
2002	Pontiac	Aztek - FWD	Chassis		√	√	√	√	0506
2002	Pontiac	Montana	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Montana	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524

2002	Pontiac	Montana	Radio				√		
2002	Pontiac	Montana	Onstar	√	√	√	√		0647 0683
2002	Pontiac	Montana	Supplemental inflatable restraint	√	√	√	√	√	0682 0628 0573 0574 0572 0524
2002	Pontiac	Montana	Chassis	√	√	√	√	√	0506
2001	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Bonneville	Dash integration module				√	√	0714 0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552
2001	Pontiac	Bonneville	Instrument panel cluster				√		
2001	Pontiac	Bonneville	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0604
2001	Pontiac	Bonneville	Instrument panel module		√	√	√	√	0630 0667
2001	Pontiac	Bonneville	Onstar	√	√	√	√		0683
2001	Pontiac	Bonneville	Supplemental inflatable restraint		√	√	√		
2001	Pontiac	Bonneville	Vehicle theft deterrent		√	√	√	√	0677
2001	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	0683
2001	Pontiac	Bonneville	Remote function actuation		√	√	√	√	0714 0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552
2001	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	0678
2001	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2001	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
2001	Pontiac	FireBird	Instrument panel cluster		√	√	√	√	0682
2001	Pontiac	FireBird	Supplemental inflatable restraint		√	√	√	√	0682
2001	Pontiac	FireBird	Chassis		√	√	√	√	0506
2001	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Grand Am	Body Control Module	√	√	√	√	√	0633 0525
2001	Pontiac	Grand Am	Radio	√	√	√	√	√	0675
2001	Pontiac	Grand Am	Instrument panel cluster				√		
2001	Pontiac	Grand Am	Remote function actuation		√	√	√	√	
2001	Pontiac	Grand Am	Chassis	√	√	√	√	√	0506
2001	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Grand Prix	Vehicle theft deterrent		√	√	√	√	
2001	Pontiac	Grand Prix	Onstar	√	√	√	√	√	0683
2001	Pontiac	Grand Prix	Supplemental inflatable restraint		√	√	√	√	
2001	Pontiac	Sunfire	Powertrain	√	√	√	√	√	

2001	Pontiac	Sunfire	Radio				√		
2001	Pontiac	Sunfire	Body Control Module	√	√	√	√	√	0633 0525 0675
2001	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2001	Pontiac	Aztek - AWD	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Aztek - AWD	Body Control Module		√	√	√	√	0637
2001	Pontiac	Aztek - AWD	Onstar	√	√	√	√		0683
2001	Pontiac	Aztek - AWD	Supplemental inflatable restraint		√	√			
2001	Pontiac	Aztek - AWD	Vehicle theft deterrent	√	√	√	√	√	0637
2001	Pontiac	Aztek - AWD	Chassis		√	√	√	√	0506
2001	Pontiac	Aztek - FWD	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Aztek - FWD	Body Control Module		√	√	√	√	0637
2001	Pontiac	Aztek - FWD	Onstar	√	√	√	√		0683
2001	Pontiac	Aztek - FWD	Supplemental inflatable restraint		√	√			
2001	Pontiac	Aztek - FWD	Vehicle theft deterrent	√	√	√	√	√	0637
2001	Pontiac	Aztek - FWD	Chassis		√	√	√	√	0506
2001	Pontiac	Montana	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Montana	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2001	Pontiac	Montana	Vehicle theft deterrent		√	√	√		
2001	Pontiac	Montana	Radio				√		
2001	Pontiac	Montana	Supplemental inflatable restraint		√	√	√		
2001	Pontiac	Montana	Onstar	√	√	√	√		0683
2001	Pontiac	Montana	Chassis	√	√	√	√	√	0506
2001	Pontiac	Montana Ext.	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Montana Ext.	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2001	Pontiac	Montana Ext.	Vehicle theft deterrent		√	√	√		
2001	Pontiac	Montana Ext.	Radio				√		
2001	Pontiac	Montana Ext.	Supplemental inflatable restraint		√	√	√		
2001	Pontiac	Montana Ext.	Onstar	√	√	√	√		0683
2001	Pontiac	Montana Ext.	Chassis	√	√	√	√	√	0506
2001	Pontiac	Others	Radio				√		
2001	Pontiac	Others	Onstar	√	√	√	√		0683
2001	Pontiac	Others	Supplemental inflatable restraint		√	√	√		
2001	Pontiac	Others	Vehicle theft deterrent		√	√	√		
2001	Pontiac	Others	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2001	Pontiac	Others	Chassis	√	√	√	√	√	0506
2001	Pontiac	Others	Powertrain	√	√	√	√	√	
2000	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493

2000	Pontiac	Bonneville	Dash integration module				√	√	0714 0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552 0677
2000	Pontiac	Bonneville	Instrument panel cluster				√		
2000	Pontiac	Bonneville	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0604 0691
2000	Pontiac	Bonneville	Instrument panel module		√	√	√	√	0630 0667
2000	Pontiac	Bonneville	Onstar	√	√	√	√	√	0683
2000	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	0683
2000	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	0678
2000	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2000	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
2000	Pontiac	FireBird	Instrument panel cluster		√	√	√	√	0682
2000	Pontiac	FireBird	Supplemental inflatable restraint		√	√	√	√	0682
2000	Pontiac	FireBird	Chassis		√	√	√	√	0506
2000	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
2000	Pontiac	Grand Am	Body Control Module	√	√	√	√	√	
2000	Pontiac	Grand Am	Instrument panel cluster		√	√	√	√	
2000	Pontiac	Grand Am	Chassis		√	√	√	√	
2000	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
2000	Pontiac	Grand Prix	Vehicle theft deterrent		√	√	√	√	0692
2000	Pontiac	Grand Prix	Onstar	√	√	√	√	√	0683
2000	Pontiac	Grand Prix	Supplemental inflatable restraint		√	√	√	√	
2000	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
2000	Pontiac	Sunfire	Radio				√		
2000	Pontiac	Sunfire	Body Control Module	√	√	√	√	√	0633 0525 0675
2000	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2000	Pontiac	Montana	Powertrain	√	√	√	√	√	0493
2000	Pontiac	Montana	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524 0692
2000	Pontiac	Montana	Supplemental inflatable restraint		√	√	√		
2000	Pontiac	Montana	Radio				√		
2000	Pontiac	Montana	Onstar	√	√	√	√	√	0683
2000	Pontiac	Montana	Chassis	√	√	√	√	√	0506
2000	Pontiac	Others	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524 0692
2000	Pontiac	Others	Radio				√		
2000	Pontiac	Others	Onstar	√	√	√	√		0683

2000	Pontiac	Others	Powertrain	√	√	√	√	√	
1999	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
1999	Pontiac	Bonneville	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1999	Pontiac	Bonneville	Onstar		√	√	√		0683
1999	Pontiac	Bonneville	Onstar (VS-3B)		√	√	√		
1999	Pontiac	Bonneville	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1999	Pontiac	Bonneville	ABS		√	√		√	0641 0506
1999	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
1999	Pontiac	FireBird	Instrument panel cluster				√	√	0682
1999	Pontiac	FireBird	Entertainment & comfort bus		√	√			
1999	Pontiac	FireBird	Supplemental inflatable restraint		√	√	√	√	0682
1999	Pontiac	FireBird	Chassis		√	√	√	√	0506
1999	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
1999	Pontiac	Grand Am	Body function controller		√	√	√	√	
1999	Pontiac	Grand Am	Vehicle theft deterrent		√	√	√	√	0691
1999	Pontiac	Grand Am	Chassis		√	√	√	√	
1999	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
1999	Pontiac	Grand Prix	Supplemental inflatable restraint		√	√	√	√	
1999	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
1999	Pontiac	Montana	Powertrain	√	√	√	√	√	0493
1999	Pontiac	Montana	Entertainment & comfort bus		√	√	√	√	
1999	Pontiac	Montana	Onstar		√	√	√	√	0683
1999	Pontiac	Montana	Onstar (VS-3B)		√	√	√	√	
1999	Pontiac	Montana Ext.	Powertrain	√	√	√	√	√	0493
1999	Pontiac	Montana Ext.	Entertainment & comfort bus		√	√	√	√	
1999	Pontiac	Montana Ext.	Onstar		√	√	√	√	0683
1999	Pontiac	Montana Ext.	Onstar (VS-3B)		√	√	√	√	
1998	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Bonneville	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1998	Pontiac	Bonneville	Onstar		√	√	√	√	0683
1998	Pontiac	Bonneville	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1998	Pontiac	Bonneville	ABS		√	√		√	0641 0506
1998	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Grand Am	Chassis		√	√	√	√	
1998	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493



1998	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
1998	Pontiac	Sun Runner - 2WD (Canada)	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Sun Runner - 2WD (Canada)	Supplemental inflatable restraint		√	√			
1998	Pontiac	Sun Runner - 2WD (Canada)	Body Control Module		√	√	√	√	
1998	Pontiac	Sun Runner - 2WD (Canada)	4WAL 3 sensor		√	√	√	√	
1998	Pontiac	Sun Runner - 4WD (Canada)	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Sun Runner - 4WD (Canada)	Supplemental inflatable restraint		√	√			
1998	Pontiac	Sun Runner - 4WD (Canada)	Body Control Module		√	√	√	√	
1998	Pontiac	Sun Runner - 4WD (Canada)	4WAL 3 sensor		√	√	√	√	
1998	Pontiac	Trans sport	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Trans sport	Onstar		√	√	√	√	0683
1998	Pontiac	Trans ort Ext.	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Trans ort Ext.	Onstar		√	√	√	√	0683
1997	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Bonneville	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1997	Pontiac	Bonneville	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1997	Pontiac	Bonneville	ABS		√	√		√	0641 0506
1997	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
1997	Pontiac	Trans sport	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Trans ort Ext.	Powertrain	√	√	√	√	√	0493
1996	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
1996	Pontiac	Bonneville	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Pontiac	FireBird	Powertrain	√	√	√	√	√	
1996	Pontiac	Grand Am	Powertrain	√	√	√	√	√	
1996	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	
1996	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
1996	Pontiac	Trans ort	Powertrain	√	√	√	√	√	