

DAIHATSU Function list V8.20

Vehicle name	Year	System name	Read Codes	Erase Codes	Live Data	Actuators	Special Function
Altis	'00/03 (H12/03) - '01/09 (H13/09)	EFI&A/T	✓	✓	✓	✓	Check Mode、 Signal Check
Altis	'00/03 (H12/03) - '01/09 (H13/09)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Altis	'00/03 (H12/03) - '01/09 (H13/09)	A/B	✓	✓			
Altis	'01/09 (H13/09) - '06/01 (H18/01)	EFI&A/T	✓	✓	✓	✓	Check Mode、 Signal Check
Altis	'01/09 (H13/09) - '06/01 (H18/01)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Altis	'01/09 (H13/09) - '06/01 (H18/01)	A/B	✓	✓			
Altis	'06/01 (H18/01) - '09/01 (H21/01)	EFI&A/T	✓	✓	✓	✓	Check Mode、 Signal Check
Altis	'09/01 (H21/01) -	EFI&A/T	✓	✓	✓	✓	Check Mode、 Signal Check
Atrai 7/Hijet Gran Cargo	'00/07 (H12/07) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
Atrai 7/Hijet Gran Cargo	'00/07 (H12/07) - '01/06 (H13/06)	A/T	✓	✓	✓	✓	
Atrai 7/Hijet Gran Cargo	'00/07 (H12/07) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Atrai 7/Hijet Gran Cargo	'00/07 (H12/07) - '01/06 (H13/06)	A/B	✓	✓			
Atrai 7/Hijet Gran Cargo	'00/07 (H12/07) - '01/06 (H13/06)	KFS	✓	✓			
Atrai 7/Hijet Gran Cargo	'01/06 (H13/06) -	EFI	✓	✓	✓	✓	
Atrai 7/Hijet Gran Cargo	'01/06 (H13/06) -	A/T	✓	✓	✓	✓	
Atrai 7/Hijet Gran Cargo	'01/06 (H13/06) -	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Atrai 7/Hijet Gran Cargo	'01/06 (H13/06) -	A/B	✓	✓			
Atrai 7/Hijet Gran Cargo	'01/06 (H13/06) -	KFS	✓	✓	✓	✓	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	EFI	✓	✓	✓	✓	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	ABS	✓	✓	✓	✓	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	A/B	✓	✓			
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	KFS	✓	✓	✓	✓	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	EFI	✓	✓	✓	✓	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	ABS	✓	✓	✓	✓	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	A/B	✓	✓			
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	KFS	✓	✓	✓	✓	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	EFI	✓	✓	✓	✓	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	A/T	✓	✓	✓	✓	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	ABS	✓	✓	✓	✓	

Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	A/B	✓	✓			
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	KFS	✓	✓	✓	✓	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	EFI	✓	✓	✓	✓	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	ABS	✓	✓	✓	✓	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	A/B	✓	✓			
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	KFS	✓	✓	✓	✓	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	EFI	✓	✓	✓	✓	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	A/T	✓	✓	✓	✓	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	A/B	✓	✓			
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	KFS	✓	✓	✓	✓	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	EFI	✓	✓	✓	✓	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	A/B	✓	✓			
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	KFS	✓	✓	✓	✓	
Atrai Wagon	'05/05 (H17/05) - '07/08 (H19/08)	EFI	✓	✓	✓	✓	
Atrai Wagon	'05/05 (H17/05) - '07/08 (H19/08)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Atrai Wagon	'05/05 (H17/05) - '07/08 (H19/08)	A/B	✓	✓			Check Mode
Atrai Wagon	'07/08 (H19/08) - '10/08 (H22/08)	EFI	✓	✓	✓	✓	
Atrai Wagon	'07/08 (H19/08) - '10/08 (H22/08)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Atrai Wagon	'07/08 (H19/08) - '10/08 (H22/08)	A/B	✓	✓			Check Mode
Boon	'04/05 (H16/05) - '05/11 (H17/11)	EFI	✓	✓	✓	✓	
Boon	'04/05 (H16/05) - '05/11 (H17/11)	A/T	✓	✓	✓	✓	
Boon	'04/05 (H16/05) - '05/11 (H17/11)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Boon	'04/05 (H16/05) - '05/11 (H17/11)	EPS	✓	✓	✓		Check Mode、 Signal Check
Boon	'04/05 (H16/05) - '05/11 (H17/11)	A/B	✓	✓			Check Mode
Boon	'04/05 (H16/05) - '05/11 (H17/11)	KFS	✓	✓	✓	✓	
Boon	'04/05 (H16/05) - '05/11 (H17/11)	EFI	✓	✓	✓	✓	
Boon	'04/05 (H16/05) - '05/11 (H17/11)	A/T	✓	✓	✓	✓	
Boon	'04/05 (H16/05) - '05/11 (H17/11)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Boon	'04/05 (H16/05) - '05/11 (H17/11)	EPS	✓	✓	✓		Check Mode、 Signal Check
Boon	'04/05 (H16/05) - '05/11 (H17/11)	A/B	✓	✓			Check Mode

Boon	'04/05 (H16/05) - '05/11 (H17/11)	KFS	✓	✓	✓	✓	
Boon	'05/11 (H17/11) - '10/02 (H22/02)	EFI	✓	✓	✓	✓	
Boon	'05/11 (H17/11) - '10/02 (H22/02)	A/T	✓	✓	✓	✓	
Boon	'05/11 (H17/11) - '10/02 (H22/02)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Boon	'05/11 (H17/11) - '10/02 (H22/02)	EPS	✓	✓	✓		Check Mode, Signal Check
Boon	'05/11 (H17/11) - '10/02 (H22/02)	A/B	✓	✓			Check Mode
Boon	'05/11 (H17/11) - '10/02 (H22/02)	KFS	✓	✓	✓	✓	
Boon	'05/11 (H17/11) - '10/02 (H22/02)	EFI	✓	✓	✓	✓	
Boon	'05/11 (H17/11) - '10/02 (H22/02)	A/T	✓	✓	✓	✓	
Boon	'05/11 (H17/11) - '10/02 (H22/02)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Boon	'05/11 (H17/11) - '10/02 (H22/02)	EPS	✓	✓	✓		Check Mode, Signal Check
Boon	'05/11 (H17/11) - '10/02 (H22/02)	A/B	✓	✓			Check Mode
Boon	'05/11 (H17/11) - '10/02 (H22/02)	KFS	✓	✓	✓	✓	
Boon	'05/11 (H17/11) - '10/02 (H22/02)	EFI	✓	✓	✓	✓	
Boon	'05/11 (H17/11) - '10/02 (H22/02)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Boon	'05/11 (H17/11) - '10/02 (H22/02)	EPS	✓	✓	✓		Check Mode, Signal Check
Boon	'05/11 (H17/11) - '10/02 (H22/02)	A/B	✓	✓			Check Mode
Boon	'10/02 (H22/02) - '11/05 (H23/05)	EFI	✓	✓	✓	✓	
Boon	'10/02 (H22/02) - '11/05 (H23/05)	CVT	✓	✓	✓	✓	
Boon	'10/02 (H22/02) - '11/05 (H23/05)	ABS/VSC	✓	✓	✓	✓	Check Mode, Signal Check
Boon	'10/02 (H22/02) - '11/05 (H23/05)	EPS	✓	✓	✓		Check Mode, Signal Check
Boon	'10/02 (H22/02) - '11/05 (H23/05)	A/B	✓	✓			Check Mode
Boon	'10/02 (H22/02) - '11/05 (H23/05)	ITC	✓	✓	✓	✓	
Boon	'10/02 (H22/02) - '11/05 (H23/05)	KFS	✓	✓	✓	✓	
Boon	'10/02 (H22/02) - '11/05 (H23/05)	Meter	✓	✓	✓	✓	
Boon	'10/02 (H22/02) - '11/05 (H23/05)	EFI	✓	✓	✓	✓	
Boon	'10/02 (H22/02) - '11/05 (H23/05)	CVT	✓	✓	✓	✓	
Boon	'10/02 (H22/02) - '11/05 (H23/05)	ABS/VSC	✓	✓	✓	✓	Check Mode, Signal Check
Boon	'10/02 (H22/02) - '11/05 (H23/05)	EPS	✓	✓	✓		Check Mode, Signal Check
Boon	'10/02 (H22/02) - '11/05 (H23/05)	A/B	✓	✓			Check Mode
Boon	'10/02 (H22/02) - '11/05 (H23/05)	ITC	✓	✓	✓	✓	
Boon	'10/02 (H22/02) - '11/05 (H23/05)	KFS	✓	✓	✓	✓	

Boon	'10/02 (H22/02) - '11/05 (H23/05)	Meter	✓	✓	✓	✓	
Boon	'11/05 (H23/05) - '12/06 (H24/06)	EFI	✓	✓	✓	✓	
Boon	'11/05 (H23/05) - '12/06 (H24/06)	CVT	✓	✓	✓	✓	
Boon	'11/05 (H23/05) - '12/06 (H24/06)	ABS/VSC	✓	✓	✓	✓	Check Mode, Signal Check
Boon	'11/05 (H23/05) - '12/06 (H24/06)	EPS	✓	✓	✓		Check Mode, Signal Check
Boon	'11/05 (H23/05) - '12/06 (H24/06)	A/B	✓	✓			Check Mode
Boon	'11/05 (H23/05) - '12/06 (H24/06)	ITC	✓	✓	✓	✓	
Boon	'11/05 (H23/05) - '12/06 (H24/06)	KFS	✓	✓	✓	✓	
Boon	'11/05 (H23/05) - '12/06 (H24/06)	Meter	✓	✓	✓	✓	
Boon	'11/05 (H23/05) - '12/06 (H24/06)	EFI	✓	✓	✓	✓	
Boon	'11/05 (H23/05) - '12/06 (H24/06)	CVT	✓	✓	✓	✓	
Boon	'11/05 (H23/05) - '12/06 (H24/06)	ABS/VSC	✓	✓	✓	✓	Check Mode, Signal Check
Boon	'11/05 (H23/05) - '12/06 (H24/06)	EPS	✓	✓	✓		Check Mode, Signal Check
Boon	'11/05 (H23/05) - '12/06 (H24/06)	A/B	✓	✓			Check Mode
Boon	'11/05 (H23/05) - '12/06 (H24/06)	ITC	✓	✓	✓	✓	
Boon	'11/05 (H23/05) - '12/06 (H24/06)	KFS	✓	✓	✓	✓	
Boon	'11/05 (H23/05) - '12/06 (H24/06)	Meter	✓	✓	✓	✓	
Boon	'12/06 (H24/06) -	EFI	✓	✓	✓	✓	
Boon	'12/06 (H24/06) -	CVT	✓	✓	✓	✓	
Boon	'12/06 (H24/06) -	eco IDLE	✓	✓	✓	✓	
Boon	'12/06 (H24/06) -	ABS/VSC	✓	✓	✓	✓	Check Mode, Signal Check
Boon	'12/06 (H24/06) -	EPS	✓	✓	✓		Check Mode, Signal Check
Boon	'12/06 (H24/06) -	A/B	✓	✓			Check Mode
Boon	'12/06 (H24/06) -	ITC	✓	✓	✓	✓	
Boon	'12/06 (H24/06) -	KFS	✓	✓	✓	✓	
Boon	'12/06 (H24/06) -	Meter	✓	✓	✓	✓	
Boon Luminas	'08/12 (H20/12) -	EFI	✓	✓	✓	✓	
Boon Luminas	'08/12 (H20/12) -	A/T	✓	✓	✓	✓	
Boon Luminas	'08/12 (H20/12) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Boon Luminas	'08/12 (H20/12) -	VSC	✓	✓	✓	✓	Check Mode, Signal Check
Boon Luminas	'08/12 (H20/12) -	EPS	✓	✓	✓		
Boon Luminas	'08/12 (H20/12) -	A/B	✓	✓			Check Mode
Boon Luminas	'08/12 (H20/12) -	ITC	✓	✓	✓	✓	
Boon Luminas	'08/12 (H20/12) -	KFS	✓	✓	✓	✓	
C00	'06/05 (H18/05) - '10/07 (H22/07)	EFI	✓	✓	✓	✓	
C00	'06/05 (H18/05) - '10/07 (H22/07)	A/T	✓	✓	✓	✓	
C00	'06/05 (H18/05) - '10/07 (H22/07)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
C00	'06/05 (H18/05) - '10/07 (H22/07)	VSC	✓	✓	✓	✓	Check Mode, Signal Check
C00	'06/05 (H18/05) - '10/07 (H22/07)	EPS	✓	✓	✓		Check Mode, Signal Check

C00	'06/05 (H18/05) - '10/07 (H22/07)	A/B	✓	✓			Check Mode
C00	'06/05 (H18/05) - '10/07 (H22/07)	KFS	✓	✓	✓	✓	
C00	'06/05 (H18/05) - '10/07 (H22/07)	EFI	✓	✓	✓	✓	
C00	'06/05 (H18/05) - '10/07 (H22/07)	A/T	✓	✓	✓	✓	
C00	'06/05 (H18/05) - '10/07 (H22/07)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
C00	'06/05 (H18/05) - '10/07 (H22/07)	VSC	✓	✓	✓	✓	Check Mode, Signal Check
C00	'06/05 (H18/05) - '10/07 (H22/07)	EPS	✓	✓	✓		Check Mode, Signal Check
C00	'06/05 (H18/05) - '10/07 (H22/07)	A/B	✓	✓			Check Mode
C00	'06/05 (H18/05) - '10/07 (H22/07)	KFS	✓	✓	✓	✓	
C00	'10/07 (H22/07) -	EFI	✓	✓	✓	✓	
C00	'10/07 (H22/07) -	A/T	✓	✓	✓	✓	
C00	'10/07 (H22/07) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
C00	'10/07 (H22/07) -	VSC	✓	✓	✓	✓	Check Mode, Signal Check
C00	'10/07 (H22/07) -	EPS	✓	✓	✓		Check Mode, Signal Check
C00	'10/07 (H22/07) -	KFS	✓	✓	✓	✓	
C00	'10/07 (H22/07) -	A/B	✓	✓			Check Mode
C00	'10/07 (H22/07) -	EFI	✓	✓	✓	✓	
C00	'10/07 (H22/07) -	A/T	✓	✓	✓	✓	
C00	'10/07 (H22/07) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
C00	'10/07 (H22/07) -	VSC	✓	✓	✓	✓	Check Mode, Signal Check
C00	'10/07 (H22/07) -	EPS	✓	✓	✓		Check Mode, Signal Check
C00	'10/07 (H22/07) -	KFS	✓	✓	✓	✓	
C00	'10/07 (H22/07) -	A/B	✓	✓			Check Mode
Copen	'02/06 (H14/06) - '10/08 (H22/08)	EFI	✓	✓	✓	✓	
Copen	'02/06 (H14/06) - '10/08 (H22/08)	A/T	✓	✓	✓	✓	
Copen	'02/06 (H14/06) - '10/08 (H22/08)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Copen	'02/06 (H14/06) - '10/08 (H22/08)	A/B	✓	✓			
Copen	'02/06 (H14/06) - '10/08 (H22/08)	IMB	✓	✓			
Copen	'02/06 (H14/06) - '10/08 (H22/08)	Roof	✓	✓	✓	✓	
Copen	'10/08 (H22/08) -	EFI	✓	✓	✓	✓	
Copen	'10/08 (H22/08) -	A/T	✓	✓	✓	✓	
Copen	'10/08 (H22/08) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Copen	'10/08 (H22/08) -	A/B	✓	✓			
Copen	'10/08 (H22/08) -	IMB	✓	✓			
Copen	'10/08 (H22/08) -	Roof	✓	✓	✓	✓	
Esse	'05/12 (H17/12) - '10/04 (H22/04)	EFI	✓	✓	✓	✓	
Esse	'05/12 (H17/12) - '10/04 (H22/04)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Esse	'05/12 (H17/12) - '10/04 (H22/04)	A/B	✓	✓			Check Mode
Esse	'10/04 (H22/04) -	EFI	✓	✓	✓	✓	

Esse	' 10/04 (H22/04) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Esse	' 10/04 (H22/04) -	A/B	✓	✓			Check Mode
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	EFI	✓	✓	✓	✓	
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	ABS	✓	✓	✓	✓	
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	A/B	✓	✓			
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	KFS	✓	✓	✓	✓	
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	EFI	✓	✓	✓	✓	
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	ABS	✓	✓	✓	✓	
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	EPS	✓	✓	✓		
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	A/B	✓	✓			
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	EFI	✓	✓	✓	✓	
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	ABS	✓	✓	✓	✓	
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	EPS	✓	✓	✓		
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	A/B	✓	✓			
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	KFS	✓	✓	✓	✓	
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	EFI	✓	✓	✓	✓	
Hijet/Atrai	' 01/01 (H13/01) - ' 01/05 (H13/05)	A/B	✓	✓			
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	EFI	✓	✓	✓	✓	
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	ABS	✓	✓	✓	✓	
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	A/B	✓	✓			
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	KFS	✓	✓	✓	✓	
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	EFI	✓	✓	✓	✓	
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	ABS	✓	✓	✓	✓	
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	EPS	✓	✓	✓		
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	A/B	✓	✓			
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	EFI	✓	✓	✓	✓	
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	ABS	✓	✓	✓	✓	
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	EPS	✓	✓	✓		
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	A/B	✓	✓			
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	KFS	✓	✓	✓	✓	
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	EFI	✓	✓	✓	✓	
Hijet/Atrai	' 01/05 (H13/05) - ' 01/09 (H13/09)	A/B	✓	✓			

Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	ABS	✓	✓	✓	✓	
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	A/B	✓	✓			
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	KFS	✓	✓	✓	✓	
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	ABS	✓	✓	✓	✓	
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	EPS	✓	✓	✓		
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	A/B	✓	✓			
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	ABS	✓	✓	✓	✓	
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	EPS	✓	✓	✓		
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	A/B	✓	✓			
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	KFS	✓	✓	✓	✓	
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'01/09 (H13/09) - '01/10 (H13/10)	A/B	✓	✓			
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	ABS	✓	✓	✓	✓	
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	A/B	✓	✓			
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	KFS	✓	✓	✓	✓	
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	ABS	✓	✓	✓	✓	
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	EPS	✓	✓	✓		Check Mode
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	A/B	✓	✓			
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	ABS	✓	✓	✓	✓	
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	EPS	✓	✓	✓		Check Mode
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	A/B	✓	✓			
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	KFS	✓	✓	✓	✓	
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'01/10 (H13/10) - '02/01 (H14/01)	A/B	✓	✓			
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	A/T	✓	✓	✓	✓	

Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	ABS	√	√	√	√	
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	A/B	√	√			
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	KFS	√	√	√	√	
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	EFI	√	√	√	√	
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	ABS	√	√	√	√	
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	EPS	√	√	√		Check Mode
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	A/B	√	√			
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	EFI	√	√	√	√	
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	ABS	√	√	√	√	
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	EPS	√	√	√		
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	A/B	√	√			
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	KFS	√	√	√	√	
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	EFI	√	√	√	√	
Hijet/Atrai	'02/01 (H14/01) - '04/12 (H16/12)	A/B	√	√			
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EFI	√	√	√	√	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	ABS	√	√	√	√	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	A/B	√	√			Check Mode
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EFI	√	√	√	√	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	ABS	√	√	√	√	Check Mode, Signal Check
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EPS	√	√	√		
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	A/B	√	√			Check Mode
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EFI	√	√	√	√	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	ABS	√	√	√	√	Check Mode, Signal Check
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EPS	√	√	√		Check Mode
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	A/B	√	√			Check Mode
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EFI	√	√	√	√	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	A/T	√	√	√	√	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	ABS	√	√	√	√	Check Mode, Signal Check
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EPS	√	√	√		Check Mode
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	A/B	√	√			
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EFI	√	√	√	√	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	ABS	√	√	√	√	

Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	A/B	✓	✓			Check Mode
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	ABS	✓	✓	✓	✓	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	A/B	✓	✓			
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	ABS	✓	✓	✓	✓	
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	EPS	✓	✓	✓		Check Mode
Hijet/Atrai	'04/12 (H16/12) - '10/08 (H22/08)	A/B	✓	✓			Check Mode
Hijet/Atrai	'10/08 (H22/08) - '11/11 (H23/11)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'10/08 (H22/08) - '11/11 (H23/11)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Hijet/Atrai	'10/08 (H22/08) - '11/11 (H23/11)	A/B	✓	✓			Check Mode
Hijet/Atrai	'10/08 (H22/08) - '11/11 (H23/11)	EFI	✓	✓	✓	✓	
Hijet/Atrai	'10/08 (H22/08) - '11/11 (H23/11)	ABS	✓	✓	✓	✓	
Hijet/Atrai	'10/08 (H22/08) - '11/11 (H23/11)	EPS	✓	✓	✓		Check Mode
Hijet/Atrai	'10/08 (H22/08) - '11/11 (H23/11)	A/B	✓	✓			Check Mode
Hijet/Atrai	'11/11 (H23/11) -	EFI	✓	✓	✓	✓	
Hijet/Atrai	'11/11 (H23/11) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Hijet/Atrai	'11/11 (H23/11) -	EPS	✓	✓	✓		Check Mode
Hijet/Atrai	'11/11 (H23/11) -	A/B	✓	✓			
Hijet/Atrai	'11/11 (H23/11) -	EFI	✓	✓	✓	✓	
Hijet/Atrai	'11/11 (H23/11) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Hijet/Atrai	'11/11 (H23/11) -	A/B	✓	✓			Check Mode
MAX	'01/10 (H13/10) -	EFI	✓	✓	✓	✓	
MAX	'01/10 (H13/10) -	A/T	✓	✓	✓	✓	
MAX	'01/10 (H13/10) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
MAX	'01/10 (H13/10) -	DVS	✓	✓	✓	✓	Check Mode, Signal Check
MAX	'01/10 (H13/10) -	A/B	✓	✓			
MAX	'01/10 (H13/10) -	KFS	✓	✓	✓	✓	
MAX	'01/10 (H13/10) -	EFI	✓	✓	✓	✓	
MAX	'01/10 (H13/10) -	CVT	✓	✓	✓		
MAX	'01/10 (H13/10) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
MAX	'01/10 (H13/10) -	DVS	✓	✓	✓	✓	Check Mode, Signal Check
MAX	'01/10 (H13/10) -	A/B	✓	✓			
MAX	'01/10 (H13/10) -	KFS	✓	✓	✓	✓	
MAX	'01/10 (H13/10) -	EFI	✓	✓	✓	✓	
MAX	'01/10 (H13/10) -	A/T	✓	✓	✓	✓	
MAX	'01/10 (H13/10) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
MAX	'01/10 (H13/10) -	4WD	✓	✓	✓		
MAX	'01/10 (H13/10) -	A/B	✓	✓			
MAX	'01/10 (H13/10) -	KFS	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	

Mira	'00/10 (H12/10) - '01/06 (H13/06)	DVS	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
Mira	'00/10 (H12/10) - '01/06 (H13/06)	A/T	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
Mira	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	CVT	✓	✓	✓		
Mira	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	DVS	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
Mira	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	CVT	✓	✓	✓		
Mira	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	
Mira	'00/10 (H12/10) - '01/06 (H13/06)	EPS	✓	✓			Check Mode、 Signal Check
Mira	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
Mira	'01/06 (H13/06) - '02/12 (H14/12)	EFI	✓	✓	✓	✓	
Mira	'01/06 (H13/06) - '02/12 (H14/12)	A/T	✓	✓	✓	✓	
Mira	'01/06 (H13/06) - '02/12 (H14/12)	ABS	✓	✓	✓	✓	
Mira	'01/06 (H13/06) - '02/12 (H14/12)	DVS	✓	✓	✓	✓	
Mira	'01/06 (H13/06) - '02/12 (H14/12)	A/B	✓	✓			
Mira	'01/06 (H13/06) - '02/12 (H14/12)	EFI	✓	✓	✓	✓	
Mira	'01/06 (H13/06) - '02/12 (H14/12)	ABS	✓	✓	✓	✓	
Mira	'01/06 (H13/06) - '02/12 (H14/12)	A/B	✓	✓			
Mira	'01/06 (H13/06) - '02/12 (H14/12)	EFI	✓	✓	✓	✓	
Mira	'01/06 (H13/06) - '02/12 (H14/12)	CVT	✓	✓	✓		
Mira	'01/06 (H13/06) - '02/12 (H14/12)	ABS	✓	✓	✓	✓	
Mira	'01/06 (H13/06) - '02/12 (H14/12)	DVS	✓	✓	✓	✓	
Mira	'01/06 (H13/06) - '02/12 (H14/12)	A/B	✓	✓			
Mira	'01/06 (H13/06) - '02/12 (H14/12)	EFI	✓	✓	✓	✓	
Mira	'01/06 (H13/06) - '02/12 (H14/12)	CVT	✓	✓	✓		
Mira	'01/06 (H13/06) - '02/12 (H14/12)	ABS	✓	✓	✓	✓	

Mira	'01/06 (H13/06) - '02/12 (H14/12)	EPS	✓	✓			Check Mode、 Signal Check
Mira	'01/06 (H13/06) - '02/12 (H14/12)	A/B	✓	✓			
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EFI	✓	✓	✓	✓	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	A/T	✓	✓	✓	✓	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	DVS	✓	✓	✓	✓	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	A/B	✓	✓			Check Mode
Mira	'02/12 (H14/12) - '04/12 (H16/12)	KFS	✓	✓	✓	✓	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EFI	✓	✓	✓	✓	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	A/B	✓	✓			
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EFI	✓	✓	✓	✓	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	A/B	✓	✓			
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EFI	✓	✓	✓	✓	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	CVT	✓	✓	✓		
Mira	'02/12 (H14/12) - '04/12 (H16/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	A/B	✓	✓			
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EFI	✓	✓	✓	✓	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	A/B	✓	✓			
Mira	'04/12 (H16/12) - '06/12 (H18/12)	EFI	✓	✓	✓	✓	
Mira	'04/12 (H16/12) - '06/12 (H18/12)	A/T	✓	✓	✓	✓	
Mira	'04/12 (H16/12) - '06/12 (H18/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira	'04/12 (H16/12) - '06/12 (H18/12)	DVS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira	'04/12 (H16/12) - '06/12 (H18/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Mira	'04/12 (H16/12) - '06/12 (H18/12)	A/B	✓	✓			Check Mode

Mira	'06/12 (H18/12) - '08/12 (H20/12)	ABS	√	√	√	√	Check Mode、 Signal Check
Mira	'06/12 (H18/12) - '08/12 (H20/12)	VSC	√	√	√	√	Check Mode、 Signal Check
Mira	'06/12 (H18/12) - '08/12 (H20/12)	EPS	√	√	√		Check Mode、 Signal Check
Mira	'06/12 (H18/12) - '08/12 (H20/12)	A/B	√	√			Check Mode
Mira	'06/12 (H18/12) - '08/12 (H20/12)	ITC	√	√	√	√	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	KFS	√	√	√	√	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	Power Supply	√	√	√	√	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	ACC	√	√			
Mira	'06/12 (H18/12) - '08/12 (H20/12)	EFI	√	√	√	√	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	ERS	√	√	√	√	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	CVT	√	√	√	√	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	ABS	√	√	√	√	Check Mode、 Signal Check
Mira	'06/12 (H18/12) - '08/12 (H20/12)	EPS	√	√	√		Check Mode、 Signal Check
Mira	'06/12 (H18/12) - '08/12 (H20/12)	A/B	√	√			Check Mode
Mira	'06/12 (H18/12) - '08/12 (H20/12)	ITC	√	√	√	√	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	KFS	√	√	√	√	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	Power Supply	√	√	√	√	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	EFI	√	√	√	√	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	EPS	√	√	√		Check Mode、 Signal Check
Mira	'06/12 (H18/12) - '08/12 (H20/12)	A/B	√	√			Check Mode
Mira	'08/12 (H20/12) - '10/04 (H22/04)	EFI	√	√	√	√	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	CVT	√	√	√	√	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	ABS	√	√	√	√	Check Mode、 Signal Check
Mira	'08/12 (H20/12) - '10/04 (H22/04)	VSC	√	√	√	√	Check Mode、 Signal Check
Mira	'08/12 (H20/12) - '10/04 (H22/04)	EPS	√	√	√		Check Mode、 Signal Check
Mira	'08/12 (H20/12) - '10/04 (H22/04)	A/B	√	√			Check Mode
Mira	'08/12 (H20/12) - '10/04 (H22/04)	ITC	√	√	√	√	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	KFS	√	√	√	√	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	ACC	√	√			
Mira	'08/12 (H20/12) - '10/04 (H22/04)	Power Supply	√	√	√	√	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	EFI	√	√	√	√	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	CVT	√	√	√	√	

Mira	'08/12 (H20/12) - '10/04 (H22/04)	ERS	✓	✓	✓	✓	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Mira	'08/12 (H20/12) - '10/04 (H22/04)	EPS	✓	✓	✓		Check Mode, Signal Check
Mira	'08/12 (H20/12) - '10/04 (H22/04)	A/B	✓	✓			Check Mode
Mira	'08/12 (H20/12) - '10/04 (H22/04)	ITC	✓	✓	✓	✓	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	KFS	✓	✓	✓	✓	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	Power Supply	✓	✓	✓	✓	
Mira	'10/04 (H22/04) - '11/07 (H23/07)	EFI	✓	✓	✓	✓	
Mira	'10/04 (H22/04) - '11/07 (H23/07)	CVT	✓	✓	✓	✓	
Mira	'10/04 (H22/04) - '11/07 (H23/07)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Mira	'10/04 (H22/04) - '11/07 (H23/07)	EPS	✓	✓	✓		Check Mode, Signal Check
Mira	'10/04 (H22/04) - '11/07 (H23/07)	A/B	✓	✓			Check Mode
Mira	'10/04 (H22/04) - '11/07 (H23/07)	ITC	✓	✓	✓	✓	
Mira	'10/04 (H22/04) - '11/07 (H23/07)	KFS	✓	✓	✓	✓	
Mira	'10/04 (H22/04) - '11/07 (H23/07)	EFI	✓	✓	✓	✓	
Mira	'10/04 (H22/04) - '11/07 (H23/07)	CVT	✓	✓	✓	✓	
Mira	'10/04 (H22/04) - '11/07 (H23/07)	ERS	✓	✓	✓	✓	
Mira	'10/04 (H22/04) - '11/07 (H23/07)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Mira	'10/04 (H22/04) - '11/07 (H23/07)	EPS	✓	✓	✓		Check Mode, Signal Check
Mira	'10/04 (H22/04) - '11/07 (H23/07)	A/B	✓	✓			Check Mode
Mira	'10/04 (H22/04) - '11/07 (H23/07)	ITC	✓	✓	✓	✓	
Mira	'10/04 (H22/04) - '11/07 (H23/07)	KFS	✓	✓	✓	✓	
Mira	'11/07 (H23/07) -	EFI	✓	✓	✓	✓	
Mira	'11/07 (H23/07) -	CVT	✓	✓	✓	✓	
Mira	'11/07 (H23/07) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Mira	'11/07 (H23/07) -	EPS	✓	✓	✓		Check Mode, Signal Check
Mira	'11/07 (H23/07) -	A/B	✓	✓			Check Mode
Mira	'11/07 (H23/07) -	ITC	✓	✓	✓	✓	
Mira	'11/07 (H23/07) -	KFS	✓	✓	✓	✓	
Mira (CNG)	'08/12 (H20/12) -	EFI	✓	✓	✓	✓	
Mira (CNG)	'08/12 (H20/12) -	EPS	✓	✓	✓		Check Mode, Signal Check
Mira (CNG)	'08/12 (H20/12) -	A/B	✓	✓			Check Mode
Mira Cocoa	'09/08 (H21/08) - '11/06 (H23/06)	EFI	✓	✓	✓	✓	
Mira Cocoa	'09/08 (H21/08) - '11/06 (H23/06)	CVT	✓	✓	✓	✓	
Mira Cocoa	'09/08 (H21/08) - '11/06 (H23/06)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Mira Cocoa	'09/08 (H21/08) - '11/06 (H23/06)	EPS	✓	✓	✓		Check Mode, Signal Check

Mira Cocoa	'09/08 (H21/08) - '11/06 (H23/06)	A/B	✓	✓			Check Mode
Mira Cocoa	'09/08 (H21/08) - '11/06 (H23/06)	ITC	✓	✓	✓	✓	
Mira Cocoa	'09/08 (H21/08) - '11/06 (H23/06)	KFS	✓	✓	✓	✓	
Mira Cocoa	'11/06 (H23/06) - '12/04 (H24/04)	EFI	✓	✓	✓	✓	
Mira Cocoa	'11/06 (H23/06) - '12/04 (H24/04)	CVT	✓	✓	✓	✓	
Mira Cocoa	'11/06 (H23/06) - '12/04 (H24/04)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira Cocoa	'11/06 (H23/06) - '12/04 (H24/04)	EPS	✓	✓	✓		Check Mode、 Signal Check
Mira Cocoa	'11/06 (H23/06) - '12/04 (H24/04)	A/B	✓	✓			Check Mode
Mira Cocoa	'11/06 (H23/06) - '12/04 (H24/04)	ITC	✓	✓	✓	✓	
Mira Cocoa	'11/06 (H23/06) - '12/04 (H24/04)	KFS	✓	✓	✓	✓	
Mira Cocoa	'12/04 (H24/04) -	EFI	✓	✓	✓	✓	
Mira Cocoa	'12/04 (H24/04) -	CVT	✓	✓	✓	✓	
Mira Cocoa	'12/04 (H24/04) -	eco IDLE	✓	✓	✓	✓	
Mira Cocoa	'12/04 (H24/04) -	ABS/VSC	✓	✓	✓	✓	Check Mode、 Signal Check
Mira Cocoa	'12/04 (H24/04) -	EPS	✓	✓	✓		Check Mode、 Signal Check
Mira Cocoa	'12/04 (H24/04) -	A/B	✓	✓			Check Mode
Mira Cocoa	'12/04 (H24/04) -	ITC	✓	✓	✓	✓	
Mira Cocoa	'12/04 (H24/04) -	KFS	✓	✓	✓	✓	
Mira Gino	'02/08 (H14/08) - '04/12 (H16/12)	EFI	✓	✓	✓	✓	
Mira Gino	'02/08 (H14/08) - '04/12 (H16/12)	A/T	✓	✓	✓	✓	
Mira Gino	'02/08 (H14/08) - '04/12 (H16/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira Gino	'02/08 (H14/08) - '04/12 (H16/12)	A/B	✓	✓			
Mira Gino	'02/08 (H14/08) - '04/12 (H16/12)	EFI	✓	✓	✓	✓	
Mira Gino	'02/08 (H14/08) - '04/12 (H16/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira Gino	'02/08 (H14/08) - '04/12 (H16/12)	A/B	✓	✓			
Mira Gino	'02/08 (H14/08) - '04/12 (H16/12)	EFI	✓	✓	✓	✓	
Mira Gino	'02/08 (H14/08) - '04/12 (H16/12)	ABS	✓	✓	✓	✓	
Mira Gino	'02/08 (H14/08) - '04/12 (H16/12)	A/B	✓	✓			
Mira Gino	'04/12 (H16/12) - '08/12 (H20/12)	EFI	✓	✓	✓	✓	
Mira Gino	'04/12 (H16/12) - '08/12 (H20/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Mira Gino	'04/12 (H16/12) - '08/12 (H20/12)	A/B	✓	✓			Check Mode
Mira-e:S	'11/09 (H23/09) -	EFI	✓	✓	✓	✓	
Mira-e:S	'11/09 (H23/09) -	CVT	✓	✓	✓	✓	
Mira-e:S	'11/09 (H23/09) -	eco IDLE	✓	✓	✓	✓	
Mira-e:S	'11/09 (H23/09) -	ABS/VSC	✓	✓	✓	✓	Check Mode、 Signal Check
Mira-e:S	'11/09 (H23/09) -	EPS	✓	✓	✓		Check Mode
Mira-e:S	'11/09 (H23/09) -	A/B	✓	✓			Check Mode
Mira-e:S	'11/09 (H23/09) -	ITC	✓	✓	✓	✓	
Mira-e:S	'11/09 (H23/09) -	KFS	✓	✓	✓	✓	

Mira-e:S	'11/09 (H23/09) -	Meter	✓	✓	✓	✓	
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	DVS	✓	✓	✓	✓	
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	A/T	✓	✓	✓	✓	
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	KFS	✓	✓	✓	✓	
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	CVT	✓	✓	✓		
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	DVS	✓	✓	✓	✓	
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	DVS	✓	✓	✓	✓	
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
MOVE	'00/10 (H12/10) - '01/06 (H13/06)	KFS	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	EFI	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	A/T	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	ABS	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	A/B	✓	✓			
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	KFS	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	EFI	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	CVT	✓	✓	✓		
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	ABS	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	DVS	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	A/B	✓	✓			
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	EFI	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	ABS	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	DVS	✓	✓	✓	✓	
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	A/B	✓	✓			
MOVE	'01/06 (H13/06) - '01/10 (H13/10)	KFS	✓	✓	✓	✓	

MOVE	'01/10(H13/10) - '02/10(H14/10)	EFI	√	√	√	√	
MOVE	'01/10(H13/10) - '02/10(H14/10)	A/T	√	√	√	√	
MOVE	'01/10(H13/10) - '02/10(H14/10)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'01/10(H13/10) - '02/10(H14/10)	A/B	√	√			
MOVE	'01/10(H13/10) - '02/10(H14/10)	KFS	√	√	√	√	
MOVE	'01/10(H13/10) - '02/10(H14/10)	EFI	√	√	√	√	
MOVE	'01/10(H13/10) - '02/10(H14/10)	CVT	√	√	√		
MOVE	'01/10(H13/10) - '02/10(H14/10)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'01/10(H13/10) - '02/10(H14/10)	DVS	√	√	√	√	
MOVE	'01/10(H13/10) - '02/10(H14/10)	A/B	√	√			
MOVE	'01/10(H13/10) - '02/10(H14/10)	EFI	√	√	√	√	
MOVE	'01/10(H13/10) - '02/10(H14/10)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'01/10(H13/10) - '02/10(H14/10)	DVS	√	√	√	√	
MOVE	'01/10(H13/10) - '02/10(H14/10)	A/B	√	√			
MOVE	'01/10(H13/10) - '02/10(H14/10)	KFS	√	√	√	√	
MOVE	'02/10(H14/10) - '04/12(H16/12)	EFI	√	√	√	√	
MOVE	'02/10(H14/10) - '04/12(H16/12)	A/T	√	√	√	√	
MOVE	'02/10(H14/10) - '04/12(H16/12)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'02/10(H14/10) - '04/12(H16/12)	DVS	√	√	√	√	Check Mode、 Signal Check
MOVE	'02/10(H14/10) - '04/12(H16/12)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	'02/10(H14/10) - '04/12(H16/12)	A/B	√	√			Check Mode
MOVE	'02/10(H14/10) - '04/12(H16/12)	KFS	√	√	√	√	
MOVE	'02/10(H14/10) - '04/12(H16/12)	EFI	√	√	√	√	
MOVE	'02/10(H14/10) - '04/12(H16/12)	CVT	√	√	√		
MOVE	'02/10(H14/10) - '04/12(H16/12)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'02/10(H14/10) - '04/12(H16/12)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	'02/10(H14/10) - '04/12(H16/12)	A/B	√	√			Check Mode
MOVE	'02/10(H14/10) - '04/12(H16/12)	KFS	√	√	√	√	
MOVE	'02/10(H14/10) - '04/12(H16/12)	EFI	√	√	√	√	
MOVE	'02/10(H14/10) - '04/12(H16/12)	A/T	√	√	√	√	
MOVE	'02/10(H14/10) - '04/12(H16/12)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'02/10(H14/10) - '04/12(H16/12)	DVS	√	√	√	√	Check Mode、 Signal Check

MOVE	'02/10(H14/10) - '04/12(H16/12)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	'02/10(H14/10) - '04/12(H16/12)	A/B	√	√			Check Mode
MOVE	'02/10(H14/10) - '04/12(H16/12)	KFS	√	√	√	√	
MOVE	'02/10(H14/10) - '04/12(H16/12)	ACC	√	√			
MOVE	'04/12(H16/12) - '06/10(H18/10)	EFI	√	√	√	√	
MOVE	'04/12(H16/12) - '06/10(H18/10)	A/T	√	√	√	√	
MOVE	'04/12(H16/12) - '06/10(H18/10)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'04/12(H16/12) - '06/10(H18/10)	DVS	√	√	√	√	Check Mode、 Signal Check
MOVE	'04/12(H16/12) - '06/10(H18/10)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	'04/12(H16/12) - '06/10(H18/10)	A/B	√	√			Check Mode
MOVE	'04/12(H16/12) - '06/10(H18/10)	KFS	√	√	√	√	
MOVE	'04/12(H16/12) - '06/10(H18/10)	EFI	√	√	√	√	
MOVE	'04/12(H16/12) - '06/10(H18/10)	A/T	√	√	√	√	
MOVE	'04/12(H16/12) - '06/10(H18/10)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'04/12(H16/12) - '06/10(H18/10)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	'04/12(H16/12) - '06/10(H18/10)	A/B	√	√			Check Mode
MOVE	'04/12(H16/12) - '06/10(H18/10)	KFS	√	√	√	√	
MOVE	'04/12(H16/12) - '06/10(H18/10)	CVT	√	√	√		
MOVE	'04/12(H16/12) - '06/10(H18/10)	EFI	√	√	√	√	
MOVE	'04/12(H16/12) - '06/10(H18/10)	A/T	√	√	√	√	
MOVE	'04/12(H16/12) - '06/10(H18/10)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'04/12(H16/12) - '06/10(H18/10)	DVS	√	√	√	√	Check Mode、 Signal Check
MOVE	'04/12(H16/12) - '06/10(H18/10)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	'04/12(H16/12) - '06/10(H18/10)	A/B	√	√			Check Mode
MOVE	'04/12(H16/12) - '06/10(H18/10)	KFS	√	√	√	√	
MOVE	'04/12(H16/12) - '06/10(H18/10)	ACC	√	√			
MOVE	'06/10(H18/10) - '08/12(H20/12)	EFI	√	√	√	√	
MOVE	'06/10(H18/10) - '08/12(H20/12)	CVT	√	√	√	√	
MOVE	'06/10(H18/10) - '08/12(H20/12)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'06/10(H18/10) - '08/12(H20/12)	VSC	√	√	√	√	Check Mode、 Signal Check
MOVE	'06/10(H18/10) - '08/12(H20/12)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	'06/10(H18/10) - '08/12(H20/12)	A/B	√	√			Check Mode

MOVE	'06/10 (H18/10) - '08/12 (H20/12)	ITC	√	√	√	√	
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	KFS	√	√	√	√	
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	Power Supply	√	√	√	√	
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	ACC	√	√			
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	PSB-D	√	√	√	√	
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	PSB-P	√	√	√	√	
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	IMG	√	√	√		
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	EFI	√	√	√	√	
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	CVT	√	√	√	√	
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	ABS	√	√	√	√	Check Mode, Signal Check
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	EPS	√	√	√		Check Mode, Signal Check
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	A/B	√	√			Check Mode
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	ITC	√	√	√	√	
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	KFS	√	√	√	√	
MOVE	'06/10 (H18/10) - '08/12 (H20/12)	Power Supply	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	EFI	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	CVT	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	ABS	√	√	√	√	Check Mode, Signal Check
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	VSC	√	√	√	√	Check Mode, Signal Check
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	EPS	√	√	√		Check Mode, Signal Check
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	A/B	√	√			Check Mode
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	ITC	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	KFS	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	ACC	√	√			
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	PSB-D	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	PSB-P	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	IMG	√	√	√		
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	Power Supply	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	EFI	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	CVT	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	ABS	√	√	√	√	Check Mode, Signal Check
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	EPS	√	√	√		Check Mode, Signal Check

MOVE	'08/12 (H20/12) - '09/12 (H21/12)	A/B	√	√			Check Mode
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	ITC	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	KFS	√	√	√	√	
MOVE	'08/12 (H20/12) - '09/12 (H21/12)	Power Supply	√	√	√	√	
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	EFI	√	√	√	√	
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	CVT	√	√	√	√	
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	A/B	√	√			Check Mode
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	ITC	√	√	√	√	
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	KFS	√	√	√	√	
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	Power Supply	√	√	√	√	
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	EFI	√	√	√	√	
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	CVT	√	√	√	√	
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	A/B	√	√			Check Mode
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	ITC	√	√	√	√	
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	KFS	√	√	√	√	
MOVE	'09/12 (H21/12) - '10/12 (H22/12)	Power Supply	√	√	√	√	
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	EFI	√	√	√	√	
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	CVT	√	√	√	√	
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	eco IDLE	√	√	√	√	
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	ABS/VSC	√	√	√	√	Check Mode、 Signal Check
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	A/B	√	√			Check Mode
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	ITC	√	√	√	√	
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	PSB-D	√	√	√	√	
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	PSB-P	√	√	√	√	
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	Meter	√	√	√	√	
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	DSS	√	√	√		
MOVE	'10/12 (H22/12) - '11/08 (H23/08)	KFS	√	√	√	√	

MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	EFI	√	√	√	√	
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	CVT	√	√	√	√	
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	eco IDLE	√	√	√	√	
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	ABS/VSC	√	√	√	√	Check Mode、 Signal Check
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	A/B	√	√			Check Mode
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	ITC	√	√	√	√	
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	KFS	√	√	√	√	
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	PSB-D	√	√	√	√	
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	PSB-P	√	√	√	√	
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	Meter	√	√	√	√	
MOVE	' 10/12 (H22/12) - ' 11/08 (H23/08)	DSS	√	√	√		
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	EFI	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	CVT	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	eco IDLE	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	ABS/VSC	√	√	√	√	Check Mode、 Signal Check
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	A/B	√	√			Check Mode
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	ITC	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	PSB-D	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	PSB-P	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	Meter	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	DSS	√	√	√		
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	KFS	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	EFI	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	CVT	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	eco IDLE	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	ABS/VSC	√	√	√	√	Check Mode、 Signal Check
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	EPS	√	√	√		Check Mode、 Signal Check
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	A/B	√	√			Check Mode
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	ITC	√	√	√	√	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	KFS	√	√	√	√	

MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	PSB-D	✓	✓	✓	✓	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	PSB-P	✓	✓	✓	✓	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	Meter	✓	✓	✓	✓	
MOVE	' 11/08 (H23/08) - ' 11/11 (H23/11)	DSS	✓	✓	✓		
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	EFI	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	CVT	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	eco IDLE	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	ABS/VSC	✓	✓	✓	✓	Check Mode、 Signal Check
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	EPS	✓	✓	✓		Check Mode、 Signal Check
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	A/B	✓	✓			Check Mode
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	ITC	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	Meter	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	KFS	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	EFI	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	CVT	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	ABS/VSC	✓	✓	✓	✓	Check Mode、 Signal Check
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	EPS	✓	✓	✓		Check Mode、 Signal Check
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	A/B	✓	✓			Check Mode
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	ITC	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	KFS	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	PSB-D	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	PSB-P	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	Meter	✓	✓	✓	✓	
MOVE	' 11/11 (H23/11) - ' 12/05 (H24/05)	DSS	✓	✓	✓		
MOVE	' 12/05 (H24/05) - ' 12/12 (H24/12)	EFI	✓	✓	✓	✓	
MOVE	' 12/05 (H24/05) - ' 12/12 (H24/12)	CVT	✓	✓	✓	✓	
MOVE	' 12/05 (H24/05) - ' 12/12 (H24/12)	eco IDLE	✓	✓	✓	✓	
MOVE	' 12/05 (H24/05) - ' 12/12 (H24/12)	ABS/VSC	✓	✓	✓	✓	Check Mode、 Signal Check
MOVE	' 12/05 (H24/05) - ' 12/12 (H24/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
MOVE	' 12/05 (H24/05) - ' 12/12 (H24/12)	A/B	✓	✓			Check Mode
MOVE	' 12/05 (H24/05) - ' 12/12 (H24/12)	ITC	✓	✓	✓	✓	
MOVE	' 12/05 (H24/05) - ' 12/12 (H24/12)	Meter	✓	✓	✓	✓	

MOVE	'12/05 (H24/05) - '12/12 (H24/12)	KFS	✓	✓	✓	✓	
MOVE	'12/05 (H24/05) - '12/12 (H24/12)	PSB-D	✓	✓	✓	✓	
MOVE	'12/05 (H24/05) - '12/12 (H24/12)	PSB-P	✓	✓	✓	✓	
MOVE	'12/05 (H24/05) - '12/12 (H24/12)	DSS	✓	✓	✓		
MOVE	'12/12 (H24/12) -	EFI	✓	✓	✓	✓	
MOVE	'12/12 (H24/12) -	CVT	✓	✓	✓	✓	
MOVE	'12/12 (H24/12) -	eco IDLE	✓	✓	✓	✓	
MOVE	'12/12 (H24/12) -	ABS/VSC	✓	✓	✓	✓	Check Mode、 Signal Check
MOVE	'12/12 (H24/12) -	EPS	✓	✓	✓		Check Mode、 Signal Check
MOVE	'12/12 (H24/12) -	A/B	✓	✓			Check Mode
MOVE	'12/12 (H24/12) -	ITC	✓	✓	✓	✓	
MOVE	'12/12 (H24/12) -	KFS	✓	✓	✓	✓	
MOVE	'12/12 (H24/12) -	Meter	✓	✓	✓	✓	
MOVE	'12/12 (H24/12) -	Auto Leveling	✓	✓	✓	✓	
MOVE	'12/12 (H24/12) -	PCB	✓	✓	✓		
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	EFI	✓	✓	✓	✓	
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	CVT	✓	✓	✓	✓	
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	A/B	✓	✓			Check Mode
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	ITC	✓	✓	✓	✓	
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	KFS	✓	✓	✓	✓	
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	EFI	✓	✓	✓	✓	
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	CVT	✓	✓	✓	✓	
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	A/B	✓	✓			Check Mode
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	ITC	✓	✓	✓	✓	
MOVE Conte	'08/08 (H20/08) - '09/12 (H21/12)	KFS	✓	✓	✓	✓	
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	EFI	✓	✓	✓	✓	
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	CVT	✓	✓	✓	✓	
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	EPS	✓	✓	✓		Check Mode、 Signal Check
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	A/B	✓	✓			Check Mode
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	ITC	✓	✓	✓	✓	
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	KFS	✓	✓	✓	✓	

MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	EFI	√	√	√	√	
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	CVT	√	√	√	√	
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	EPS	√	√	√		Check Mode、 Signal Check
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	A/B	√	√			Check Mode
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	ITC	√	√	√	√	
MOVE Conte	'09/12 (H21/12) - '11/06 (H23/06)	KFS	√	√	√	√	
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	EFI	√	√	√	√	
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	CVT	√	√	√	√	
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	eco IDLE	√	√	√	√	
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	ABS/VSC	√	√	√	√	Check Mode、 Signal Check
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	EPS	√	√	√		Check Mode、 Signal Check
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	A/B	√	√			Check Mode
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	ITC	√	√	√	√	
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	KFS	√	√	√	√	
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	ABS	√	√	√	√	
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	EFI	√	√	√	√	
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	CVT	√	√	√	√	
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	ABS	√	√	√	√	Check Mode、 Signal Check
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	EPS	√	√	√		Check Mode、 Signal Check
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	A/B	√	√			Check Mode
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	ITC	√	√	√	√	
MOVE Conte	'11/06 (H23/06) - '12/04 (H24/04)	KFS	√	√	√	√	
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	EFI	√	√	√	√	
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	CVT	√	√	√	√	
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	eco IDLE	√	√	√	√	
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	ABS/VSC	√	√	√	√	Check Mode、 Signal Check
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	EPS	√	√	√		Check Mode、 Signal Check
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	A/B	√	√			Check Mode
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	ITC	√	√	√	√	
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	KFS	√	√	√	√	
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	EFI	√	√	√	√	

MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	CVT	✓	✓	✓	✓	
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	EPS	✓	✓	✓		Check Mode, Signal Check
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	A/B	✓	✓			Check Mode
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	ITC	✓	✓	✓	✓	
MOVE Conte	'12/04 (H24/04) - '12/05 (H24/05)	KFS	✓	✓	✓	✓	
MOVE Conte	'12/05 (H24/05) -	EFI	✓	✓	✓	✓	
MOVE Conte	'12/05 (H24/05) -	CVT	✓	✓	✓	✓	
MOVE Conte	'12/05 (H24/05) -	eco IDLE	✓	✓	✓	✓	
MOVE Conte	'12/05 (H24/05) -	ABS/VSC	✓	✓	✓	✓	Check Mode, Signal Check
MOVE Conte	'12/05 (H24/05) -	EPS	✓	✓	✓		Check Mode, Signal Check
MOVE Conte	'12/05 (H24/05) -	A/B	✓	✓			Check Mode
MOVE Conte	'12/05 (H24/05) -	ITC	✓	✓	✓	✓	
MOVE Conte	'12/05 (H24/05) -	KFS	✓	✓	✓	✓	
MOVE Latte	'04/08 (H16/08) - '08/12 (H20/12)	EFI	✓	✓	✓	✓	
MOVE Latte	'04/08 (H16/08) - '08/12 (H20/12)	A/T	✓	✓	✓	✓	
MOVE Latte	'04/08 (H16/08) - '08/12 (H20/12)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
MOVE Latte	'04/08 (H16/08) - '08/12 (H20/12)	EPS	✓	✓	✓		Check Mode, Signal Check
MOVE Latte	'04/08 (H16/08) - '08/12 (H20/12)	A/B	✓	✓			Check Mode
MOVE Latte	'04/08 (H16/08) - '08/12 (H20/12)	EFI	✓	✓	✓	✓	
MOVE Latte	'04/08 (H16/08) - '08/12 (H20/12)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
MOVE Latte	'04/08 (H16/08) - '08/12 (H20/12)	EPS	✓	✓	✓		Check Mode, Signal Check
MOVE Latte	'04/08 (H16/08) - '08/12 (H20/12)	A/B	✓	✓			Check Mode
MOVE Latte	'04/08 (H16/08) - '08/12 (H20/12)	KFS	✓	✓	✓	✓	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	DVS	✓	✓	✓	✓	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
Naked	'00/10 (H12/10) - '01/06 (H13/06)	KFS	✓	✓	✓	✓	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	A/T	✓	✓	✓	✓	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	DVS	✓	✓	✓	✓	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
Naked	'00/10 (H12/10) - '01/06 (H13/06)	KFS	✓	✓	✓	✓	

Naked	'01/06 (H13/06) - '02/12 (H14/12)	EFI	✓	✓	✓	✓	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	A/T	✓	✓	✓	✓	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	ABS	✓	✓	✓	✓	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	DVS	✓	✓	✓	✓	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	A/B	✓	✓			
Naked	'01/06 (H13/06) - '02/12 (H14/12)	KFS	✓	✓	✓	✓	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	EFI	✓	✓	✓	✓	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	ABS	✓	✓	✓	✓	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	DVS	✓	✓	✓	✓	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	A/B	✓	✓			
Naked	'01/06 (H13/06) - '02/12 (H14/12)	KFS	✓	✓	✓	✓	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	EFI	✓	✓	✓	✓	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	A/T	✓	✓	✓	✓	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Naked	'02/12 (H14/12) - '04/04 (H16/04)	DVS	✓	✓	✓	✓	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	A/B	✓	✓			
Naked	'02/12 (H14/12) - '04/04 (H16/04)	KFS	✓	✓	✓	✓	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	EFI	✓	✓	✓	✓	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Naked	'02/12 (H14/12) - '04/04 (H16/04)	DVS	✓	✓	✓	✓	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	A/B	✓	✓			
Naked	'02/12 (H14/12) - '04/04 (H16/04)	KFS	✓	✓	✓	✓	
Opti	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
Opti	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	
Opti	'00/10 (H12/10) - '01/06 (H13/06)	DVS	✓	✓	✓	✓	
Opti	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
Opti	'00/10 (H12/10) - '01/06 (H13/06)	A/T	✓	✓	✓	✓	
Opti	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
Opti	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	
Opti	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
Opti	'00/10 (H12/10) - '01/06 (H13/06)	EFI	✓	✓	✓	✓	
Opti	'00/10 (H12/10) - '01/06 (H13/06)	CVT	✓	✓	✓		

Opti	'00/10 (H12/10) - '01/06 (H13/06)	ABS	✓	✓	✓	✓	
Opti	'00/10 (H12/10) - '01/06 (H13/06)	DVS	✓	✓	✓	✓	
Opti	'00/10 (H12/10) - '01/06 (H13/06)	A/B	✓	✓			
Opti	'01/06 (H13/06) - '02/08 (H14/08)	EFI	✓	✓	✓	✓	
Opti	'01/06 (H13/06) - '02/08 (H14/08)	A/T	✓	✓	✓	✓	
Opti	'01/06 (H13/06) - '02/08 (H14/08)	ABS	✓	✓	✓	✓	
Opti	'01/06 (H13/06) - '02/08 (H14/08)	DVS	✓	✓	✓	✓	
Opti	'01/06 (H13/06) - '02/08 (H14/08)	A/B	✓	✓			
Opti	'01/06 (H13/06) - '02/08 (H14/08)	EFI	✓	✓	✓	✓	
Opti	'01/06 (H13/06) - '02/08 (H14/08)	ABS	✓	✓	✓	✓	
Opti	'01/06 (H13/06) - '02/08 (H14/08)	A/B	✓	✓			
Opti	'01/06 (H13/06) - '02/08 (H14/08)	EFI	✓	✓	✓	✓	
Opti	'01/06 (H13/06) - '02/08 (H14/08)	CVT	✓	✓	✓		
Opti	'01/06 (H13/06) - '02/08 (H14/08)	ABS	✓	✓	✓	✓	
Opti	'01/06 (H13/06) - '02/08 (H14/08)	DVS	✓	✓	✓	✓	
Opti	'01/06 (H13/06) - '02/08 (H14/08)	A/B	✓	✓			
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	EFI	✓	✓	✓	✓	
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	CVT	✓	✓	✓	✓	
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	EPS	✓	✓	✓		Check Mode、 Signal Check
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	A/B	✓	✓			Check Mode
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	ITC	✓	✓	✓	✓	
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	KFS	✓	✓	✓	✓	
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	ACC	✓	✓			
Storia	'00/05 (H12/05) - '00/12 (H12/12)	EFI	✓	✓	✓	✓	
Storia	'00/05 (H12/05) - '00/12 (H12/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Storia	'00/05 (H12/05) - '00/12 (H12/12)	A/B	✓	✓			
Storia	'00/05 (H12/05) - '00/12 (H12/12)	KFS	✓	✓			
Storia	'00/05 (H12/05) - '00/12 (H12/12)	EFI	✓	✓	✓	✓	
Storia	'00/05 (H12/05) - '00/12 (H12/12)	A/T	✓	✓	✓	✓	
Storia	'00/05 (H12/05) - '00/12 (H12/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Storia	'00/05 (H12/05) - '00/12 (H12/12)	DVS	✓	✓	✓	✓	Check Mode、 Signal Check

Storia	'00/05 (H12/05) - '00/12 (H12/12)	A/B	✓	✓			
Storia	'00/05 (H12/05) - '00/12 (H12/12)	KFS	✓	✓			
Storia	'00/12 (H12/12) - '02/01 (H14/01)	EFI	✓	✓	✓	✓	
Storia	'00/12 (H12/12) - '02/01 (H14/01)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Storia	'00/12 (H12/12) - '02/01 (H14/01)	A/B	✓	✓			
Storia	'00/12 (H12/12) - '02/01 (H14/01)	KFS	✓	✓	✓	✓	
Storia	'00/12 (H12/12) - '02/01 (H14/01)	EFI	✓	✓	✓	✓	
Storia	'00/12 (H12/12) - '02/01 (H14/01)	A/T	✓	✓	✓	✓	
Storia	'00/12 (H12/12) - '02/01 (H14/01)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Storia	'00/12 (H12/12) - '02/01 (H14/01)	DVS	✓	✓	✓	✓	Check Mode, Signal Check
Storia	'00/12 (H12/12) - '02/01 (H14/01)	A/B	✓	✓			
Storia	'00/12 (H12/12) - '02/01 (H14/01)	KFS	✓	✓	✓	✓	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	EFI	✓	✓	✓	✓	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Storia	'02/01 (H14/01) - '02/08 (H14/08)	A/B	✓	✓			
Storia	'02/01 (H14/01) - '02/08 (H14/08)	KFS	✓	✓	✓	✓	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	EFI	✓	✓	✓	✓	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	A/T	✓	✓	✓	✓	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Storia	'02/01 (H14/01) - '02/08 (H14/08)	DVS	✓	✓	✓	✓	Check Mode, Signal Check
Storia	'02/01 (H14/01) - '02/08 (H14/08)	A/B	✓	✓			
Storia	'02/01 (H14/01) - '02/08 (H14/08)	KFS	✓	✓	✓	✓	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	EFI	✓	✓	✓	✓	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	A/T	✓	✓	✓	✓	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Storia	'02/01 (H14/01) - '02/08 (H14/08)	DVS	✓	✓	✓	✓	Check Mode, Signal Check
Storia	'02/01 (H14/01) - '02/08 (H14/08)	A/B	✓	✓			
Storia	'02/01 (H14/01) - '02/08 (H14/08)	KFS	✓	✓	✓	✓	
Storia	'02/08 (H14/08) -	EFI	✓	✓	✓	✓	
Storia	'02/08 (H14/08) -	ABS	✓	✓	✓	✓	Check Mode, Signal Check
Storia	'02/08 (H14/08) -	A/B	✓	✓			
Storia	'02/08 (H14/08) -	KFS	✓	✓	✓	✓	
Storia	'02/08 (H14/08) -	EFI	✓	✓	✓	✓	
Storia	'02/08 (H14/08) -	A/B	✓	✓			
Storia	'02/08 (H14/08) -	EFI	✓	✓	✓	✓	

Storia	'02/08 (H14/08) -	A/T	✓	✓	✓	✓	
Storia	'02/08 (H14/08) -	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Storia	'02/08 (H14/08) -	DVS	✓	✓	✓	✓	Check Mode、 Signal Check
Storia	'02/08 (H14/08) -	A/B	✓	✓			
Storia	'02/08 (H14/08) -	KFS	✓	✓	✓	✓	
Storia	'02/08 (H14/08) -	EFI	✓	✓	✓	✓	
Storia	'02/08 (H14/08) -	A/T	✓	✓	✓	✓	
Storia	'02/08 (H14/08) -	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Storia	'02/08 (H14/08) -	DVS	✓	✓	✓	✓	Check Mode、 Signal Check
Storia	'02/08 (H14/08) -	A/B	✓	✓			
Storia	'02/08 (H14/08) -	KFS	✓	✓	✓	✓	
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	EFI	✓	✓	✓	✓	
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	A/T	✓	✓	✓	✓	
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	A/B	✓	✓			Check Mode
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	EFI	✓	✓	✓	✓	
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	A/B	✓	✓			Check Mode
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	EFI	✓	✓	✓	✓	
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	A/T	✓	✓	✓	✓	
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	A/B	✓	✓			Check Mode
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	KFS	✓	✓	✓	✓	
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	EFI	✓	✓	✓	✓	
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	A/B	✓	✓			Check Mode
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	KFS	✓	✓	✓	✓	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	EFI	✓	✓	✓	✓	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	CVT	✓	✓	✓	✓	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	EPS	✓	✓	✓		Check Mode、 Signal Check

Tanto	'07/12 (H19/12) - '09/12 (H21/12)	A/B	✓	✓			Check Mode
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	ITC	✓	✓	✓	✓	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	KFS	✓	✓	✓	✓	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	EFI	✓	✓	✓	✓	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	CVT	✓	✓	✓	✓	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	A/B	✓	✓			Check Mode
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	ITC	✓	✓	✓	✓	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	KFS	✓	✓	✓	✓	
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	EFI	✓	✓	✓	✓	
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	CVT	✓	✓	✓	✓	
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	A/B	✓	✓			Check Mode
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	ITC	✓	✓	✓	✓	
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	KFS	✓	✓	✓	✓	
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	EFI	✓	✓	✓	✓	
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	CVT	✓	✓	✓	✓	
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	A/B	✓	✓			Check Mode
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	ITC	✓	✓	✓	✓	
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	KFS	✓	✓	✓	✓	
Tanto	'10/10 (H22/10) - '11/06 (H23/06)	EFI	✓	✓	✓	✓	
Tanto	'10/10 (H22/10) - '11/06 (H23/06)	CVT	✓	✓	✓	✓	
Tanto	'10/10 (H22/10) - '11/06 (H23/06)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	'10/10 (H22/10) - '11/06 (H23/06)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	'10/10 (H22/10) - '11/06 (H23/06)	A/B	✓	✓			Check Mode
Tanto	'10/10 (H22/10) - '11/06 (H23/06)	ITC	✓	✓	✓	✓	
Tanto	'10/10 (H22/10) - '11/06 (H23/06)	KFS	✓	✓	✓	✓	
Tanto	'10/10 (H22/10) - '11/06 (H23/06)	EFI	✓	✓	✓	✓	

Tanto	' 10/10 (H22/10) - ' 11/06 (H23/06)	CVT	✓	✓	✓	✓	
Tanto	' 10/10 (H22/10) - ' 11/06 (H23/06)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	' 10/10 (H22/10) - ' 11/06 (H23/06)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	' 10/10 (H22/10) - ' 11/06 (H23/06)	A/B	✓	✓			Check Mode
Tanto	' 10/10 (H22/10) - ' 11/06 (H23/06)	ITC	✓	✓	✓	✓	
Tanto	' 10/10 (H22/10) - ' 11/06 (H23/06)	KFS	✓	✓	✓	✓	
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	EFI	✓	✓	✓	✓	
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	CVT	✓	✓	✓	✓	
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	A/B	✓	✓			Check Mode
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	ITC	✓	✓	✓	✓	
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	KFS	✓	✓	✓	✓	
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	EFI	✓	✓	✓	✓	
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	CVT	✓	✓	✓	✓	
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	A/B	✓	✓			Check Mode
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	ITC	✓	✓	✓	✓	
Tanto	' 11/06 (H23/06) - ' 11/12 (H23/12)	KFS	✓	✓	✓	✓	
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	EFI	✓	✓	✓	✓	
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	CVT	✓	✓	✓	✓	
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	eco IDLE	✓	✓	✓	✓	
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	ABS/VSC	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	A/B	✓	✓			Check Mode
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	ITC	✓	✓	✓	✓	
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	KFS	✓	✓	✓	✓	
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	EFI	✓	✓	✓	✓	
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	CVT	✓	✓	✓	✓	
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	EPS	✓	✓	✓		Check Mode、 Signal Check

Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	A/B	✓	✓			Check Mode
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	ITC	✓	✓	✓	✓	
Tanto	' 11/12 (H23/12) - ' 12/05 (H24/05)	KFS	✓	✓	✓	✓	
Tanto	' 12/05 (H24/05) -	EFI	✓	✓	✓	✓	
Tanto	' 12/05 (H24/05) -	CVT	✓	✓	✓	✓	
Tanto	' 12/05 (H24/05) -	eco IDLE	✓	✓	✓	✓	
Tanto	' 12/05 (H24/05) -	ABS/VSC	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto	' 12/05 (H24/05) -	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto	' 12/05 (H24/05) -	A/B	✓	✓			Check Mode
Tanto	' 12/05 (H24/05) -	ITC	✓	✓	✓	✓	
Tanto	' 12/05 (H24/05) -	KFS	✓	✓	✓	✓	
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	EFI	✓	✓	✓	✓	
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	CVT	✓	✓	✓	✓	
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	A/B	✓	✓			Check Mode
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	ITC	✓	✓	✓	✓	
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	KFS	✓	✓	✓	✓	
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	EFI	✓	✓	✓	✓	
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	CVT	✓	✓	✓	✓	
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	A/B	✓	✓			Check Mode
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	ITC	✓	✓	✓	✓	
Tanto Exe	' 09/12 (H21/12) - ' 11/07 (H23/07)	KFS	✓	✓	✓	✓	
Tanto Exe	' 11/06 (H23/06) - ' 11/12 (H23/12)	EFI	✓	✓	✓	✓	
Tanto Exe	' 11/06 (H23/06) - ' 11/12 (H23/12)	CVT	✓	✓	✓	✓	
Tanto Exe	' 11/06 (H23/06) - ' 11/12 (H23/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto Exe	' 11/06 (H23/06) - ' 11/12 (H23/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto Exe	' 11/06 (H23/06) - ' 11/12 (H23/12)	A/B	✓	✓			Check Mode
Tanto Exe	' 11/06 (H23/06) - ' 11/12 (H23/12)	ITC	✓	✓	✓	✓	
Tanto Exe	' 11/06 (H23/06) - ' 11/12 (H23/12)	KFS	✓	✓	✓	✓	
Tanto Exe	' 11/06 (H23/06) - ' 11/12 (H23/12)	EFI	✓	✓	✓	✓	
Tanto Exe	' 11/06 (H23/06) - ' 11/12 (H23/12)	CVT	✓	✓	✓	✓	
Tanto Exe	' 11/06 (H23/06) - ' 11/12 (H23/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check

Tanto Exe	'11/06 (H23/06) - '11/12 (H23/12)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto Exe	'11/06 (H23/06) - '11/12 (H23/12)	A/B	✓	✓			Check Mode
Tanto Exe	'11/06 (H23/06) - '11/12 (H23/12)	ITC	✓	✓	✓	✓	
Tanto Exe	'11/06 (H23/06) - '11/12 (H23/12)	KFS	✓	✓	✓	✓	
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	EFI	✓	✓	✓	✓	
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	CVT	✓	✓	✓	✓	
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	eco IDLE	✓	✓	✓	✓	
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	ABS/VSC	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	A/B	✓	✓			Check Mode
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	ITC	✓	✓	✓	✓	
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	KFS	✓	✓	✓	✓	
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	EFI	✓	✓	✓	✓	
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	CVT	✓	✓	✓	✓	
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	A/B	✓	✓			Check Mode
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	ITC	✓	✓	✓	✓	
Tanto Exe	'11/12 (H23/12) - '12/05 (H24/05)	KFS	✓	✓	✓	✓	
Tanto Exe	'12/05 (H24/05) -	EFI	✓	✓	✓	✓	
Tanto Exe	'12/05 (H24/05) -	CVT	✓	✓	✓	✓	
Tanto Exe	'12/05 (H24/05) -	eco IDLE	✓	✓	✓	✓	
Tanto Exe	'12/05 (H24/05) -	ABS/VSC	✓	✓	✓	✓	Check Mode、 Signal Check
Tanto Exe	'12/05 (H24/05) -	EPS	✓	✓	✓		Check Mode、 Signal Check
Tanto Exe	'12/05 (H24/05) -	A/B	✓	✓			Check Mode
Tanto Exe	'12/05 (H24/05) -	ITC	✓	✓	✓	✓	
Tanto Exe	'12/05 (H24/05) -	KFS	✓	✓	✓	✓	
Terios	'00/05 (H12/05) - '05/12 (H17/12)	EFI	✓	✓	✓	✓	
Terios	'00/05 (H12/05) - '05/12 (H17/12)	A/T	✓	✓	✓	✓	
Terios	'00/05 (H12/05) - '05/12 (H17/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Terios	'00/05 (H12/05) - '05/12 (H17/12)	EPS	✓	✓	✓		Check Mode
Terios	'00/05 (H12/05) - '05/12 (H17/12)	A/B	✓	✓			
Terios	'00/05 (H12/05) - '05/12 (H17/12)	EFI	✓	✓	✓	✓	
Terios	'00/05 (H12/05) - '05/12 (H17/12)	A/T	✓	✓	✓	✓	
Terios	'00/05 (H12/05) - '05/12 (H17/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check

Terios	'00/05 (H12/05) - '05/12 (H17/12)	EPS	√	√	√		Check Mode
Terios	'00/05 (H12/05) - '05/12 (H17/12)	A/B	√	√			
Terios Kid	'10/07 (H22/07) -	EFI	√	√	√	√	
Terios Kid	'10/07 (H22/07) -	ABS	√	√	√	√	Check Mode, Signal Check
Terios Kid	'10/07 (H22/07) -	EPS	√	√	√		Check Mode, Signal Check
Terios Kid	'10/07 (H22/07) -	A/B	√	√			
Terios Kid	'10/07 (H22/07) -	KFS	√	√	√	√	
Terios Kid/Lucia	'00/11 (H12/11) - '01/11 (H13/11)	EFI	√	√	√	√	
Terios Kid/Lucia	'00/11 (H12/11) - '01/11 (H13/11)	ABS	√	√	√	√	Check Mode, Signal Check
Terios Kid/Lucia	'00/11 (H12/11) - '01/11 (H13/11)	A/B	√	√			
Terios Kid/Lucia	'00/11 (H12/11) - '01/11 (H13/11)	KFS	√	√	√	√	
Terios Kid/Lucia	'00/11 (H12/11) - '01/11 (H13/11)	EFI	√	√	√	√	
Terios Kid/Lucia	'00/11 (H12/11) - '01/11 (H13/11)	ABS	√	√	√	√	Check Mode, Signal Check
Terios Kid/Lucia	'00/11 (H12/11) - '01/11 (H13/11)	A/B	√	√			
Terios Kid/Lucia	'00/11 (H12/11) - '01/11 (H13/11)	KFS	√	√	√	√	
Terios Kid/Lucia	'01/11 (H13/11) - '10/07 (H22/07)	EFI	√	√	√	√	
Terios Kid/Lucia	'01/11 (H13/11) - '10/07 (H22/07)	ABS	√	√	√	√	Check Mode, Signal Check
Terios Kid/Lucia	'01/11 (H13/11) - '10/07 (H22/07)	EPS	√	√	√		Check Mode
Terios Kid/Lucia	'01/11 (H13/11) - '10/07 (H22/07)	A/B	√	√			
Terios Kid/Lucia	'01/11 (H13/11) - '10/07 (H22/07)	KFS	√	√	√	√	
Vigo	'06/01 (H18/01) - '10/07 (H22/07)	EFI	√	√	√	√	
Vigo	'06/01 (H18/01) - '10/07 (H22/07)	A/T	√	√	√	√	
Vigo	'06/01 (H18/01) - '10/07 (H22/07)	ABS	√	√	√	√	Check Mode, Signal Check
Vigo	'06/01 (H18/01) - '10/07 (H22/07)	VSC	√	√	√	√	Check Mode, Signal Check
Vigo	'06/01 (H18/01) - '10/07 (H22/07)	EPS	√	√	√		Check Mode, Signal Check
Vigo	'06/01 (H18/01) - '10/07 (H22/07)	A/B	√	√			Check Mode
Vigo	'06/01 (H18/01) - '10/07 (H22/07)	KFS	√	√	√	√	
Vigo	'10/07 (H22/07) -	EFI	√	√	√	√	
Vigo	'10/07 (H22/07) -	A/T	√	√	√	√	

Vigo	' 10/07 (H22/07) -	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
Vigo	' 10/07 (H22/07) -	VSC	✓	✓	✓	✓	Check Mode、 Signal Check
Vigo	' 10/07 (H22/07) -	EPS	✓	✓	✓		Check Mode、 Signal Check
Vigo	' 10/07 (H22/07) -	A/B	✓	✓			Check Mode
Vigo	' 10/07 (H22/07) -	KFS	✓	✓	✓	✓	
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	EFI	✓	✓	✓	✓	
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	A/B	✓	✓			
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	EFI	✓	✓	✓	✓	
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	A/T	✓	✓	✓	✓	
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	DVS	✓	✓	✓	✓	Check Mode、 Signal Check
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	A/B	✓	✓			
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	KFS	✓	✓			
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	EFI	✓	✓	✓	✓	
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	A/T	✓	✓	✓	✓	
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	DVS	✓	✓	✓	✓	Check Mode、 Signal Check
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	A/B	✓	✓			
YRV	' 00/08 (H12/08) - ' 00/12 (H12/12)	KFS	✓	✓			
YRV	' 00/12 (H12/12) -	EFI	✓	✓	✓	✓	
YRV	' 00/12 (H12/12) -	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
YRV	' 00/12 (H12/12) -	A/B	✓	✓			
YRV	' 00/12 (H12/12) -	EFI	✓	✓	✓	✓	
YRV	' 00/12 (H12/12) -	A/T	✓	✓	✓	✓	
YRV	' 00/12 (H12/12) -	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
YRV	' 00/12 (H12/12) -	DVS	✓	✓	✓	✓	Check Mode、 Signal Check
YRV	' 00/12 (H12/12) -	A/B	✓	✓			
YRV	' 00/12 (H12/12) -	KFS	✓	✓	✓	✓	
YRV	' 00/12 (H12/12) -	EFI	✓	✓	✓	✓	
YRV	' 00/12 (H12/12) -	A/T	✓	✓	✓	✓	
YRV	' 00/12 (H12/12) -	ABS	✓	✓	✓	✓	Check Mode、 Signal Check
YRV	' 00/12 (H12/12) -	DVS	✓	✓	✓	✓	Check Mode、 Signal Check
YRV	' 00/12 (H12/12) -	A/B	✓	✓			
YRV	' 00/12 (H12/12) -	KFS	✓	✓	✓	✓	