

Immobiliser Function List

Software Version: 26.21

Automaker	Model	System	Function
LINCOLN	MKS	Smart key system	1. Read number of keys 2. Read security code 3. Add a key 4. Erase keys
LINCOLN	MKS	Smart key system	1. Erase smart keys 2. Program smart keys
LINCOLN	MKX	Smart key system	1. Erase smart keys 2. Program smart keys
LINCOLN	MKT	Smart key system	1. Erase smart keys 2. Program smart keys
LINCOLN	Aviator	Immobiliser	1. Current number of keys 2. All keys lost
LINCOLN	MKX 07-10	Immobiliser	1. Number of keys 2. Add a key 3. All keyslost
LINCOLN	MKZ 07-09	Immobiliser	1. Number of keys 2. Add a key 3. All keyslost
LINCOLN	Mark LT 05-07	Immobiliser	1. Number of keys
LINCOLN	Mark LT 08-09	Immobiliser	1. Number of keys 2. Add a key 3. All keyslost
LINCOLN	Town car 05-10	Immobiliser	1. Number of keys 2. Add a key 3. All keyslost
LINCOLN	Zephyr 07-	Immobiliser	1. Number of keys 2. Add a key 3. All keyslost

LINCOLN	Navigator 05-06	Immobiliser	1. Number of keys 2. Add a key 3. All keyslost
LINCOLN	Navigator 07-08	Immobiliser	1. Number of keys 2. Add a key 3. All keyslost
LINCOLN	Navigator 09-	Immobiliser	1. Number of keys 2. Add a key 3. All keys lost
LINCOLN	Other models	PCM Immobiliser(PWM)	1.Current number of keys 2.All keys lost
LINCOLN	Navigator	Remote	1.Program remote 2.Erase remote

XTOOL